



Bajaj Auto Limited

Akurdi Pune 411 035 India

Tel +91 20 27472851

Fax +91 20 27407385

www.bajajauto.com

Spare Parts Catalogue



Notice

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO. : 71112729

REV. 01 SEPT, 2017

Copy rights : All rights reserved. No part of this publicatin may be reproduced, stored in a retrival system, Or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.



Foreword

We have pleasure in presenting the Spare Parts Catalogue for 'Pulsar NS160' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Service Department
Akurdi, Pune 411 035 India



Instructions

1. **How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

2. **How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

3. **Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

4. **Abbreviations :** The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

pulsar
NS160

[illegible]

pulsar
NS160

[illegible]

Index

Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	SAI System	4
3	Cylinder Head	6
4	Valve	8
5	Camshaft / Tensioner	10
6	Cylinder and Piston	12
7	Crankshaft	14
8	Transmission	16
9	Change Drum / Shift Fork	18
10	Gear Change Mechanism	20
11	Crankcase LH	22
12	Engine Assembly / Crankcase RH	24
13	Balancer Idler Gear / Oil Pump Assembly	26
14	Cover Clutch	28
15	Cover Magneto	30
16	Clutch Assembly	32
17	Carburettor	34
18	Kick Starter Mechanism	36
19	Air Cleaner Complete	38
20	EVAP Mechanism	40
21	Silencer Assembly	42
22	Starter Assembly	44
23	Magneto, CDI & H.T. Coil	46
24	Seat Assembly / Seat Lock	48
25	Engine Mountings	50
26	Frame and Frame Fitting	52
27	Swing Arm / Rear Shock Absorber	54
28	Pillion Foot Rest / Holder	56
29	Mudguard - Front & Rear	58
30	Stand Assembly	60

Index

Plate No.	Description	Page No.
31	Tube / Tyre / Rim	62
32	Front Hub	64
33	Front Master Cylinder	66
34	Front Disc Brake	68
35	Rear Hub	70
36	Rear Brake Pedal	72
37	Handle Bar Assembly	74
38	Front Fork	76 - 78
39	Oil Cooler Assembly	80
40	Petrol Tank, Cap Tank & Gauge Fuel	82
41	Fittings - Petrol Tank Cover, Side Covers & Cover Seat	84 - 86
42	Meter Assembly	88
43	Control Cables	90
44	Chain Case	92
45	Head Lamp & Fairing	94
46	Indicator Light Assembly	96
47	Number Plate / Tail Lamp Assembly	98
48	Electrical Equipments	100
49	Tool Kit	102
50	Accessories / Grab Handle	104
51	Painted Parts and Decals	106 - 110
52	Consumable Parts	112 - 114
	Kits List	115 - 118
	Amendment Sheet (Parts Added)	119
	Amendment Sheet (Parts Deleted)	120
	Part Index	121

Pictorial Index

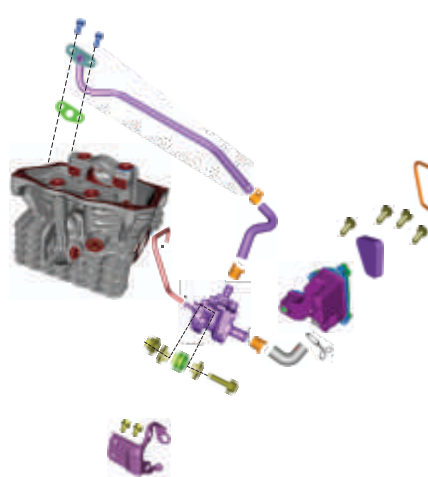
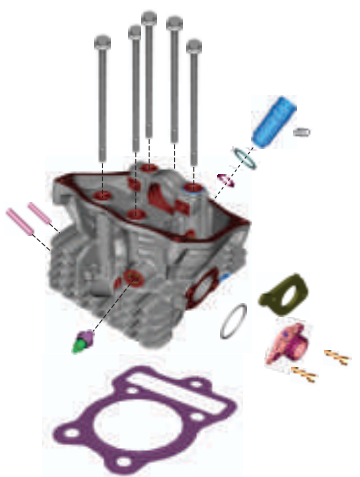
PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 1	PLATE NO. : 2 SAI SYSTEM	PAGE NO. 3
			

PLATE NO. : 3 CYLINDER HEAD	PAGE NO. 5	PLATE NO. : 4 VALVE	PAGE NO. 7
			

Pictorial Index

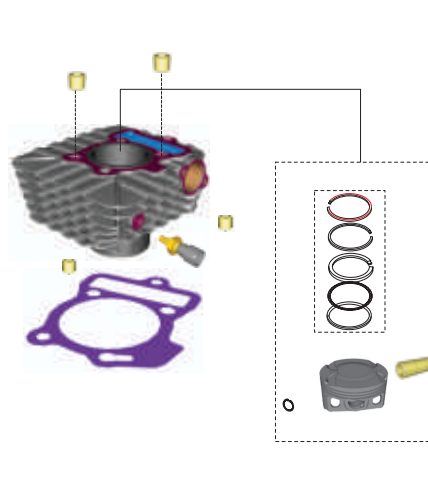
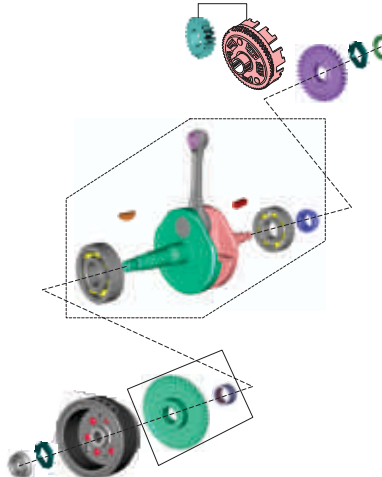
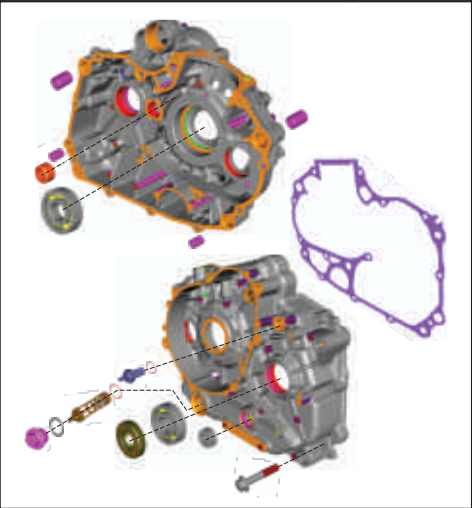
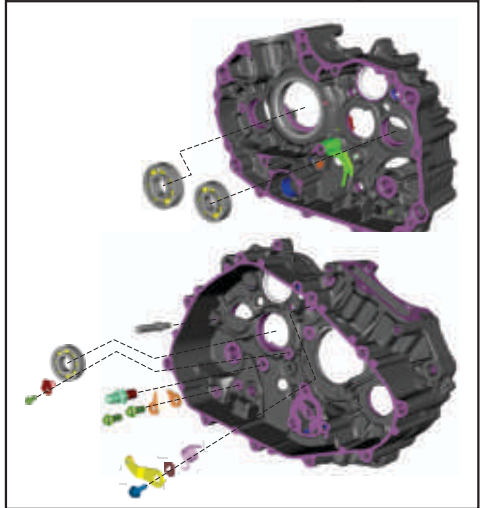
PLATE NO. : 5 CAMSHAFT / TENSIONER	PAGE NO. 9	PLATE NO. : 6 CYLINDER & PISTON	PAGE NO. 11
			

PLATE NO. : 7 CRANKSHAFT	PAGE NO. 13	PLATE NO. : 8 TRANSMISSION	PAGE NO. 15
			

Pictorial Index

PLATE NO. : 9 CHANGE DRUM / SHIFT FORK	PAGE NO. 17	PLATE NO. : 10 GEAR CHANGE MECHANISM	PAGE NO. 19
			
			

PLATE NO. : 11 CRANKCASE LH	PAGE NO. 21	PLATE NO. : 12 ENGINE ASSLY & CRANKCASE RH	PAGE NO. 23
			
			

Pictorial Index

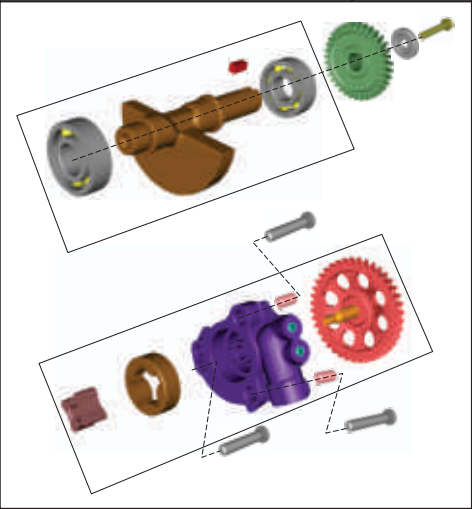
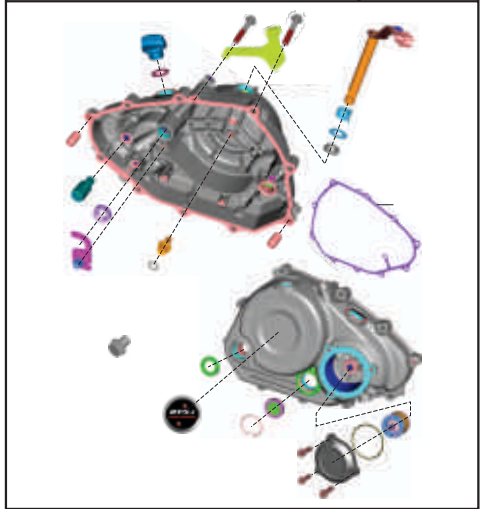
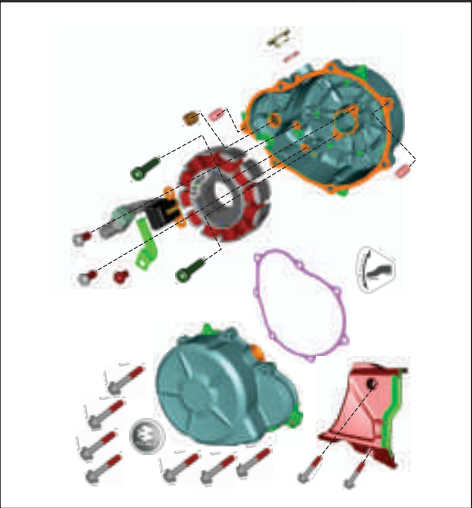
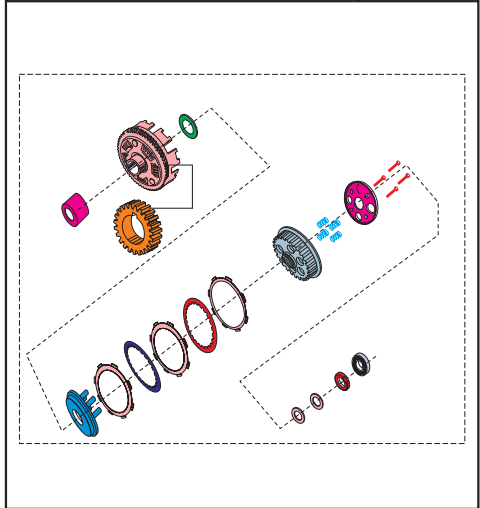
PLATE NO. : 13 BALANCER IDLER GEAR / OIL PUMP ASSEMBLY	PAGE NO. 25	PLATE NO. : 14 COVER CLUTCH	PAGE NO. 27
			
			

PLATE NO. : 15 COVER MAGNETO	PAGE NO. 29	PLATE NO. : 16 CLUTCH ASSEMBLY	PAGE NO. 31
			
			

Pictorial Index

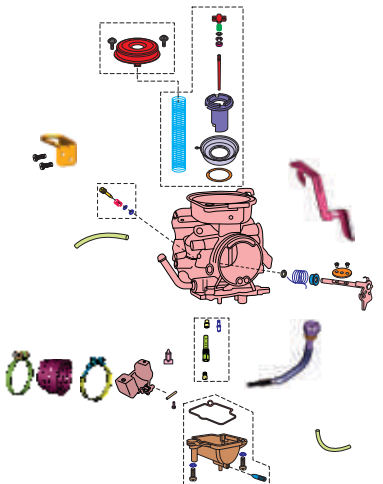
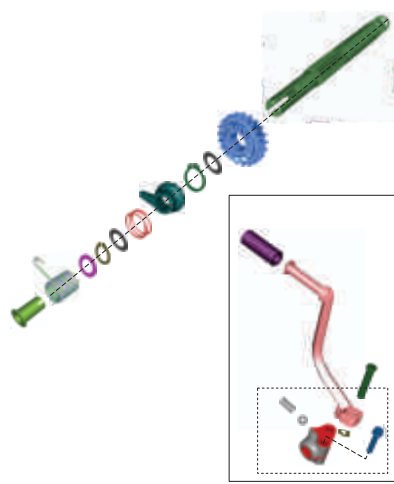
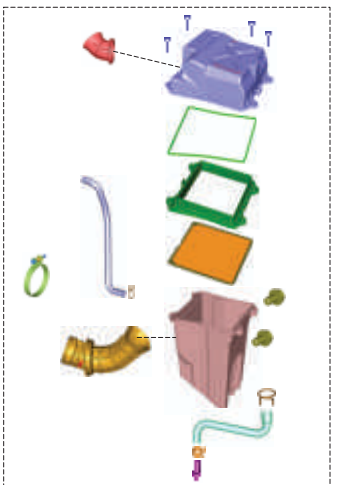
PLATE NO. : 17 CARBURETTOR	PAGE NO. 33	PLATE NO. : 18 KICK STARTER MECHANISM	PAGE NO. 35
			

PLATE NO. : 19 AIR CLEANER COMPLETE	PAGE NO. 37	PLATE NO. : 20 EVAP MECHANISM	PAGE NO. 39
			

Pictorial Index

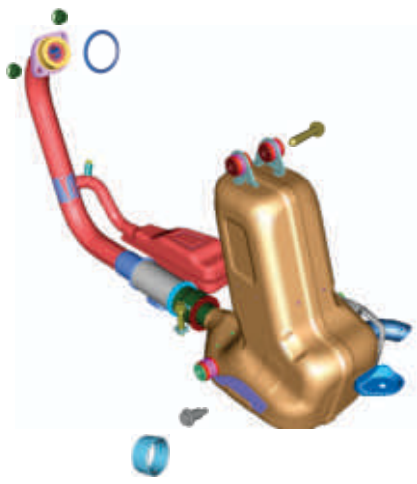
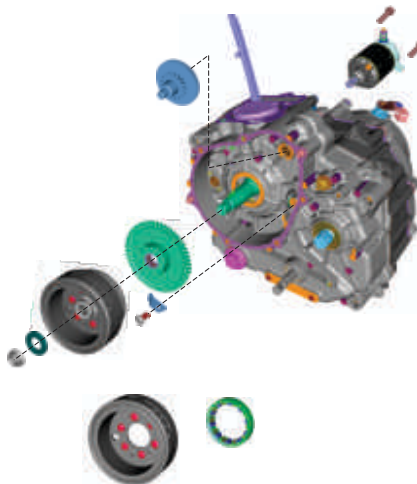
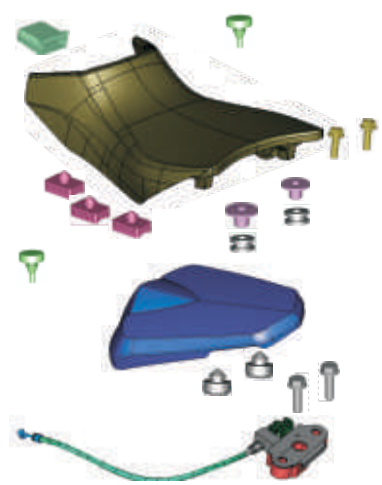
PLATE NO. : 21 SILENCER ASSEMBLY	PAGE NO. 41	PLATE NO. : 22 STARTER ASSEMBLY	PAGE NO. 43
			

PLATE NO. : 23 MAGNETO, CDI & H.T. COIL	PAGE NO. 45	PLATE NO. : 24 SEAT ASSEMBLY / SEAT LOCK	PAGE NO. 47
			

Pictorial Index

PLATE NO. : 25
ENGINE MOUNTINGS

PAGE NO.
49

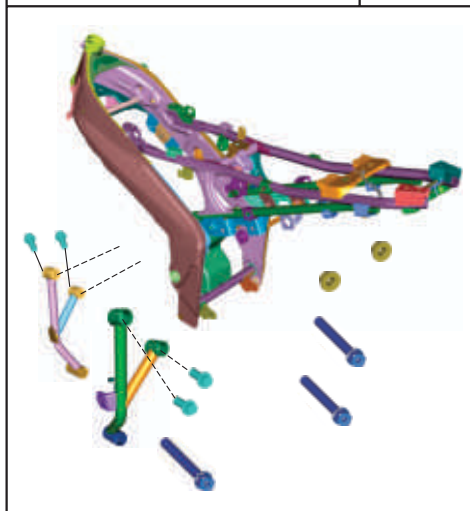


PLATE NO. : 26
FRAME AND FRAME FITTING

PAGE NO.
51

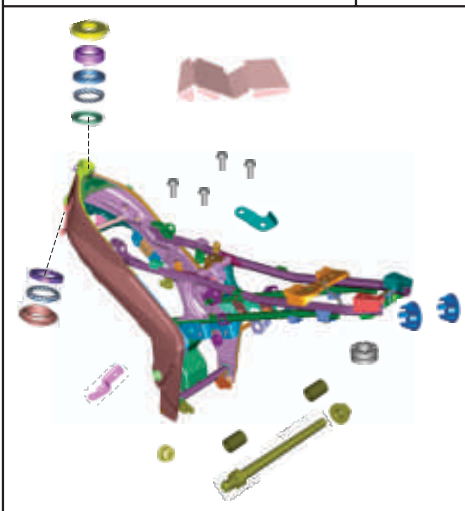


PLATE NO. : 27
SWING ARM / REAR SHOCK ABSORBER

PAGE NO.
53


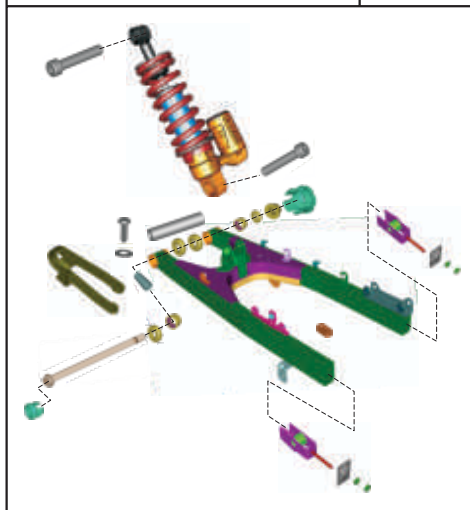


PLATE NO. : 28
PILLION FOOT REST / HOLDER

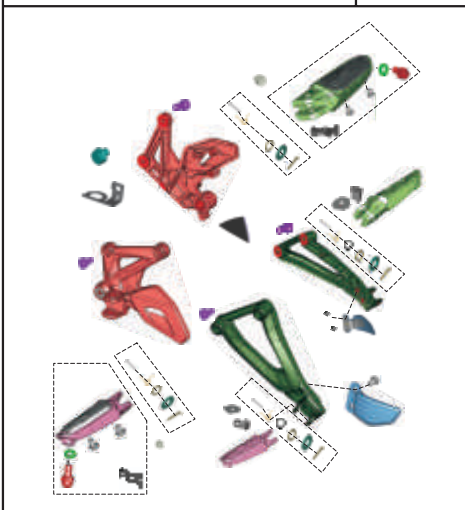PAGE NO.
55



Pictorial Index

PLATE NO. : 29
MUDGUARD - FRONT & REAR

PAGE NO.
57



PLATE NO. : 30
STAND ASSEMBLY

PAGE NO.
59

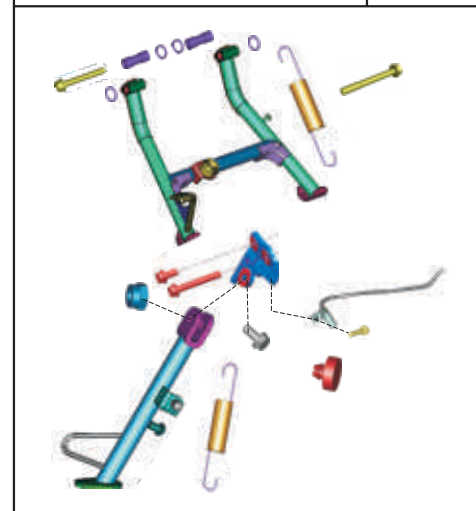



PLATE NO. : 31
TUBE / TYRE / RIM

PAGE NO.
61



PLATE NO. : 32
FRONT HUB

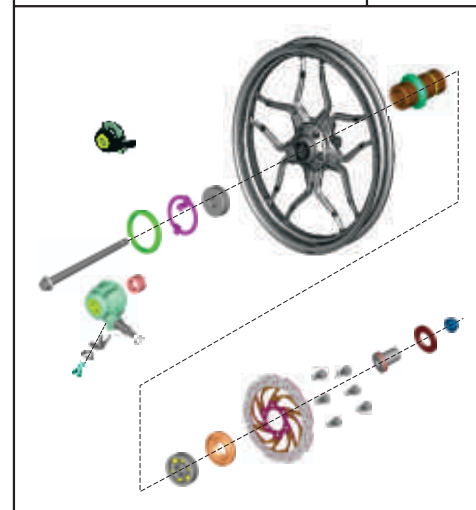PAGE NO.
63



Pictorial Index

PLATE NO. : 33
FRONT MASTER CYLINDER

PAGE NO.
65

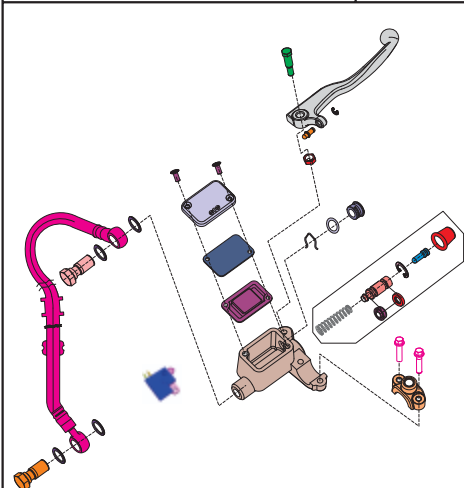


PLATE NO. : 34
FRONT DISC BRAKE

PAGE NO.
67

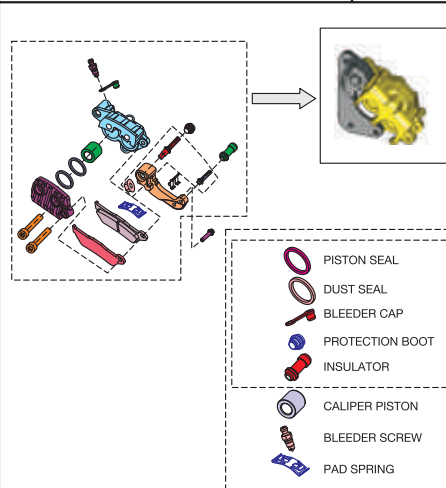


PLATE NO. : 35
REAR HUB

PAGE NO.
69



PLATE NO. : 36
REAR BRAKE PEDAL

PAGE NO.
71



Pictorial Index

PLATE NO. : 37
HANDLE BAR ASSEMBLY

PAGE NO.
73

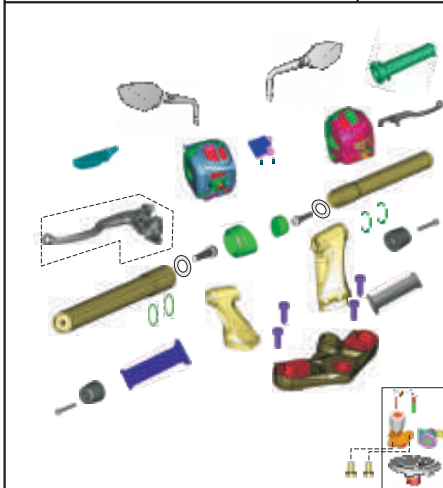


PLATE NO. : 38
FRONT FORK

PAGE NO.
75 - 77

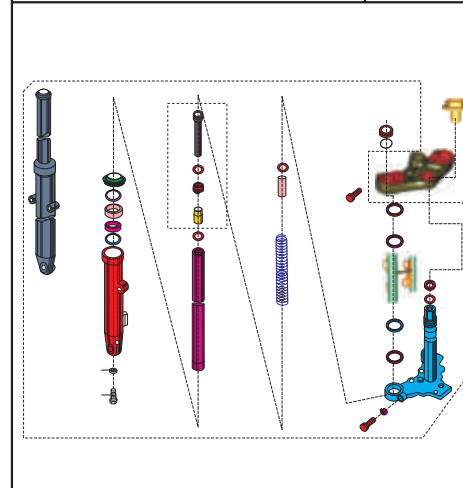


PLATE NO. : 39
OIL COOLER ASSEMBLY

PAGE NO.
79


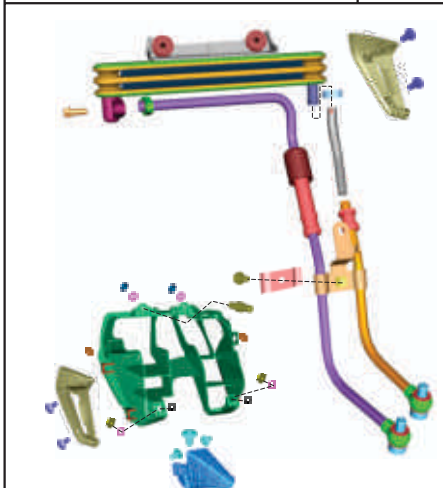


PLATE NO. : 40
PETROL TANK, CAP TANK &
GAUGE FUEL

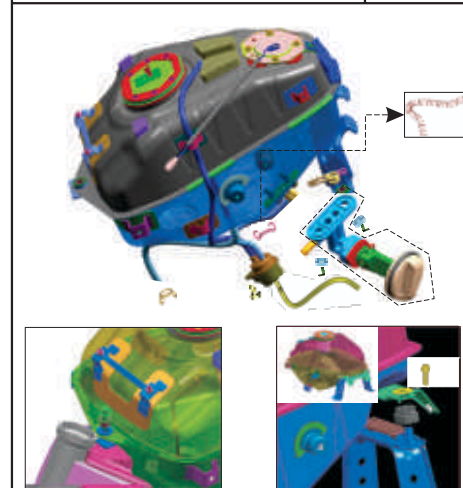PAGE NO.
81



Pictorial Index

PLATE NO. : 41
FITTINGS - PETROL TANK COVER,
SIDE COVERS & COVER SEAT

PAGE NO.
83 - 85



PLATE NO. : 42
METER ASSEMBLY

PAGE NO.
87




PLATE NO. : 43
CONTROL CABLES

PAGE NO.
89



PLATE NO. : 44
CHAIN CASE

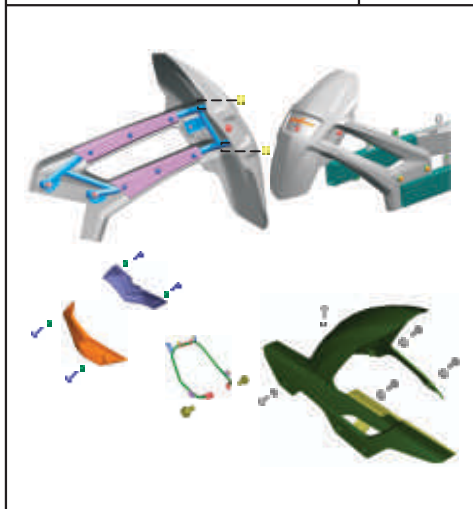PAGE NO.
91



Pictorial Index

PLATE NO. : 45
HEAD LAMP & FAIRING

PAGE NO.
93

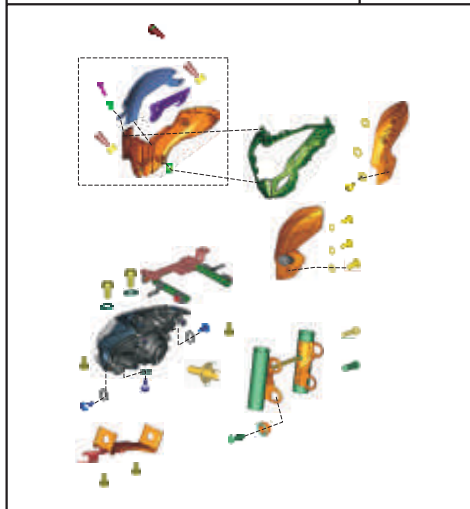


PLATE NO. : 46
INDICATOR LIGHT ASSEMBLY

PAGE NO.
95

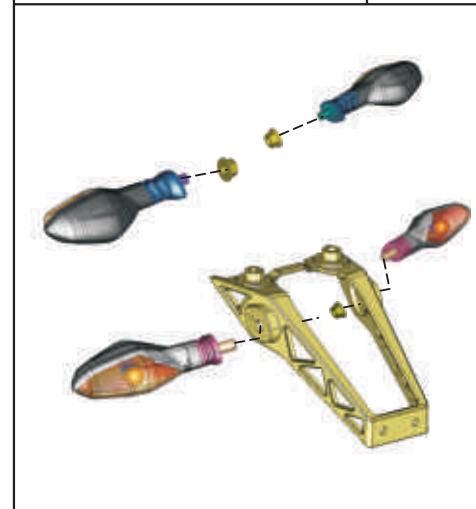


PLATE NO. : 47
NUMBER PLATE /
TAIL LAMP ASSEMBLY

PAGE NO.
97



PLATE NO. : 48
ELECTRICAL EQUIPMENTS

PAGE NO.
99



Pictorial Index

PLATE NO. : 49 TOOL KIT	PAGE NO. 101
	


PLATE NO. : 51 PAINTED PARTS AND DECALS	PAGE NO. 105 - 109
	
OIL COOLED 	

PLATE NO. : 52 CONSUMABLE PARTS	PAGE NO. 111 - 113												
<table border="1"><tr><td></td><td></td><td></td></tr><tr><td></td><td></td><td></td></tr><tr><td></td><td></td><td></td></tr><tr><td></td><td></td><td></td></tr></table>													
													
													
													
													

Pictorial Index


PLATE NO. : 52 CONSUMABLE PARTS	PAGE NO. 111 - 113		

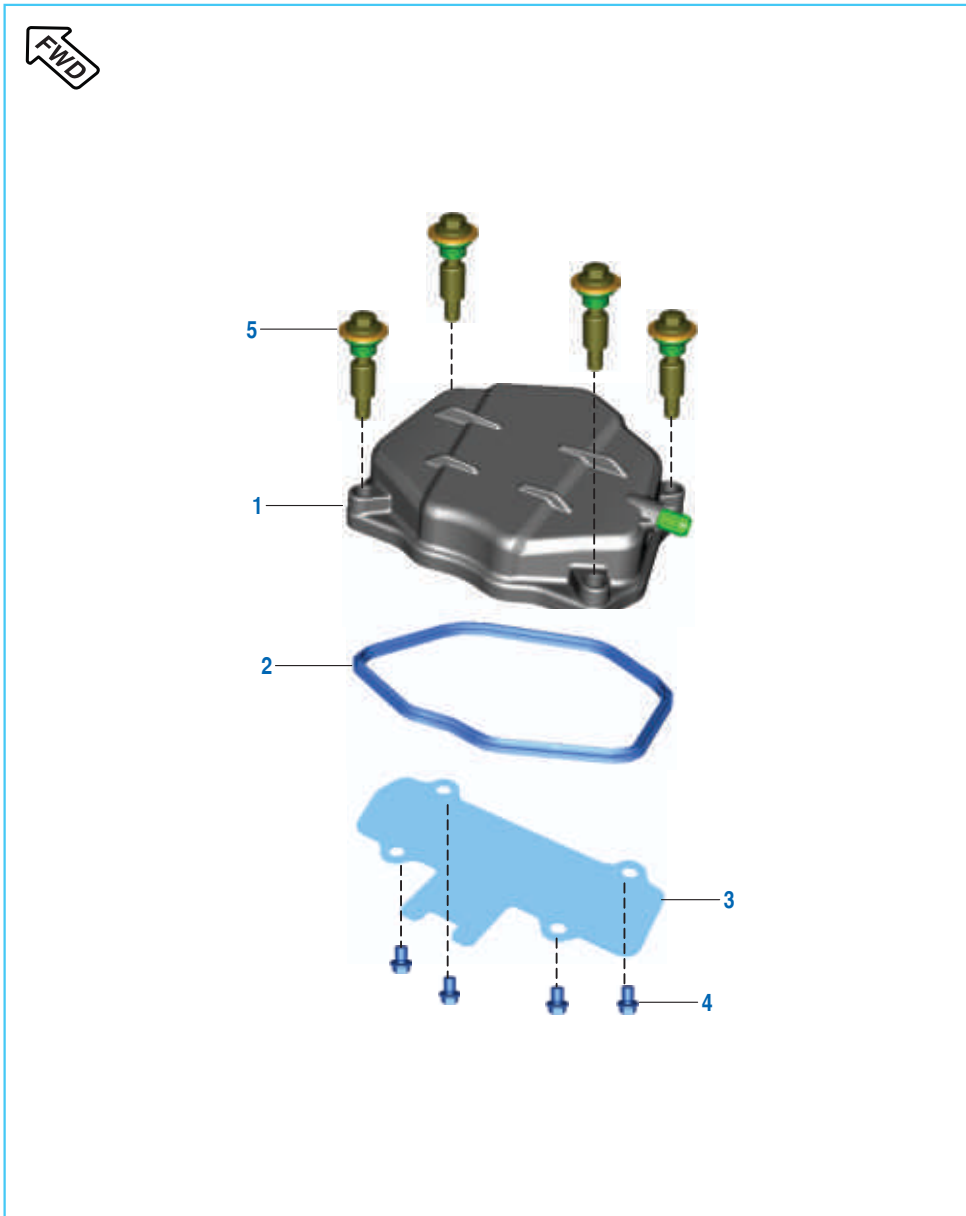Cover Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	52 JE00 74	Cover Cylinder Head	1	
2	JE 5110 38	Gasket Cover Cylinder Head	1	
3	JE 5110 40	Gasket Breather Head Cover	1	
4	LA E000 26	Bolt Flange Small	4	
5	JE 5110 53	Assembly Bolt Head Cover	4	

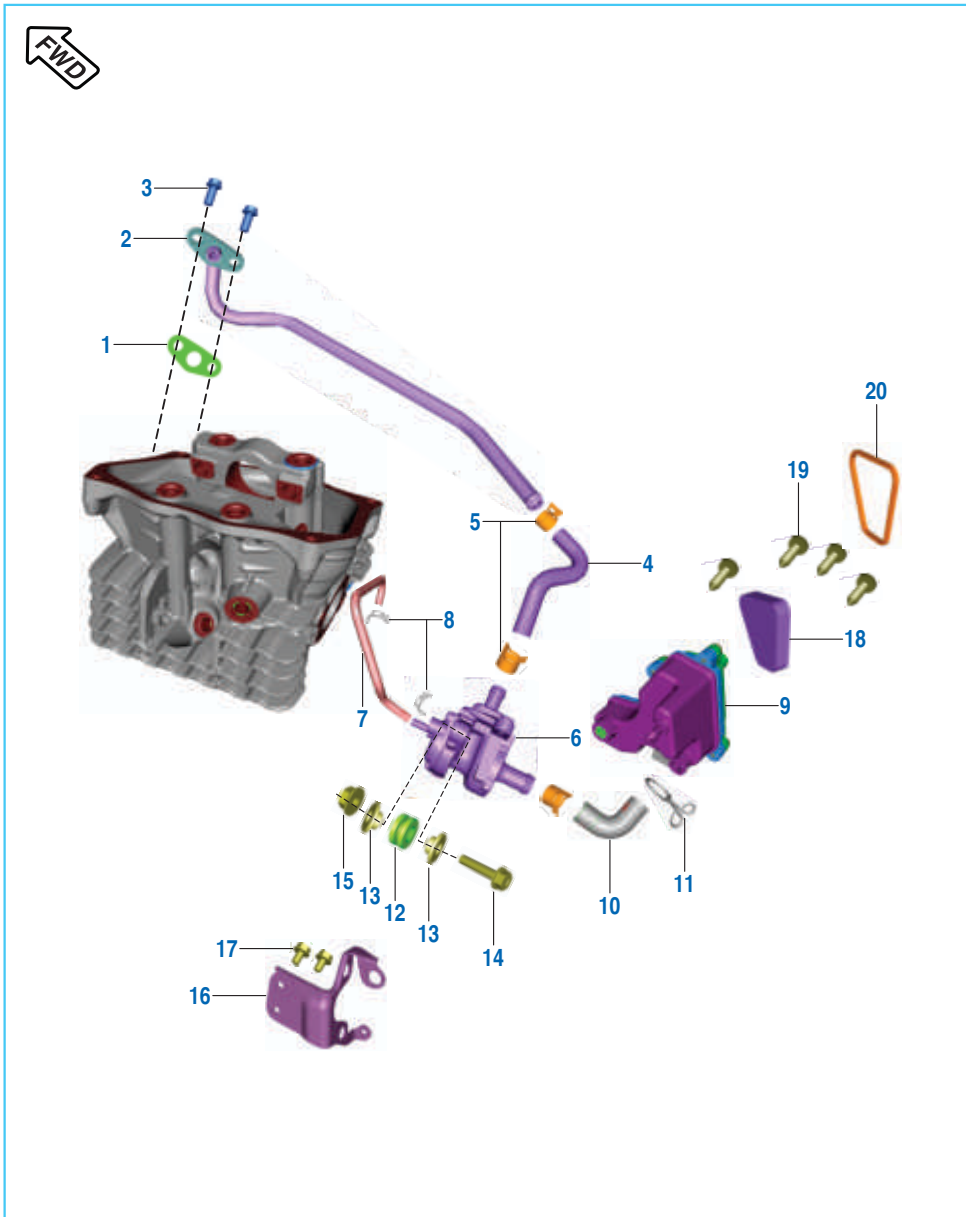SAI System




No.	Part No.	Description	Qty.	Remarks
1	JE 5110 78	Gasket SAI Flange	1	
2	JE 5811 07	Tube Outlet SAI	1	
3	KA EG06 14	Bolt Flanged Small	1	
4	JE 5810 60	Hose Connector SAI	1	
5	JL 5810 66	Clamp SAI Pipe	3	
6	JH 5822 00	Assembly SAI Unit	1	
7	JE 5810 55	Hose Pipe SAI Inlet	1	
8	DG 1210 03	Clamp	2	
9	JE 5810 75	Assembly Air Filter Secondary	1	
10	JE 5810 54	Hose Intake SAI	1	
11	JY 5810 28	Clamp	1	
12	JD 1138 14	Grommet Sai Unit	2	
13	JD 1138 15	Sleeve Sai Unit	4	
14	KA DF06 30	Bolt Flanged	2	
15	KC GF06 06	Nut Hex Flanged	2	
16	JF 1138 15	Bracket SAI Mtg. Loose	1	
17	KA DF06 10	Bolt Flanged	2	
18	JE 5810 76	Foam Element Secondary Air Filter	1	
19	KB RA48 19	Screw Tapping Pan Cross	4	
20	JE 5826 06	Seal Sai Filter	1	

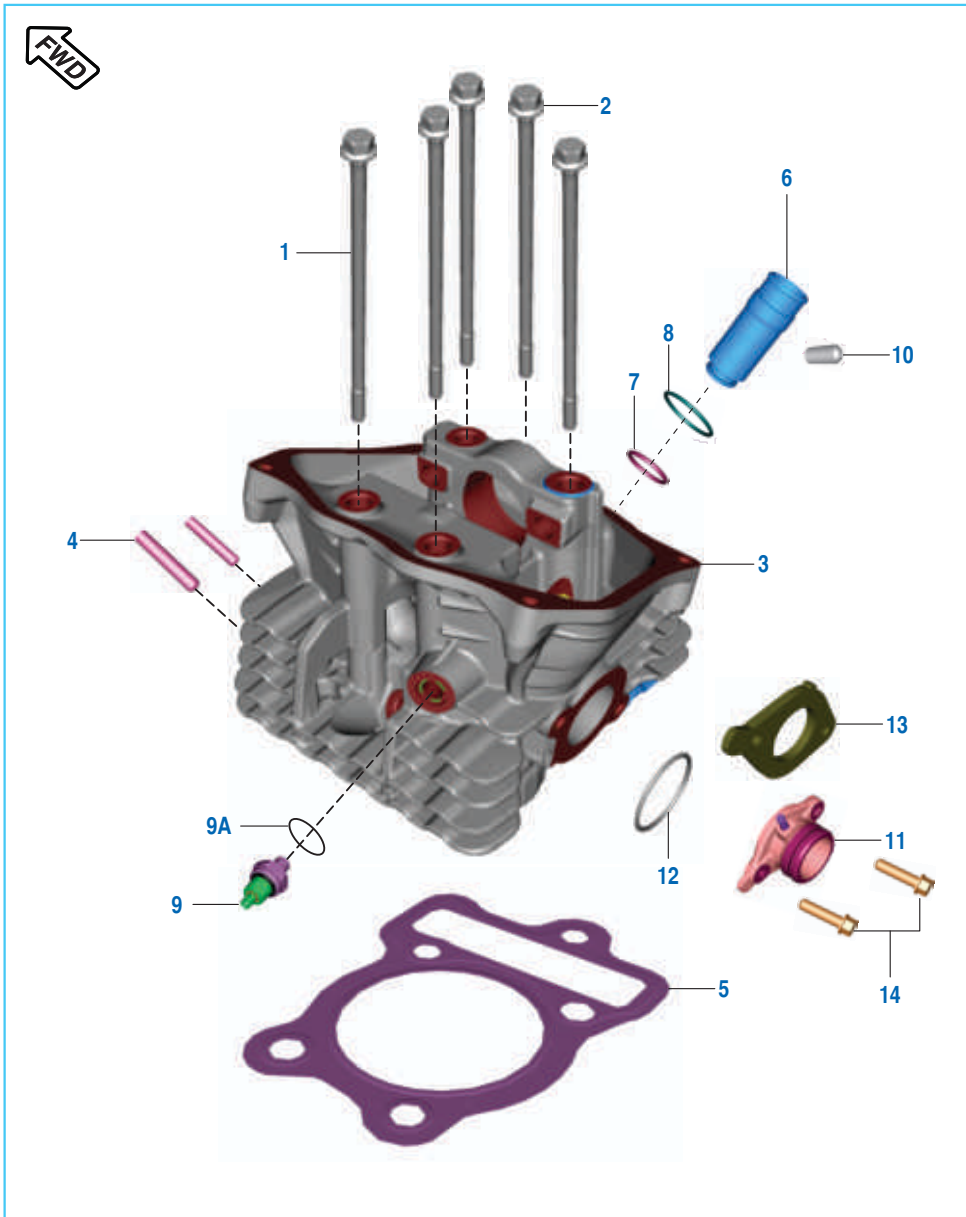Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	JE 5110 47	Bolt Cylinder Head K11	4	Refer Kit List
2	59 0400 50	Flanged Bolt M8 x 1 x 148L	1	
3	36 JF01 34	Kit Cylinder Head Assembly	1	
4	39 1660 05	Stud - M8	1	
5	JE 5110 85	Gasket Cylinder Head K11 UG	1	
6	JF 5110 52	Sleeve Spark Plug	1	N.I.
7	KJ AC18 24	'O' Ring Sleeve	1	
8	39 1283 21	'O' Ring Sleeve	1	
9	JE 3514 00	Oil Pressure Switch	1	
9A	DK 1013 40	O Ring Oil Pressure Switch	1	
10	39 2608 01	Grub Screw	1	
11	JE 5814 23	Assembly Manifold SAI	1	
12	LJ A000 10	Ring - O	1	
13	JE 5814 26	Insulator Manifold	1	
14	39 1674 04	Bolt M6 X 25 Silver Colour	2	
15	JL 4022 19	Pigtail Oil Pressure Switch	1	

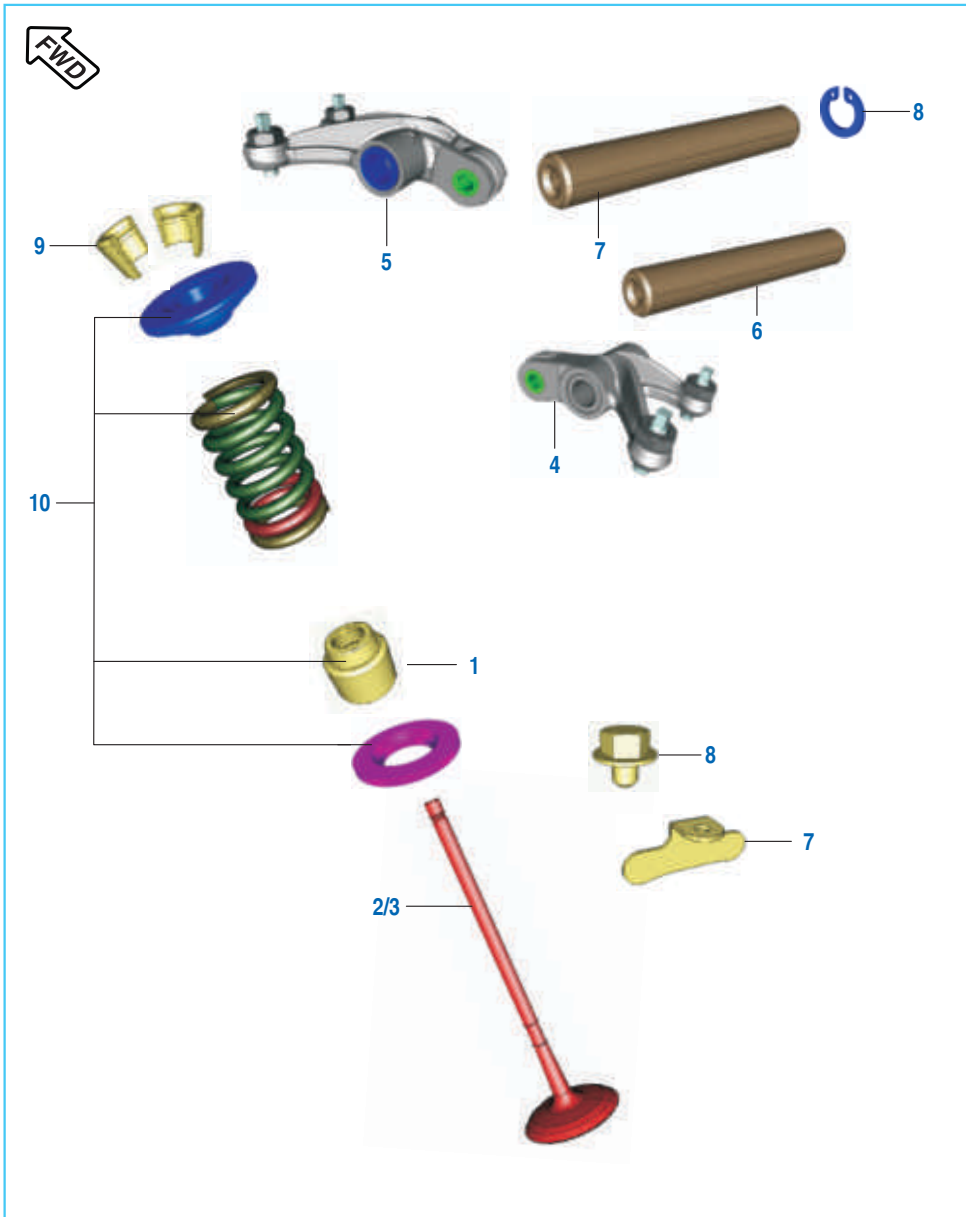Valve




No.	Part No.	Description	Qty.	Remarks
1	39 2017 19	Seal Valve Stem	4	
2	JE 5112 08	Valve Intake	2	
3	JE 5112 09	Valve Exhaust	2	
4	JE 5112 12	Assembly Intake Rocker Arm	1	
5	JE 5112 13	Assembly Exhaust Rocker Arm	1	
6	JE 5112 21	Shaft Rocker Intake	1	
7	JE 5112 25	Shaft Rocker Exhaust	1	
8	JE 5110 60	Circlip Internal	1	
9	DG 1010 29	Cotter Valve	8	
10	36 JF00 25	Kit Valve Repair	1	Refer Kit List

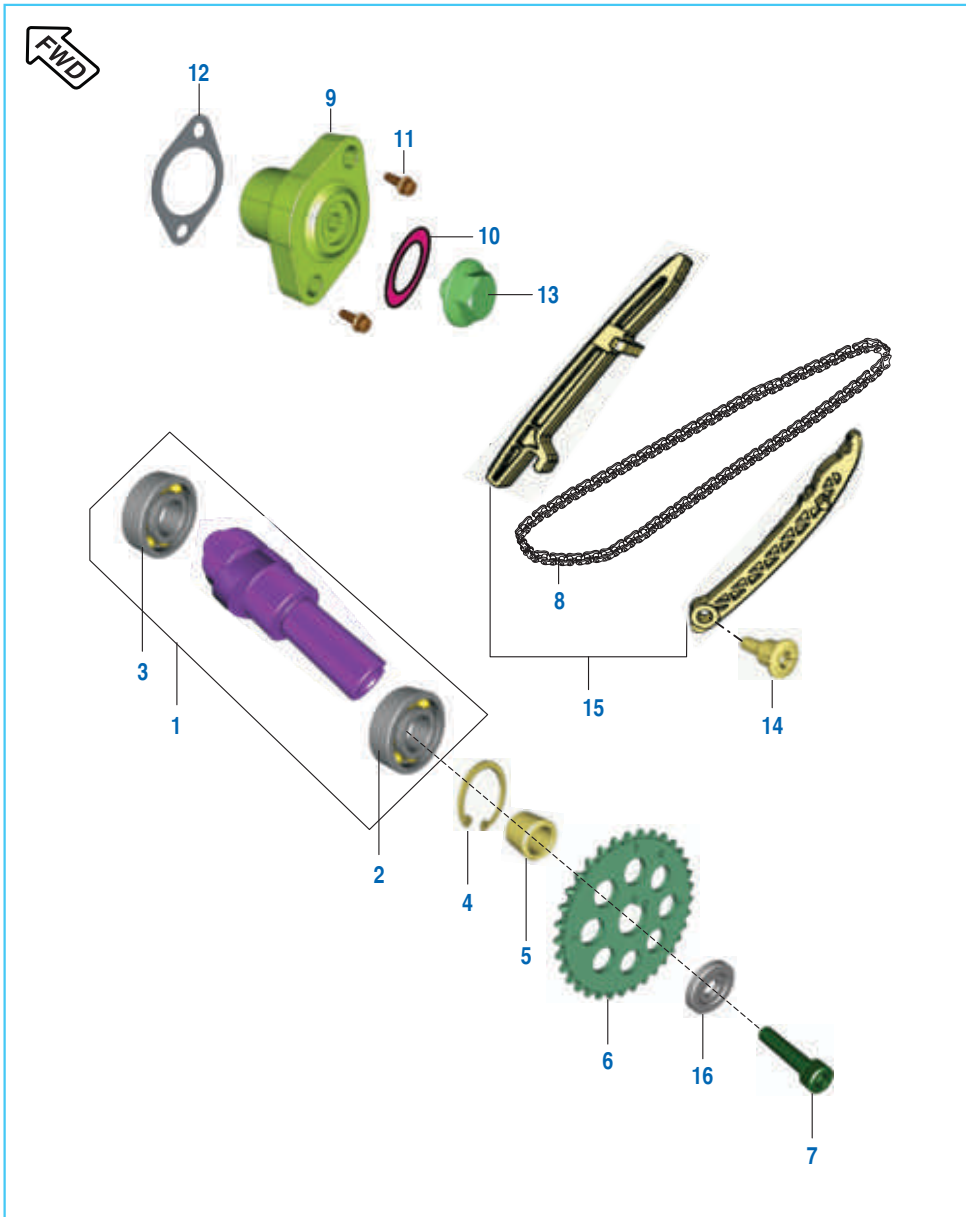Camshaft / Tensioner




No.	Part No.	Description	Qty.	Remarks
1	JE 5112 51	Assembly Camshaft	1	
2	JG 5312 20	Bearing - Ball 6202/HN3	1	
3	AP 1012 36	Bearing - Ball 12 X 28 X 8	1	
4	39 0594 17	Internal Circlip	1	
5	JE 5112 41	Spacer Cam (Silent Chain)	1	
6	JE 5112 34	Sprocket Camshaft	1	
7	DK 1013 86	Hexagon Socket Head Bolt	1	
8	JE 5112 33	Cam Shaft Silent Chain	1	
9	JE 5210 16	Tensioner Chain	1	
10	39 2669 21	Ring - O (Tensioner Bolt)	1	
11	39 1673 04	Bolt Silver Colour M6 X 20	1	
12	CS 1011 28	Gasket	1	
13	DD 1010 62	Bolt Chain Tensioner	1	
14	DH 1013 92	Chain Guide Pivot Bolt	1	
15	36 JF00 05	Kit Chain Guide	1	Refer Kit List
16	DH 1010 48	Special Camshaft Washer	1	

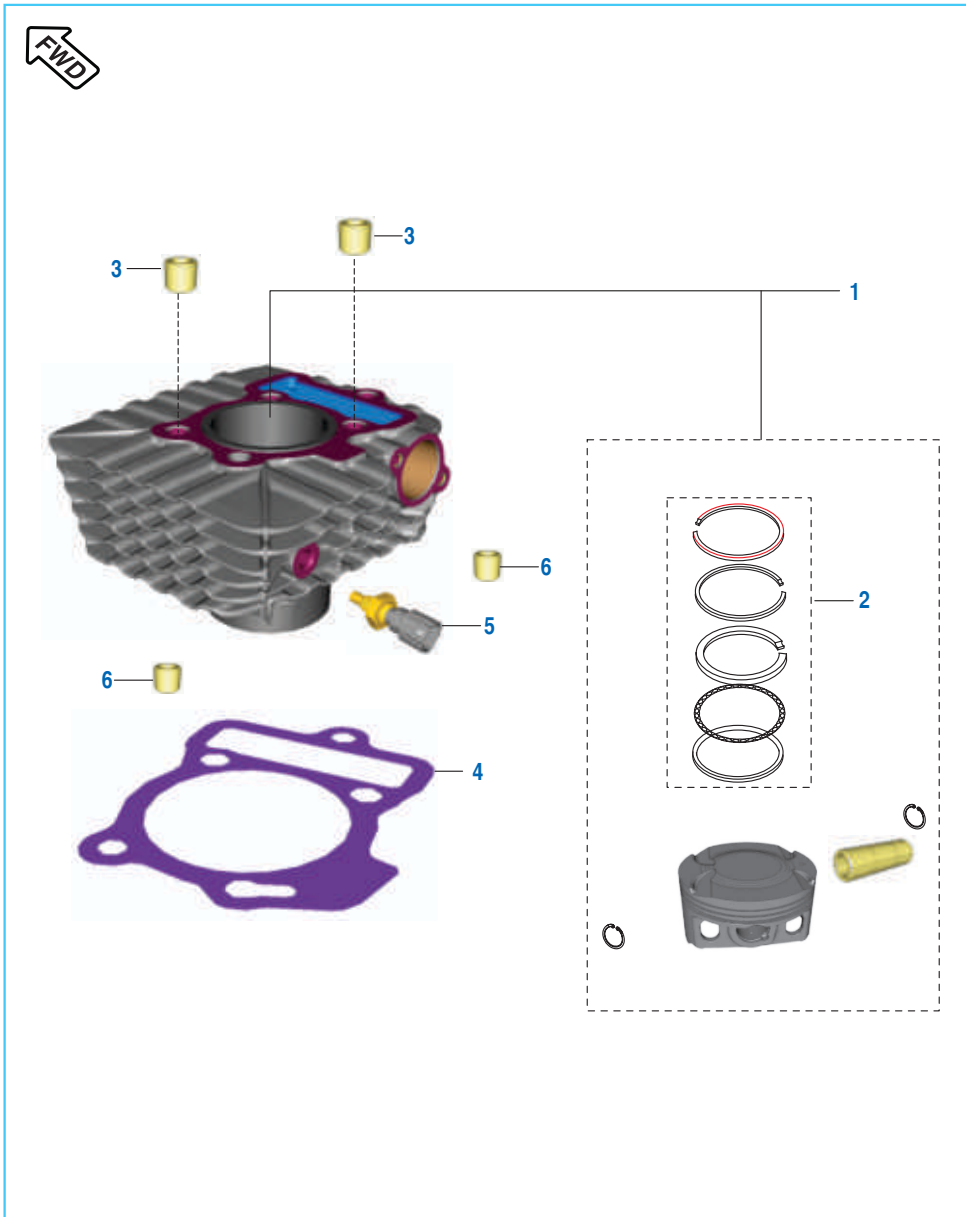Cylinder and Piston




No.	Part No.	Description	Qty.	Remarks
1	36 JF01 17	Kit Cylinder Block Piston Assembly	1	Refer Kit List
2	36 JF00 42	Kit Piston Rings	1	Refer Kit List
3	39 2181 06	Pin - Hollow Dowel 14 X 20	2	
4	JE 5210 30	Gasket Cylinder Block	1	
5	JE 3514 03	Sensor Temperature Engine	1	
6	39 1000 06	Hollow Dowel Pin	2	

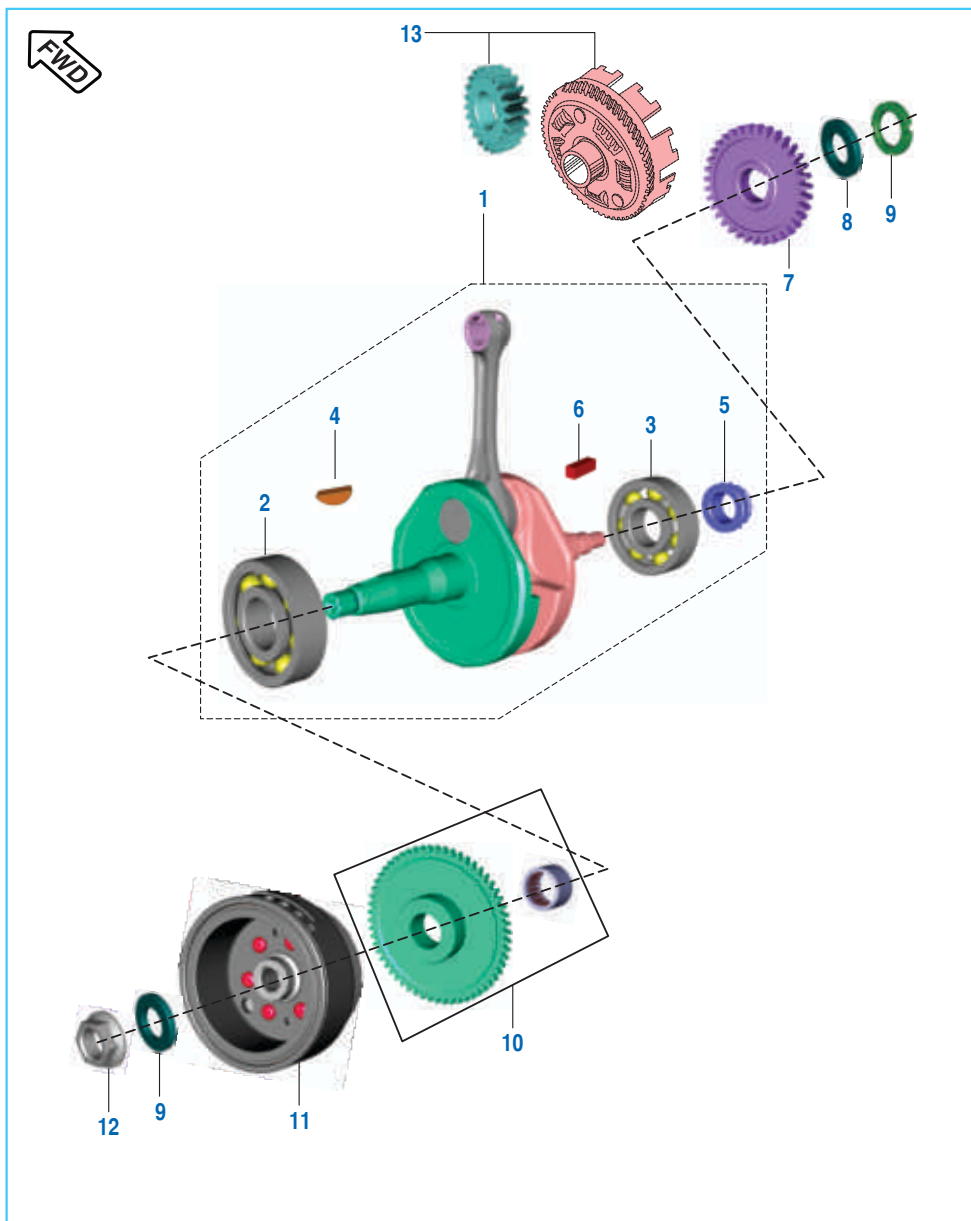

Crankshaft

No.	Part No.	Description	Qty.	Remarks
1	JE 5310 40	Crankshaft Assembly	1	Refer Kit List
2	39 2561 20	Bearing Ball	2	
3	39 1931 20	Ball Bearing 28 X 68 X 18	-	
4	31 1011 73	Key-Woodruff Clutch Side	1	
5	JE 5310 33	Sprocket Crankshaft	1	
6	LF B000 01	Key Sunk	1	
7	JE 5512 13	Balancer Drive Gear	1	
8	LD A000 25	Washer Plain	2	
9	LC D000 01	Nut Sprocket Drive Lock	1	
10	JE 6214 04	Assembly Gear Starter Clutch	1	
11	JE 3510 18	Assembly Rotor With Clutch	1	
12	59 1500 14	Nut Hex	1	
13	36 JF01 33	Kit Primary Drive And Driven	1	

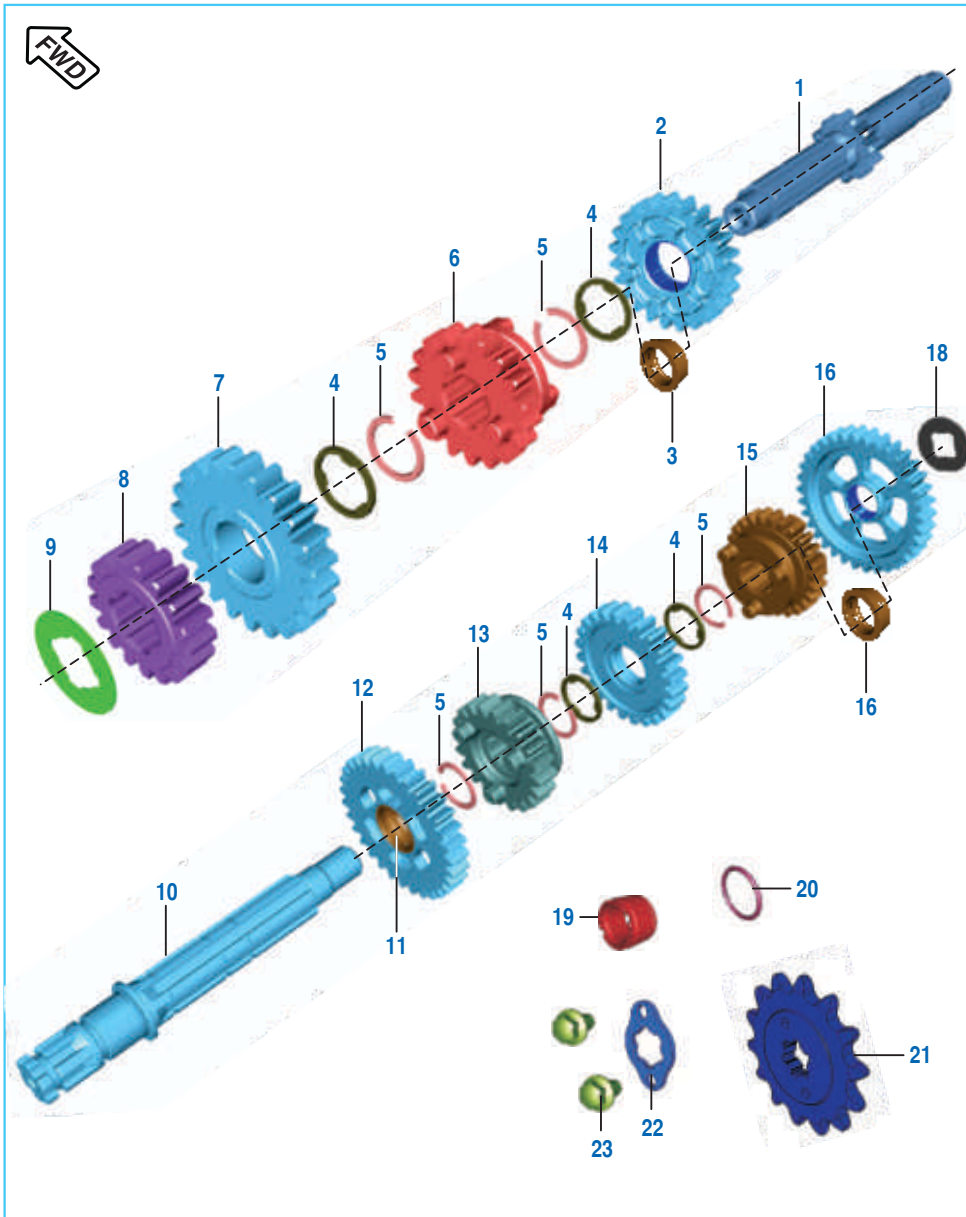Transmission




15

FWD Front Wheel Direction

No.	Part No.	Description	Qty.	Remarks
1	JE 5510 01	Shaft Input	1	
2	JE 5512 02	Gear 4th Drive	1	
3	JZ 5512 10	Bush Gear 2nd Driven	1	
4	JA 5510 02	Spline Washer	4	
5	39 0987 17	Ring Snap	5	
6	JE 5512 01	Gear 3rd Drive	1	
7	JE 5512 03	Gear 5th Drive	1	
8	JE 5512 00	Gear 2nd Drive	1	
9	JA 5510 04	Washer Thrust 2nd Drive	1	
10	JZ 5510 08	Shaft Output Forging Route	1	
11	JZ 55 1210	Bush Gear 2nd Driven	1	
12	JE 5512 05	Gear 2nd Driven	1	
13	JE 5512 08	Gear 5th Driven	1	
14	JE 5512 06	Gear 3rd Driven	1	
15	JE 5512 16	Gear 4th Driven	1	
16	JZ 5512 05	Bush 1st Driven	1	
17	JE 5512 15	Gear 1st Driven	1	
18	JA 5510 08	Washer Thrust	1	
19	JA 5510 09	Collar Sprocket Drive	1	
20	59 2100 24	O - Ring	1	
21	JV 5510 00	Sprocket Output (15T)	1	
22	DU 1012 13	Plate Lock - Sprocket Output	1	
23	LA C000 69	Bolt Socket	2	


16

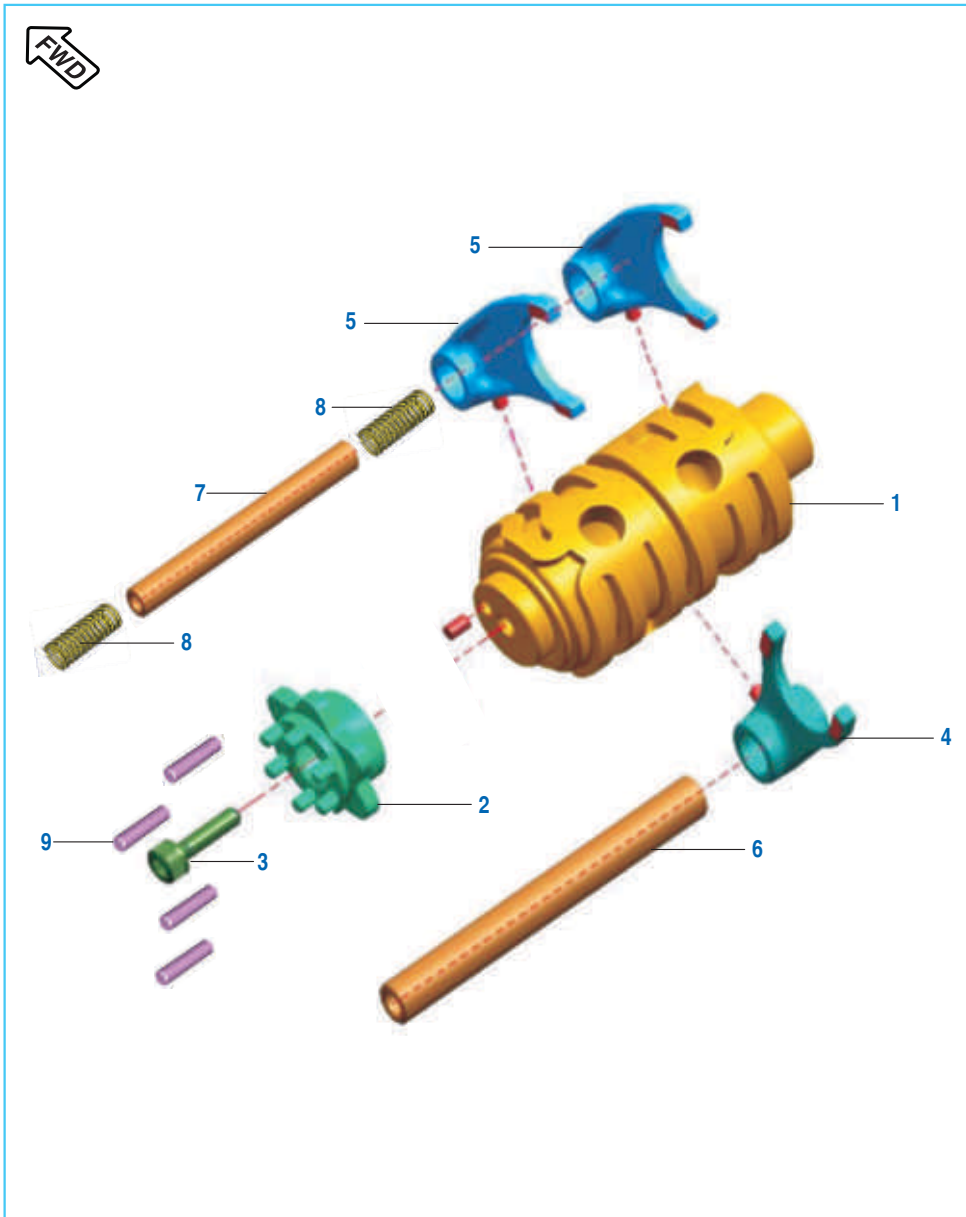Change Drum / Shift Fork




No.	Part No.	Description	Qty.	Remarks
1	JE 5610 06	Drum Comp Gear Shift	1	
2	JE 5610 05	Cam Drum Change	1	
3	JD 5610 11	Special Bolt Drum Change	1	
4	JZ 5610 02	Fork Input Disco - H	1	
5	JD 5610 04	Fork Gear Shift Output	2	
6	JD 5610 06	Shaft Gear Fork Shift	1	
7	JE 5610 04	Shaft Gear Fork Shift Output	1	
8	JY 5410 39	Spring	2	
9	39 0992 06	Dowel	4	

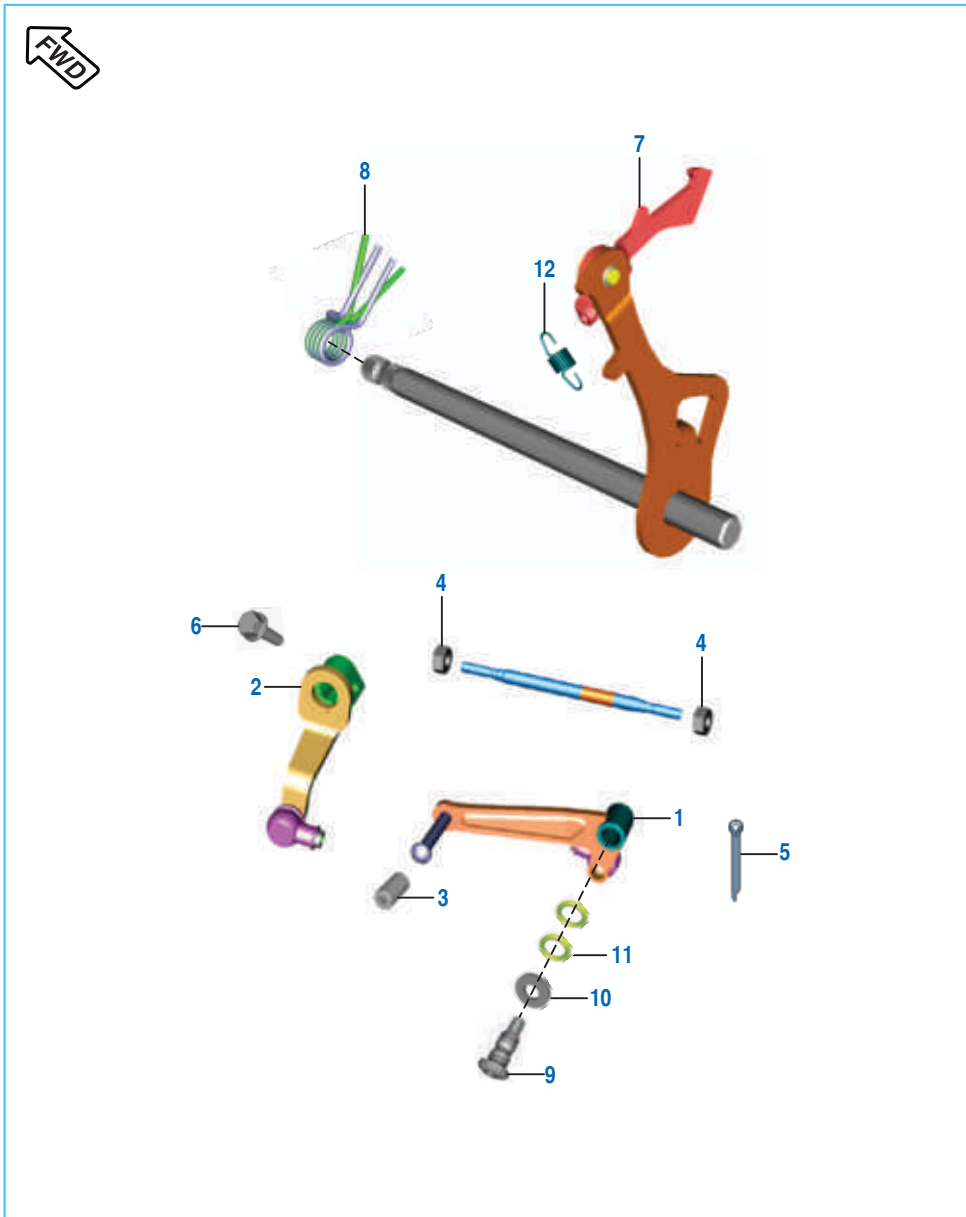Gear Change Mechanism




No.	Part No.	Description	Qty.	Remarks
1	JF 5612 05	Assly Shift Lever Ball Joint	1	
2	JF 5612 04	Arm Change With Ball Joint	1	
3	DH 1015 09	Damper	1	
4	LC B000 03	Nut (LM6 x 1)	1	
5	39 0808 08	Pin - Split	1	
6	39 1902 04	Bolt - Flange M6	1	
7	52 JZ02 64	Lever Comp Gear Shift	1	
8	JE 5612 00	Spring Gear Shift Return	1	
9	JL 5614 09	Bolt Gear Change Lever	1	
10	JL 5614 10	Washer - Steel	1	
11	01 1009 05	'O' Ring	2	
12	JW 5612 06	Extension Spring	1	

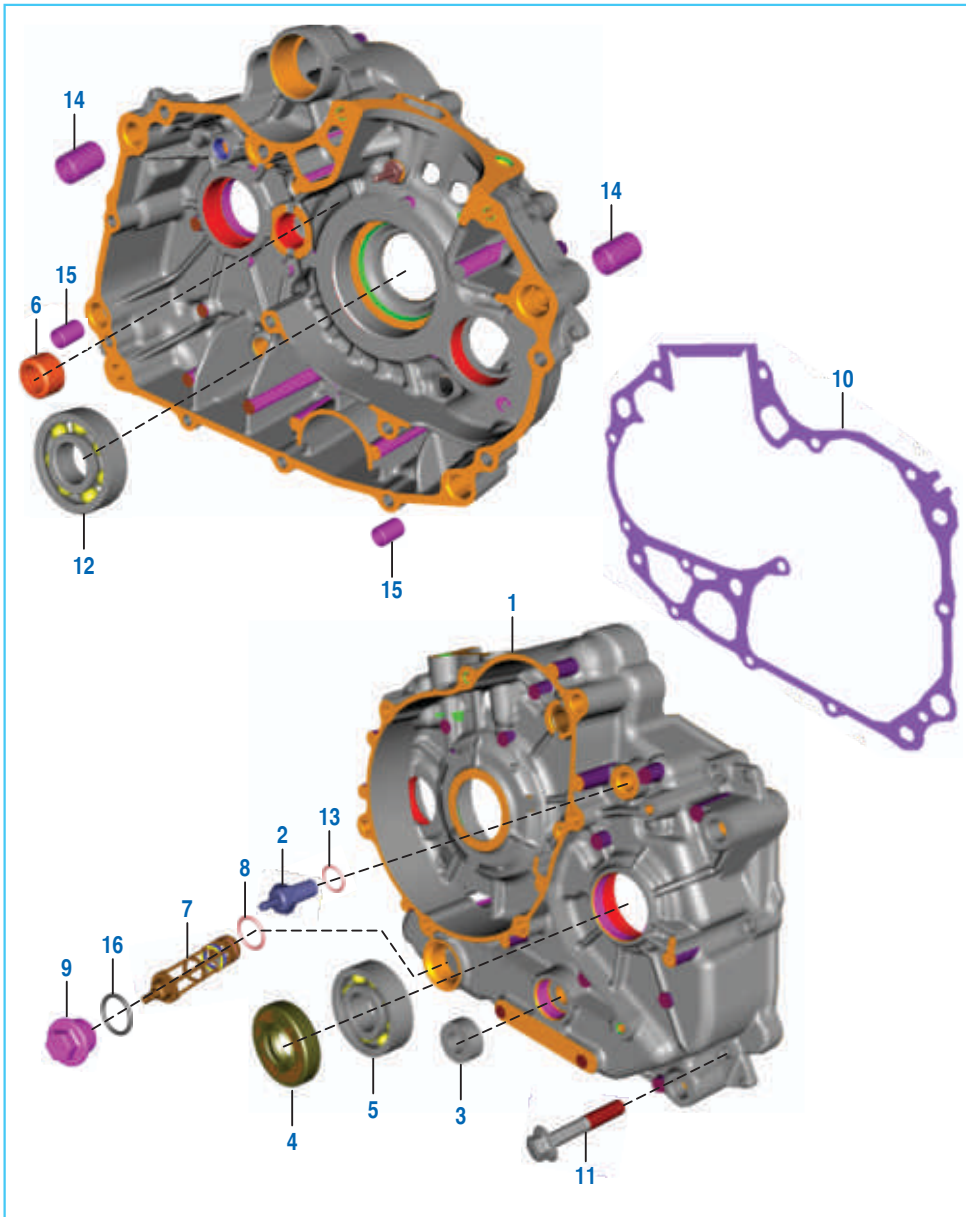Crankcase LH




No.	Part No.	Description	Qty.	Remarks
1	36 JF01 32	Kit Crankcase LH	1	Refer Kit List
2	31 2010 81	Switch Complete	1	
3	39 2190 19	Oil Seal	1	
4	39 1715 19	Oil Seal	1	
5	59 2000 36	Ball Bearing 6203 HN3 C3	1	
6	39 2562 20	Needle Roller Bearing	1	
7	JG 5710 24	Mesh Oil Filter Assly (Strainer)	1	
8	LJ A000 04	'O' Ring Strainer	1	
9	JA 5410 21	Cap Strainer	1	
10	JE 5410 63	Gasket Crankcase	1	
11	59 0400 38	Bolt Flanged	8	
12	39 2561 20	Bearing Ball 6305	1	
13	DH 1017 84	Gasket Neutral Switch	1	
14	39 1000 06	Hollow Dowel Pin	2	
15	39 2181 06	Hollow Dowel Pin	2	
16	59 2100 23	O - Ring Strainer Cap	1	

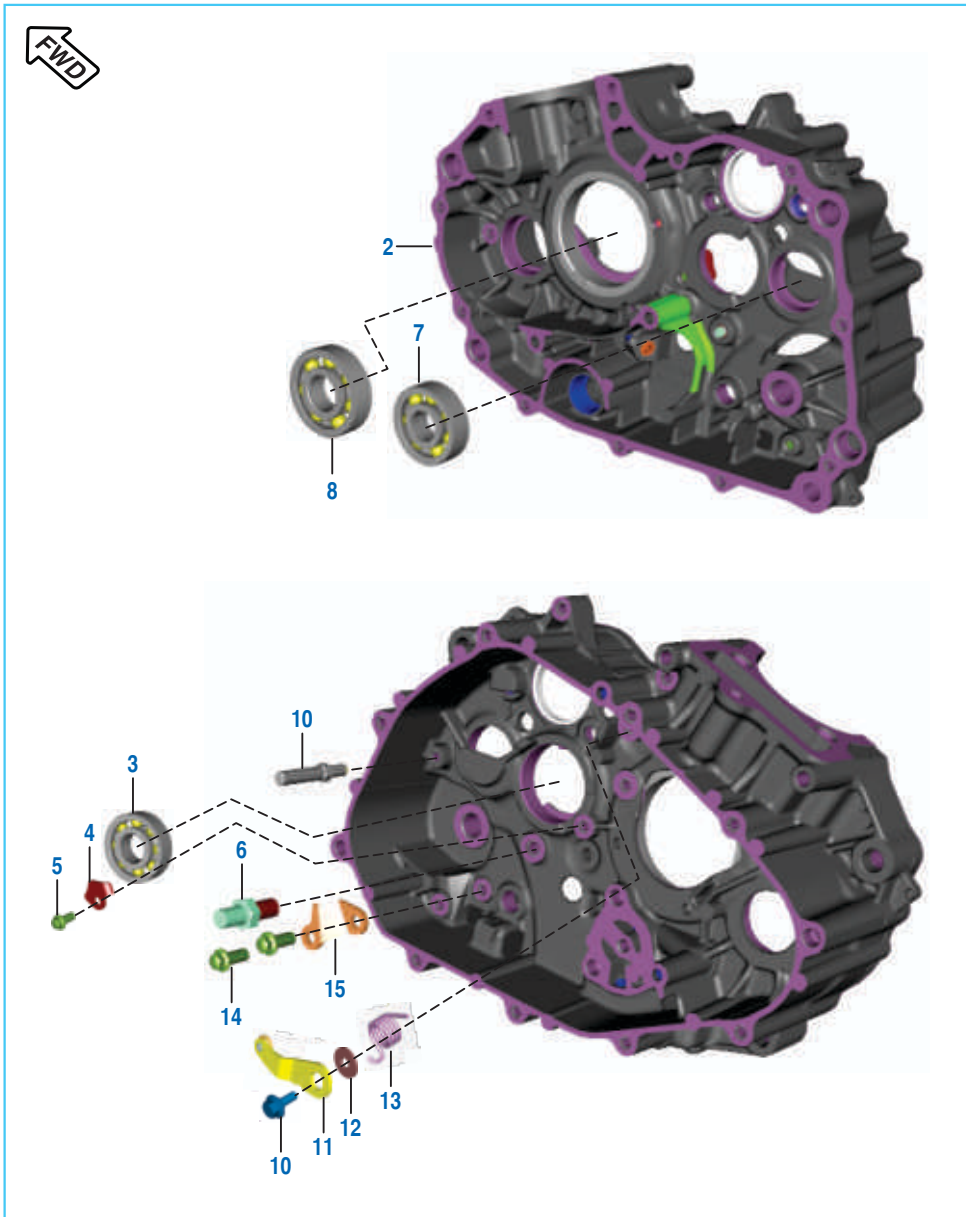Engine Assembly / Crankcase RH




No.	Part No.	Description	Qty.	Remarks
1	JE 5010 46	Assembly Engine	1	Refer Kit List
2	36 JF01 30	Kit Crankcase RH	1	
3	59 2000 36	Ball Bearing 6203 HN3 C3	1	
4	JA 5410 10	Stopper Plate Input Bearing	1	
5	LA E000 15	Bolt Flanged	1	
6	52 JA00 29	Bolt Shift Change	1	
7	KP BF62 01	Bearing Ball	1	
8	39 2561 20	Bearing Ball	1	
9	JE 5410 28	Pin	1	
10	BF 5612 19	Bolt Detent Lever	1	
11	PA 5612 09	Inhibitor Comp	1	
12	LD B000 44	Washer Plain	1	
13	JD 5612 04	Spring Inhibitor	1	
14	LA E000 25	Bolt Flanged Small	2	
15	JA 5410 12	Guide Kick	1	

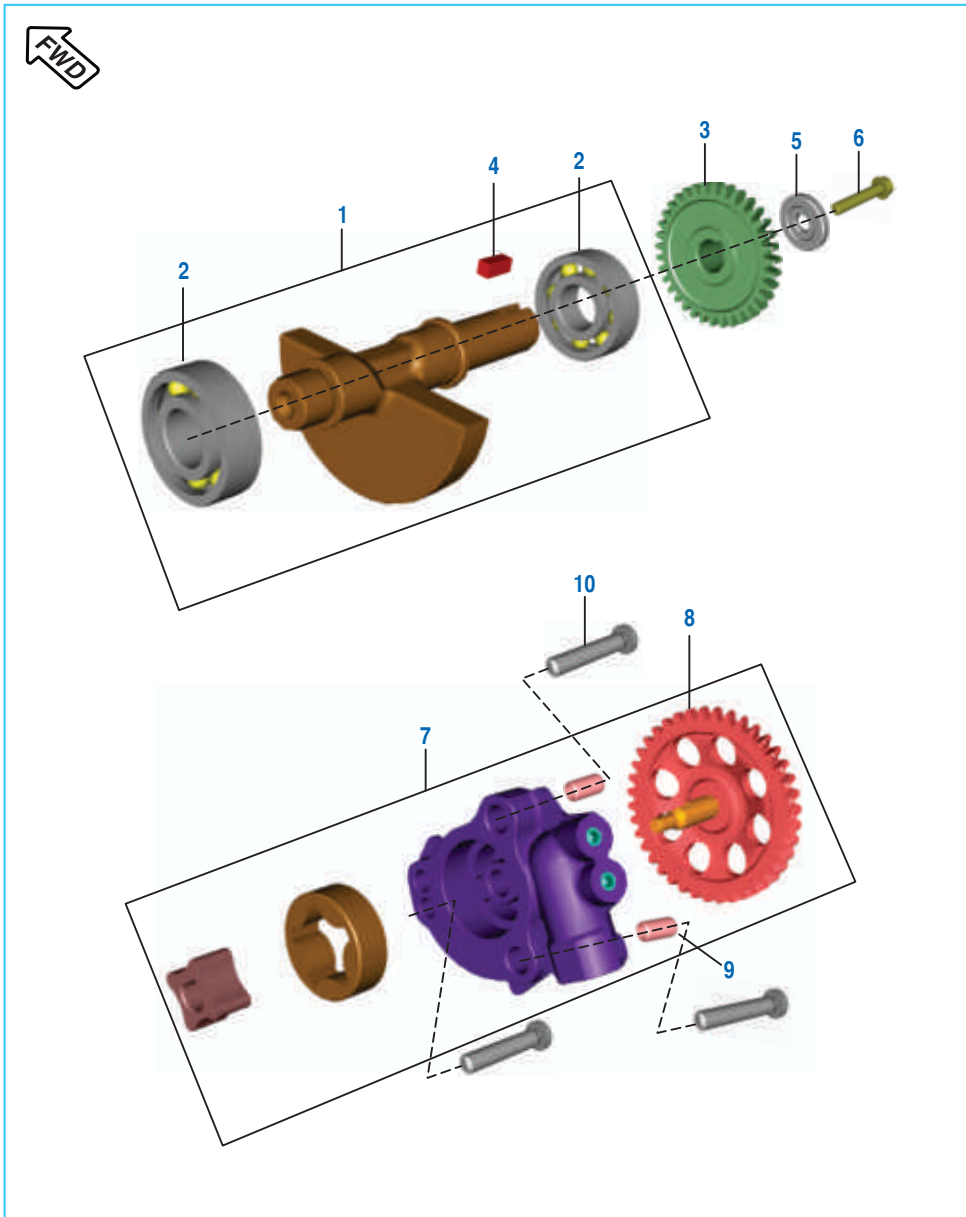Balancer Idler Gear / Oil Pump Assembly




No.	Part No.	Description	Qty.	Remarks
1	JE 5312 02	Assembly Integral Balancer	1	
2	JG 5312 20	Balancer Bearing	2	
3	JE 5512 14	Balancer Driven Gear	1	
4	DS 1011 54	Key	1	
5	DH 1010 48	Special Camshaft Washer	1	
6	LA D001 04	Bolt Flanged	1	
7	JE 5710 09	Assembly Oil Pump Body	1	
8	JE 5710 08	Gear Oil Pump	1	
9	39 0999 06	Pin - Hollow Dowel	2	
10	FD 1010 78	Pan Head Screw	3	

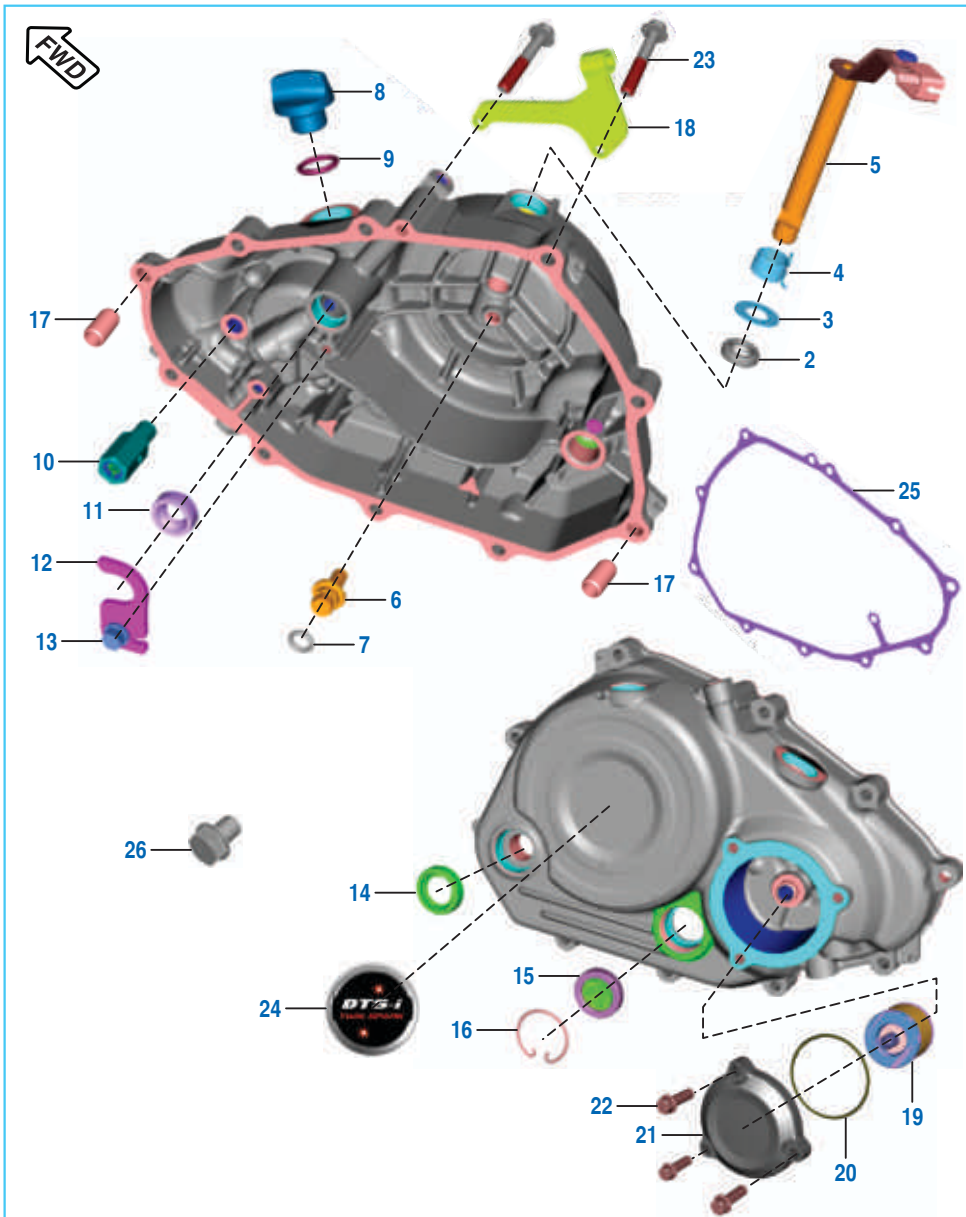Cover Clutch




No.	Part No.	Description	Qty.	Remarks
1	36 JF01 35	Kit Clutch Cover Assembly	1	
2	39 1041 19	Seal Oil	1	
3	39 2443 11	Washer	1	
4	JH 5412 10	Spring Clutch Release Shaft	1	
5	JE 5412 71	Shaft Clutch Release Assembly	1	
6	JE 5514 08	Rod Push	1	
7	39 1561 21	Ring - O	1	
8	JA 5412 11	Cap Oil Filler	1	
9	JA 5412 25	O-Ring Cap Oil Filler	1	
10	JE 5712 13	Assly Pressure Relief Valve	1	
11	JE 5412 42	Seal Oil Crankshaft	1	
12	JE 5412 49	Plate Position	1	
13	AA 1014 37	Bolt Flanged Small	1	
14	30 1011 42	Seal Oil For Kick Shaft	1	
15	JL 5412 27	Window Oil Guage	1	
16	DS 1012 15	Wire Circlip	1	
17	39 0999 06	Pin - Hollow Dowel	2	
18	JE 5412 44	Bracket Clutch Cable	1	
19	JE 5710 07	Element Oil Filter	1	
20	39 1671 21	O-Ring	1	
21	JE 5412 34	Cap Oil Filter	1	
22	39 1673 04	Bolt Silver Colour	3	
23	59 0400 38	Bolt Flanged	10	
24	JE 5412 67	Label Clutch Cover	1	
25	JE 5412 41	Gasket Clutch Cover	1	
26	28 1011 41	Oil Plug - Drain Plug	1	

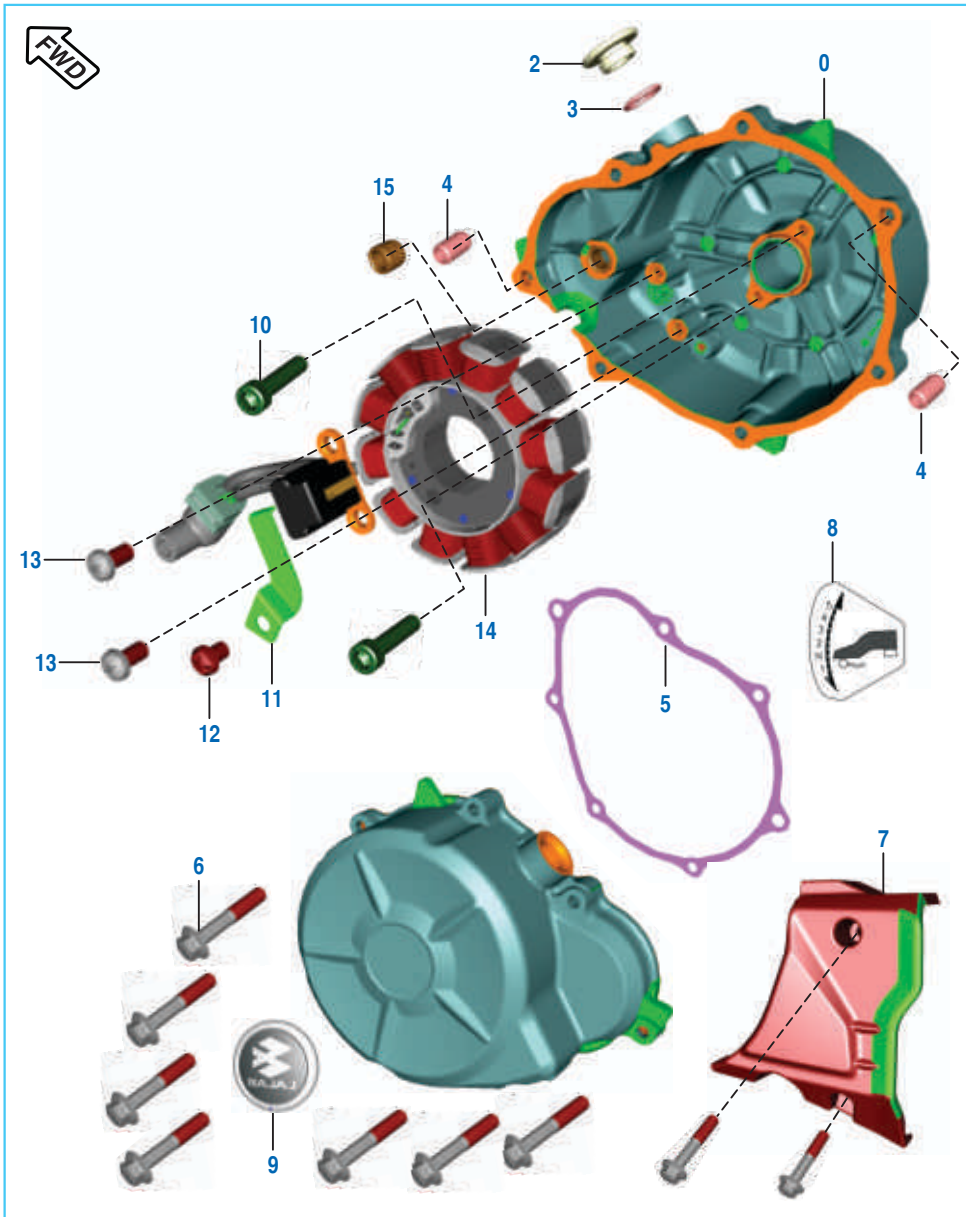Cover Magneto




No.	Part No.	Description	Qty.	Remarks
1	36 JF00 03	Cover Assembly Magneto	1	
2	JA 5412 33	Cap TDC Finder	1	
3	30 1011 95	O - Ring	1	
4	39 0999 06	Pin - Hollow Dowel	2	
5	JE 5412 40	Gasket Magneto Cover	1	
6	59 0400 38	Bolt Flanged	9	
7	JE 5412 28	Cover LH RR	1	
8	DJ 1612 28	Gear Shift Lable	1	
9	JL 5412 23	Decal 'Bajaj logo'	1	
10	LA C000 52	Bolt Socket	2	
11	JE 5412 43	Bracket Harness	1	
12	KB AB06 08	Screw Pan	1	
13	DH 1013 80	Screw Pan Head	2	
14	JE 3510 25	Stator Assembly	1	
15	JA 5410 05	Bush Bendix	1	

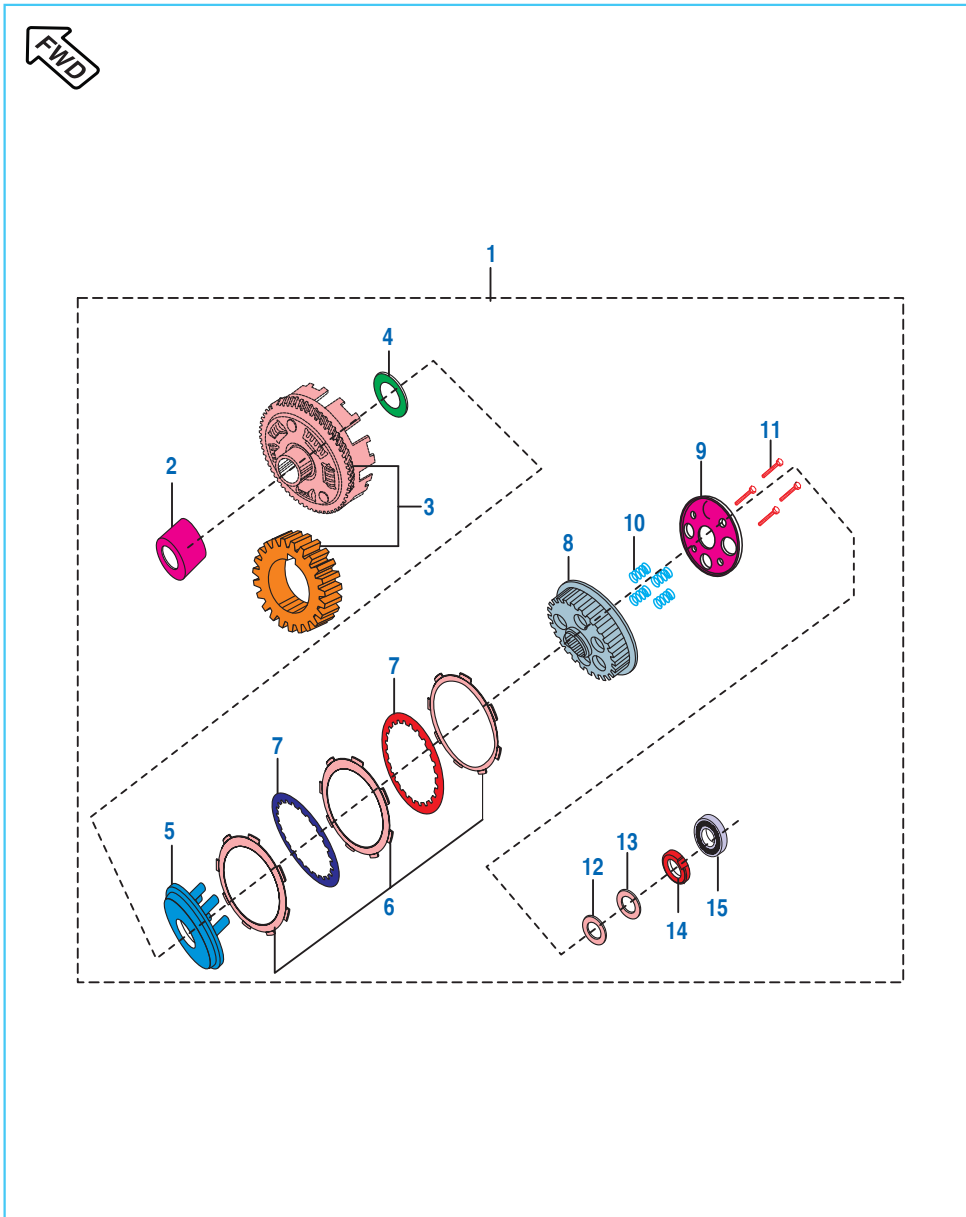Clutch Assly




No.	Part No.	Description	Qty.	Remarks
1	JE 5514 28	Assembly Clutch	1	
2	JD 5514 00	Collar Clutch	1	
3	36 JF01 33	Kit Primary Drive And Driven	1	
4	JG 5514 28	Washer Clutch	1	
5	JE 5514 14	Wheel Clutch D106A	1	
6	36 JZ01 21	Kit Friction Plate	1	
7	DT 5514 08	Clutch Plate	4	
8	JE 5514 13	Hub Clutch FCC	1	
9	JE 5514 15	Plate Clutch Lifter	1	
10	JZ 5514 12	Spring Clutch FCC Disco - H	4	
11	JG 5514 51	Bolt - Upset	4	
12	39 2200 11	Washer Primary Drive	1	
13	39 0240 11	Washer Plain	1	
14	DH 1016 48	Nut Clutch Center Lock	1	
15	14 1510 33	Bearing 10*30*9 Clutch Lifter	1	

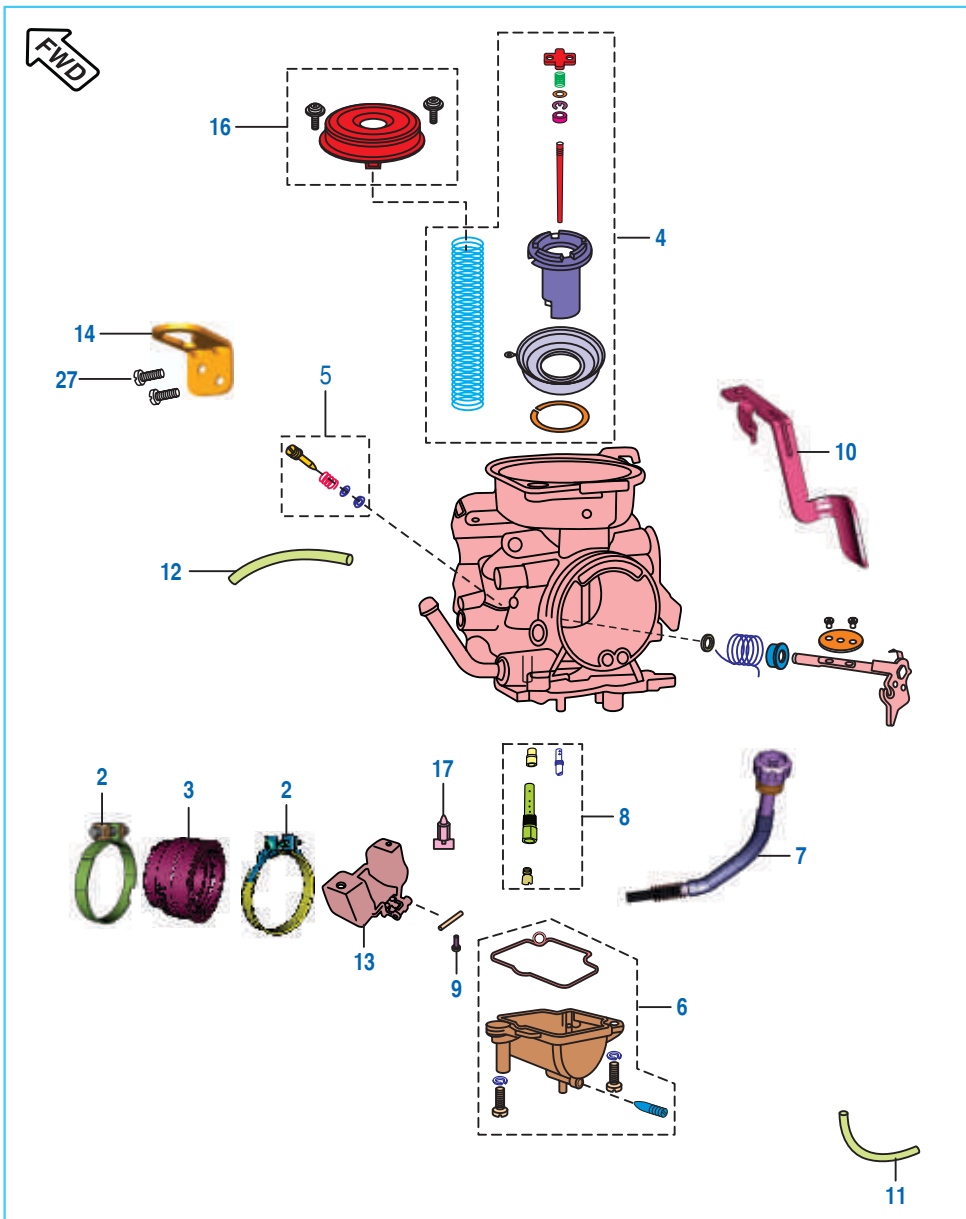Carburettor




No.	Part No.	Description	Qty.	Remarks
1	JE 5812 49	Carburettor Assembly	1	
2	JE 5814 28	Clamp Sleeve Carburettor	2	
3	JE 5814 07	Sleeve Carburettor	1	
4	36 JF01 39	Vacuum Piston Assembly Kit	1	
5	36 JF01 40	Pilot Screw Kit	1	
6	DH 1211 70	Float Body Assembly Kit	1	
7	36 JF01 41	Kit Idling Screw	1	
8	36 JF01 42	Jet Kit	1	
9	DH 1210 64	Screw Needle Shaft	1	
10	JL 5812 04	Choke Lever	1	
11	JL 5812 05	Tube Drain Carb.	1	
12	JL 5812 06	Tube Breather	1	
13	DH 1211 62	Float Assembly	1	
14	JE 5812 39	Throttle Cable Bracket	1	
15	JL 5812 03	Grommet Throttle Bracket	1	
16	DH 1211 70	Top Cap Assembly Kit	2	
17	DH 1210 64	Float Valve	1	

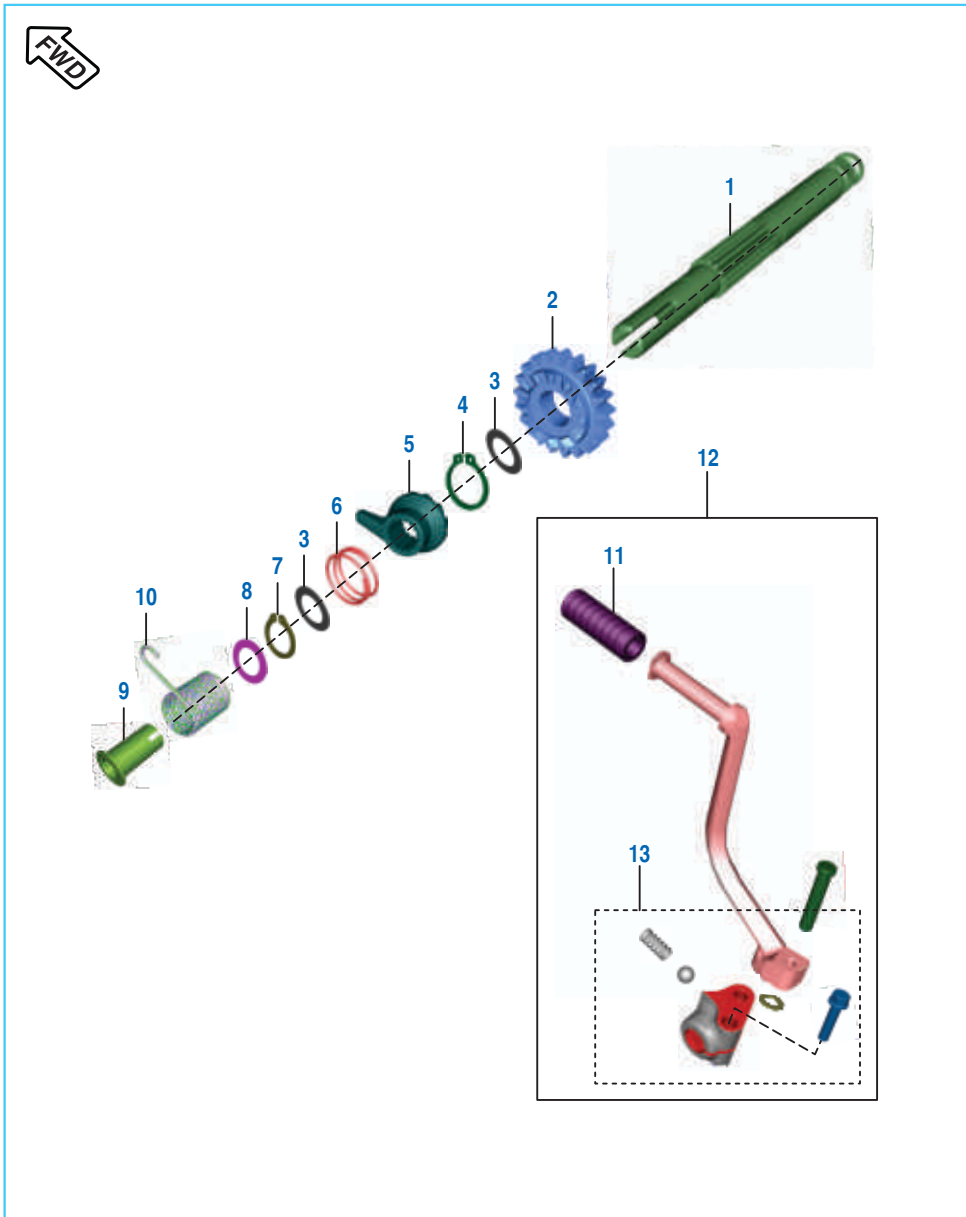Kick Starter Mechanism




No.	Part No.	Description	Qty.	Remarks
1	JE 6210 02	Shaft Kick	1	
2	JZ 6210 00	Assembly Kick Pinion Gear	1	
3	39 0993 11	Plain Washer	3	
4	39 2408 17	External Circlip	1	
5	JA 6210 02	Ratchet	1	
6	DS 1011 17	Spring Kick Starter Ratchet	1	
7	39 0738 17	External Circlip Type C	1	
8	JA 6210 06	Washer Thrust (16.2 x 25 x 0.5)	1	
9	JE 6210 04	Sleeve	1	
10	JE 6210 03	Spring	1	
11	DD 1010 97	Damper	1	
12	JE 6212 03	Assembly Kick Lever	1	
13	36 JF00 07	Kit Boss Kick	1	

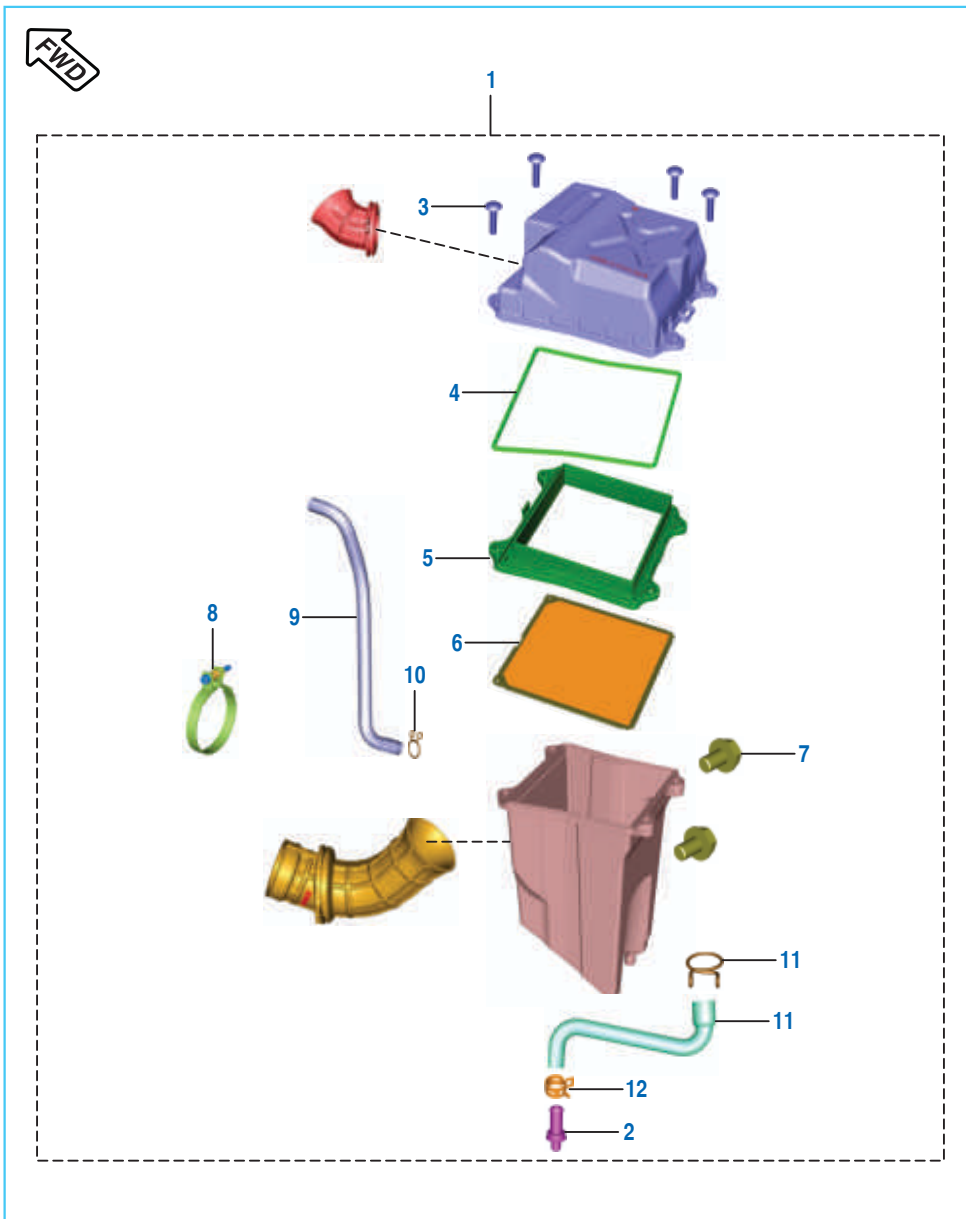Air Cleaner Complete




No.	Part No.	Description	Qty.	Remarks
1	JE 5810 80	Assembly Air Filter	1	
2	DS 1211 26	Plug	1	
3	KB UA06 30	Screw Truss	4	
4	DT 5810 28	Seal Top Cover	1	
5	DT 5810 62	Filter Element	1	
6	JE 5810 51	Arrester Flame	1	
7	KA DM06 10	Bolt Flange M6-L10mm	2	
8	JE 5810 68	Clamp Connecting Tube	1	
9	JE 5810 11	Tube Breather	1	
10	JG 5810 56	Clamp (Breather Tube)	2	
11	JL 5810 56	Assembly Drain Tube	1	
12	DG 1210 02	Clamp	1	

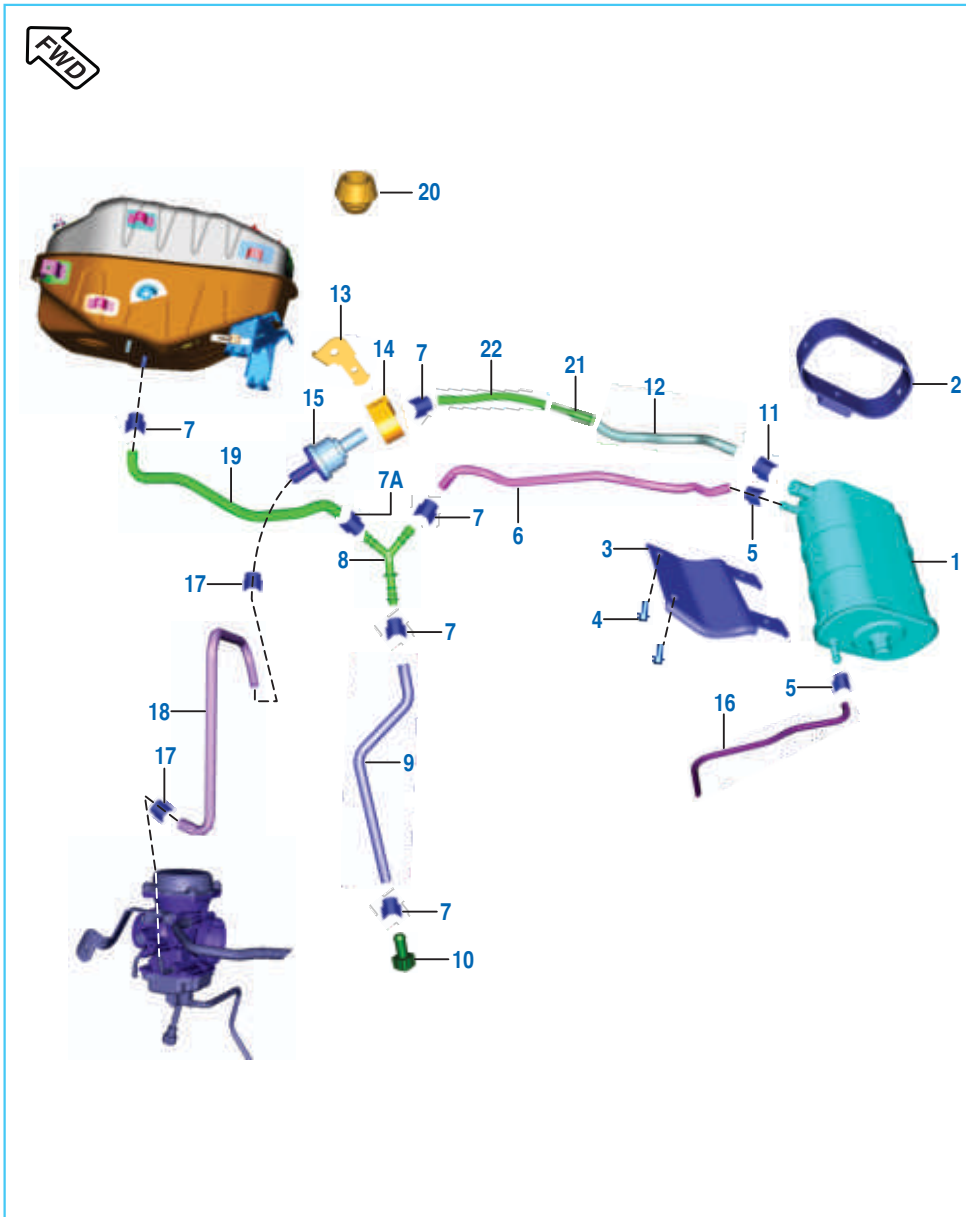EVAP Mechanism




No.	Part No.	Description	Qty.	Remarks
1	JY 1710 77	Canister	1	
2	JZ 1710 55	Strap Canister	2	
3	JL 1138 30	Bracket Canister Mounting	1	
4	KA EA06 10	Bolt - Flanged - Small	2	
5	JY 1710 70	Spring Band Clamp 9 x 8.4	4	
6	JL 1718 37	Tube Y Connector To Canister	1	
7	JY 1710 90	Spring Band Clamp 13 x 12	5	
7A	JY 1710 90	Spring Band Clamp 13 x 12	1	
8	JY 1138 42	Connector Y Shape	1	
9	JF 1716 07	Tube Connector To Plug	1	
10	JY 1718 25	Plug Fuel Drain	1	
11	JY 1710 69	Spring Band Clamp 15 x 10	1	
12	JF 1718 04	Tube Canister To Purge Valve	1	
13	JF 1138 38	Bracket Purge Valve Mounting	1	
14	JH 1710 48	Grommet Purge Valve	1	
15	PD 1716 16	Valve Purge	1	
16	JF 1718 07	Tube Canister Drain	1	
17	JG 1710 29	Spring Band Clamp 11.5 x 8.4	2	
18	JF 1718 05	Tube Purge Valve To Carb	1	
19	JF 1718 06	Tube Tank To Y Connector	1	
20	JD 1710 59	Evap Cap Rubber Bush Sealing	1	
21	JG 1710 86	Connector Tube Evap	1	
22	JF 1716 07	Tube Conn To Purge Valve	1	

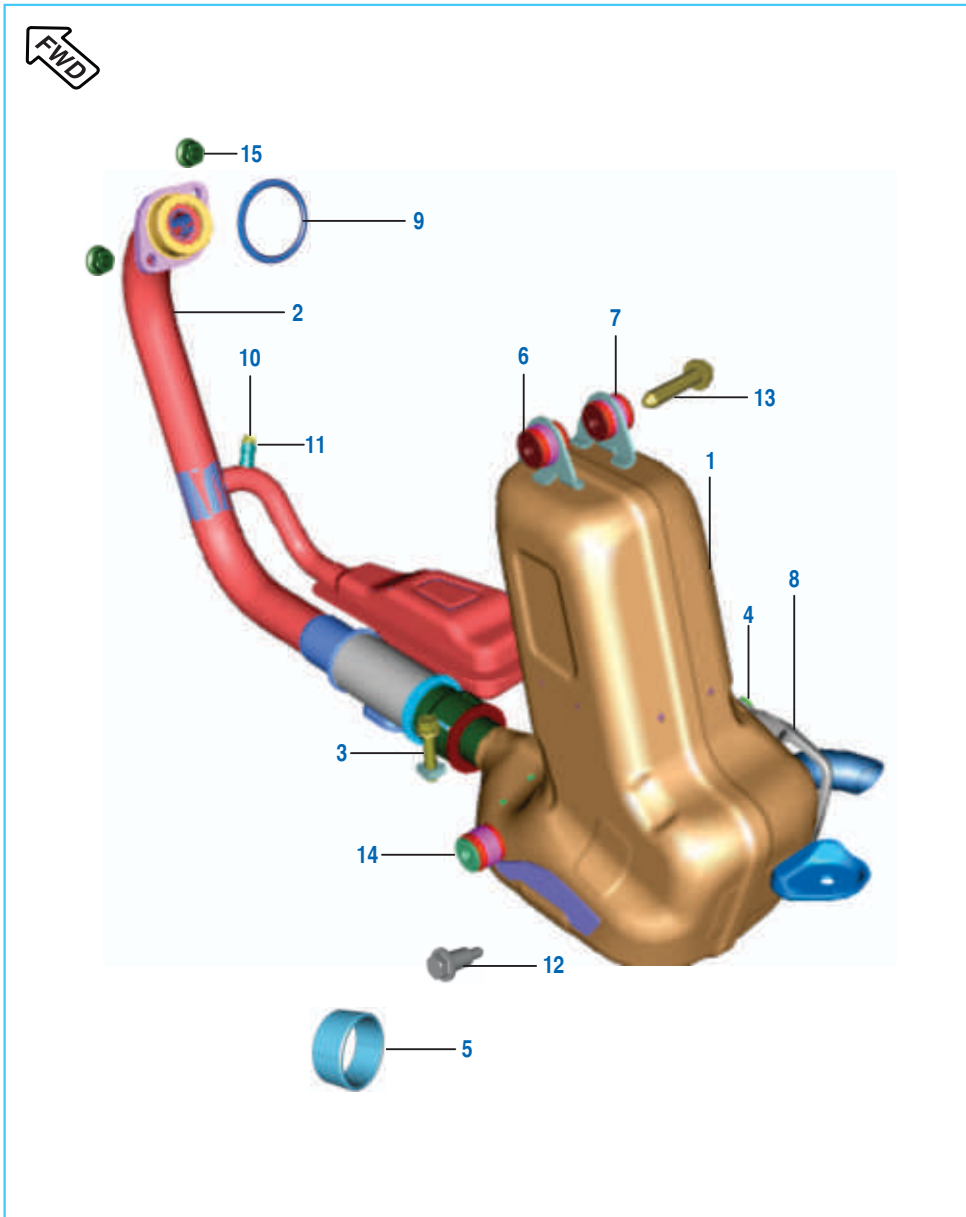Silencer Assembly




No.	Part No.	Description	Qty.	Remarks
1	JE 5910 12	Muffler Assembly Complete	1	
2	JE 5911 79	Assembly Pipe A	1	
3	JG 5910 38	Band Clip	1	
4	DH 1016 07	Truss Screw	2	
5	JG 5910 39	Gasket Muffler Pipe-A	1	
6	JL 5911 56	Bush Silencer Mounting	4	
7	JL 5911 65	Damper Silencer Mounting	4	
8	JE 5910 46	Heat Shield	1	
9	DJ 1010 64	Gasket Exhaust	1	
10	KA DA05 10	Bolt Flanged	1	
11	39 2492 11	Plain Washer	1	
12	KA DD06 35	Bolt Flanged	2	
13	KA DD06 30	Bolt Flanged	2	
14	JL 5911 57	Sleeve Bottom	2	
15	39 2295 15	Flange Nut	2	

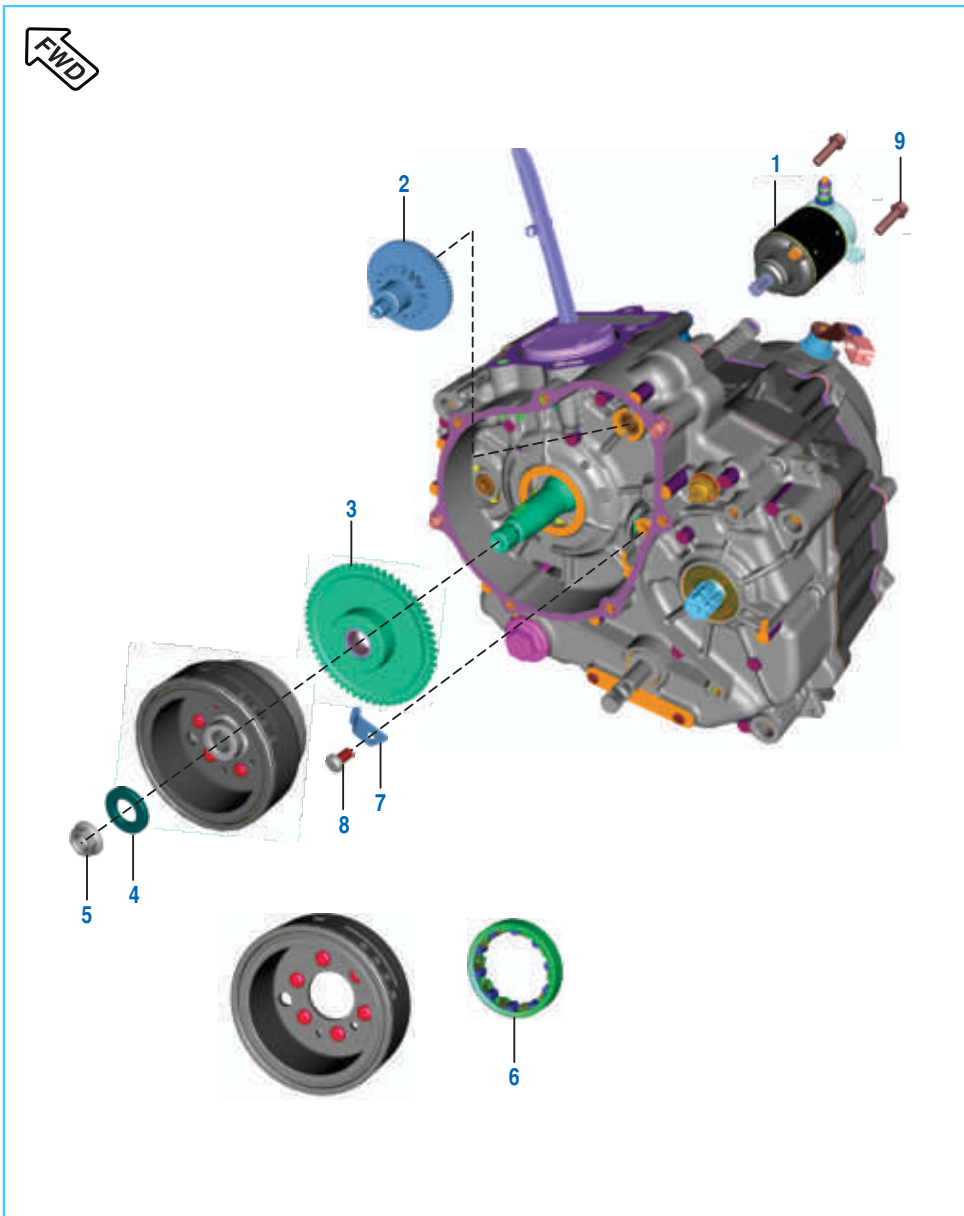Starter Assembly




No.	Part No.	Description	Qty.	Remarks
1	JE 3516 00	Starter Motor	1	
2	JE 6214 07	Starter Drive Assembly	1	
3	JE 6214 04	Assembly Gear Starter Clutch	1	
4	LD A000 25	Washer Plain	1	
5	59 1500 14	Nut Hex	1	
6	GL 6214 14	One Way Clutch	1	
7	JE 6214 05	Stopper Gear Starter	1	
8	DH 1013 80	Screw Pan Head (M6 x 12)	1	
9	39 1673 04	Bolt M6 x 20 Silver Colour	2	

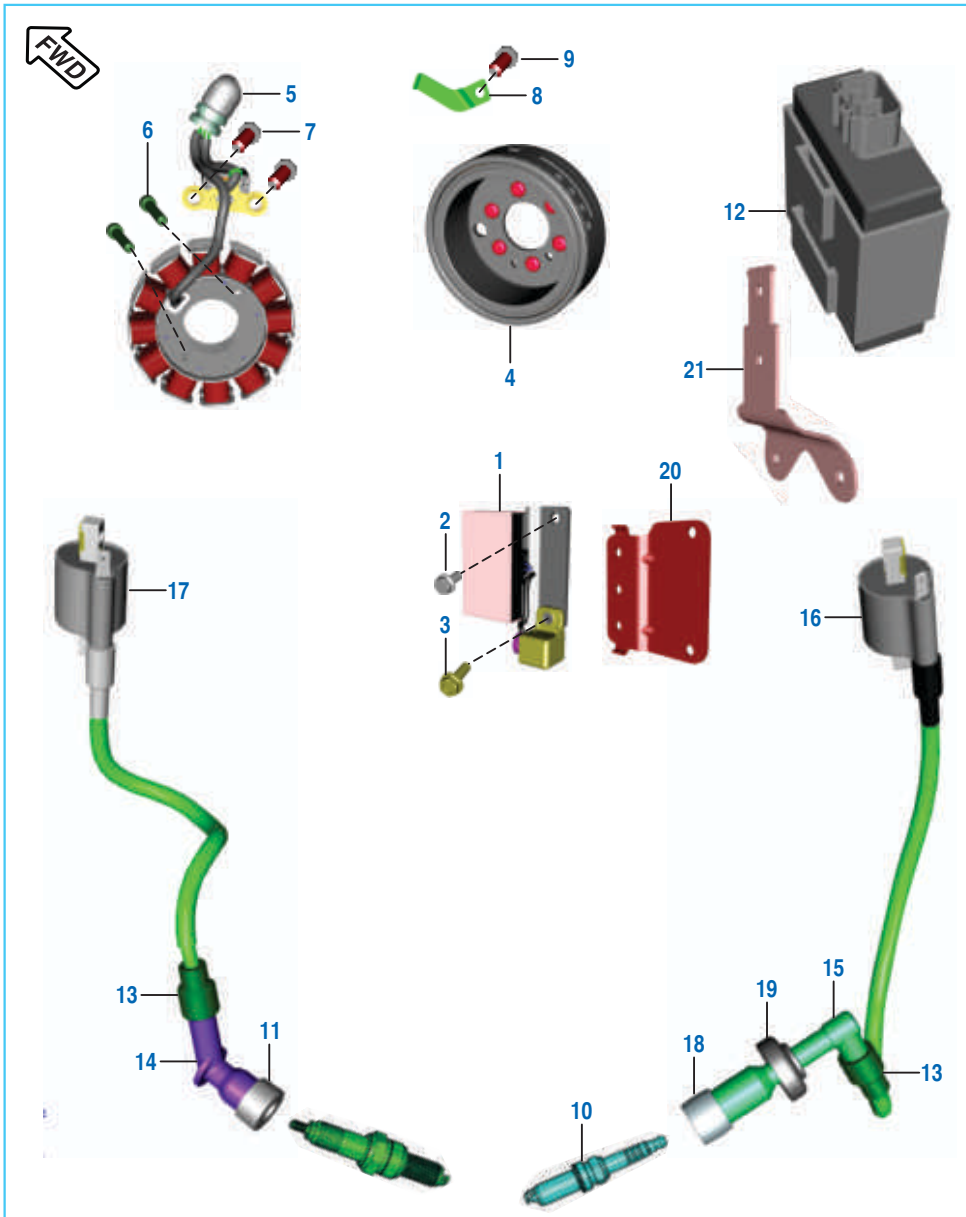Magneto, CDI & H.T. Coil




No.	Part No.	Description	Qty.	Remarks
1	JF 4020 00	Regulator Assembly	1	
2	39 1943 04	Bolt Flanged - M6	1	
3	KA DF06 20	Bolt Flanged	1	
4	JE 3510 18	Assembly Rotor With Clutch	1	
5	JE 3510 25	Stator Assembly	1	
6	LA C000 52	Bolt Socket	2	
7	DH 1013 80	Screw Pan Head (M6 x 12)	2	
8	JE 5412 43	Bracket Harness	1	
9	KB AB06 08	Screw Pan	1	
10	DD 1110 18	Spark Plug (RH)	1	
11	DD 1110 11	Grommet - Spark Plug Cap	1	
12	JE 3512 43	CDI Non TPS Assembly	1	
13	DD 1110 12	Grommet For H. T. Cable	2	
14	JE 3512 12	Cap Spark (120 DEG) LH	1	
15	AN 1110 15	Spark Plug Cap RH	1	
16	JE 3512 38	HT Coil RH	1	
17	JE 3512 36	HT Coil LH	1	
18	DH 1110 13	Grommet - Spark Plug	1	
19	JD 3512 06	Grommet - Sleeve Spark Plug	1	
20	JF 1138 14	Bracket Regulator Loose	1	
21	JL 1138 36	Bracket CDI Mtg. Loose	1	

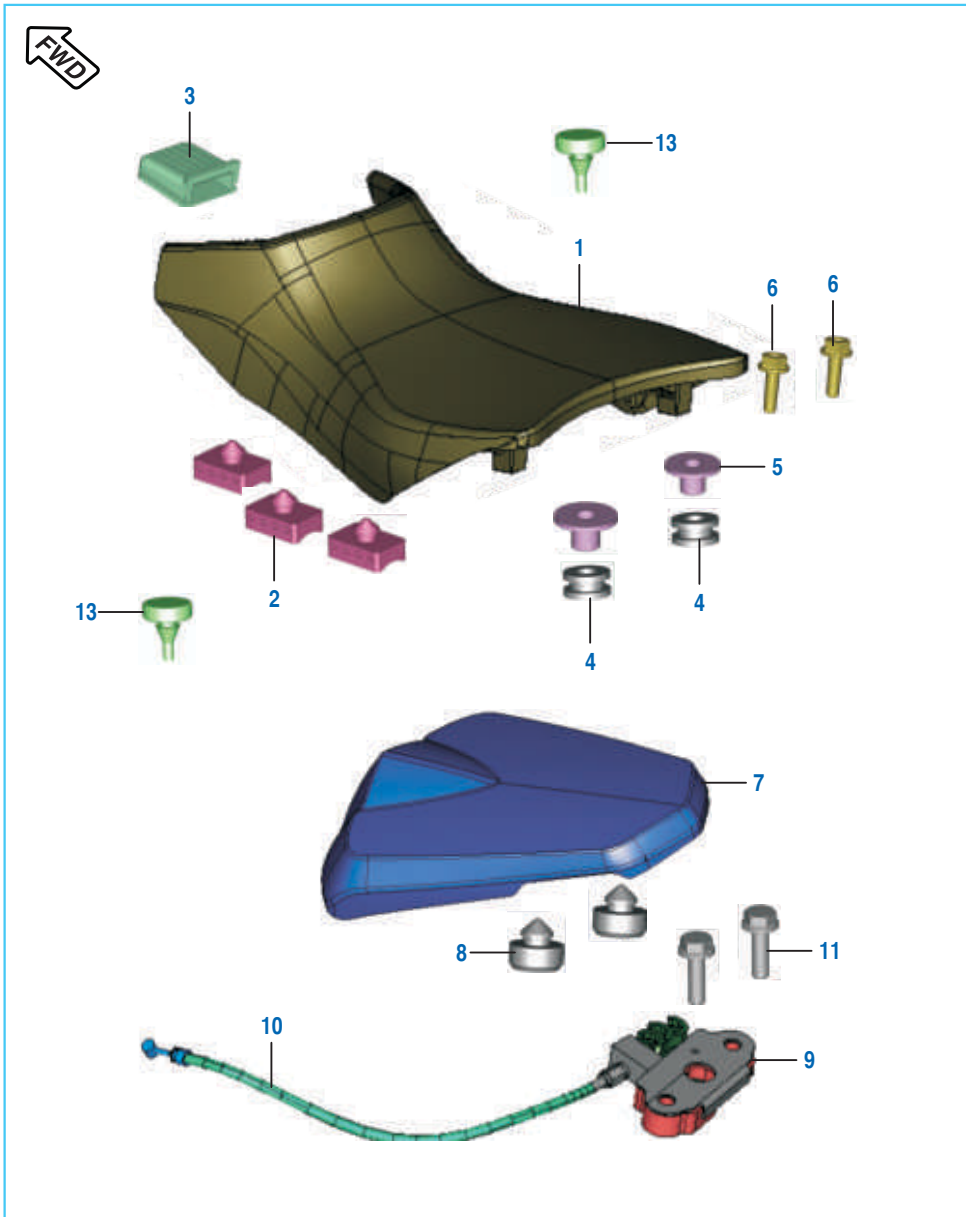Seat Assembly / Seat Lock




No.	Part No.	Description	Qty.	Remarks
1	JL 1910 01	Seat Assy Comp Front	1	
2	36 JL00 13	Kit Damper For Seat	1	
3	DK 2110 07	Damper Seat Front	1	
4	JG 1910 08	Collar - Seat	2	
5	FD 2110 06	Grommet - Seat	2	
6	DS 1612 87	Flange Bolt - M6	2	
7	JL 1910 04	Seat Assy Comp Rear	1	
8	JD 1910 06	Damper Round	2	
9	JG 2326 01	Lock Assy Seat Rear	2	
10	JG 2326 06	Seat Lock Cable	2	
11	KC BD06 05	Nut Hex Thin	2	
12	JL 2326 04	Cover Seat Lock	1	
13	JG 1910 06	Damper Seat	2	

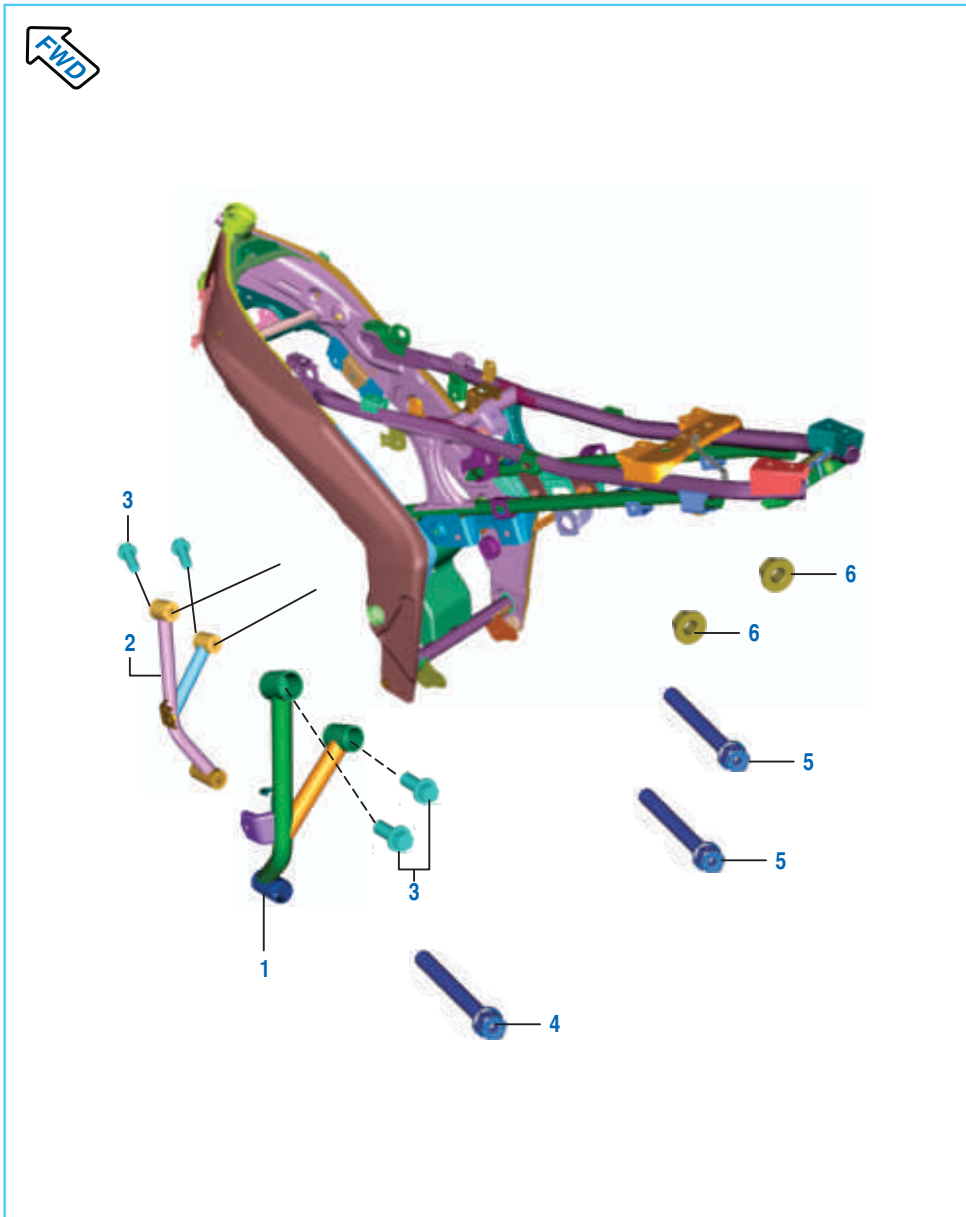Engine Mountings




No.	Part No.	Description	Qty.	Remarks
1	52 JF00 47	Engine Stay LH - K11 UG	1	
2	52 JF00 90	Engine Stay RH - K11 UG	1	
3	39 1956 04	Bolt - Flanged Small	4	
4	JL 1110 54	Engine Mtg Bolt Front	1	
5	JF 1134 12	Bolt Engine Mounting Rear	2	
6	LC G000 14	Nut Hex Flanged	2	

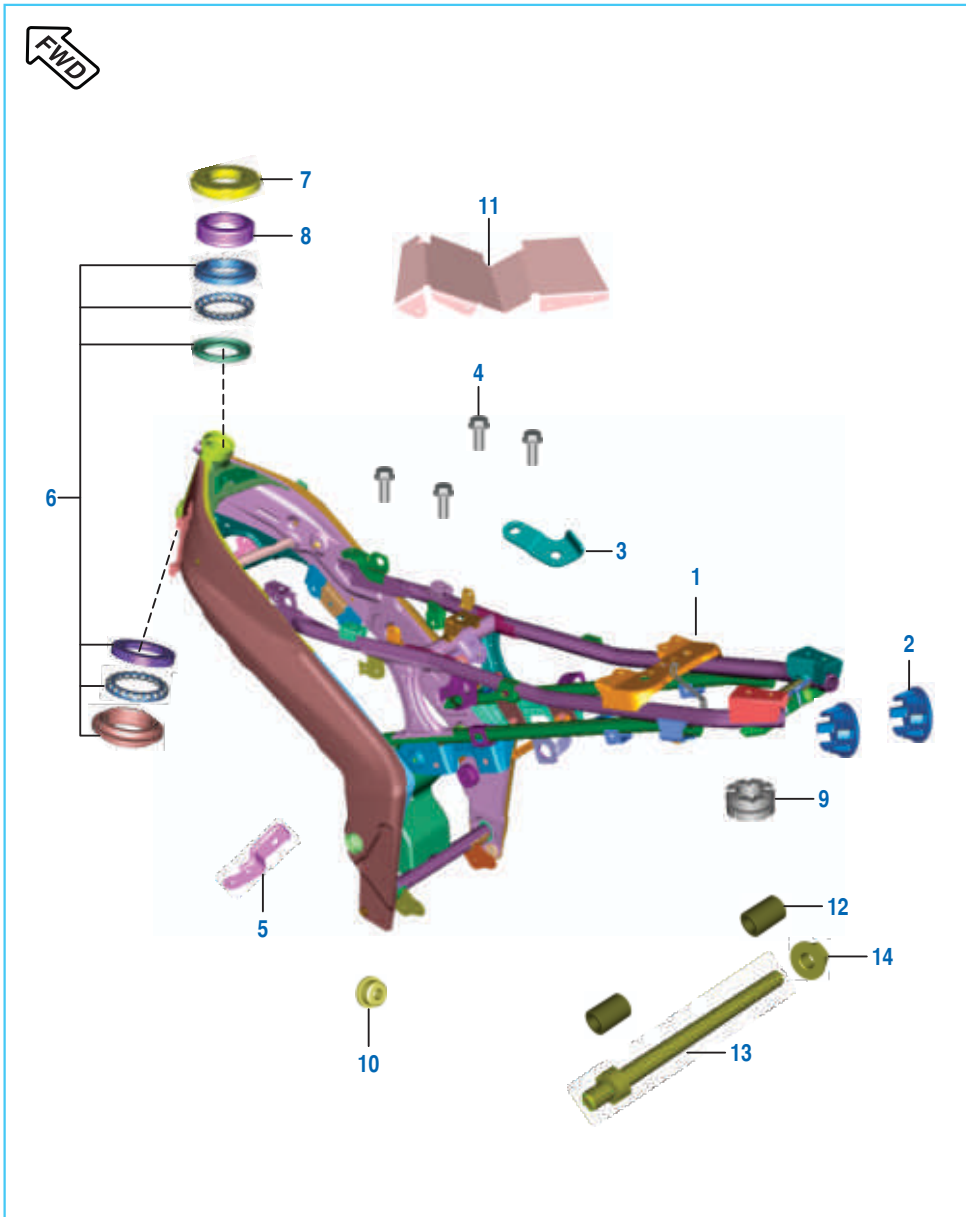Frame and Frame Fittings




No.	Part No.	Description	Qty.	Remarks
1	JF 1111 73	Frame Assembly Complete	1	Without Bearing Race
2	JL 1111 03	Cap Tube End	2	
3	JF 1138 23	Bracket HT Coil MTG Loose	1	
4	KA DF06 16	Bolt Flanged	4	
5	JF 1138 32	Bracket Horn Mtg LH	1	
6	36 JG00 11	Kit Steering Head Bearing	1	
7	DK 1810 75	Nut Steering	1	
8	PD 1510 06	Cup Steering	1	
9	JL 1138 09	Grommet Air Filter Resting	1	
10	DT 1813 22	Plug 1	1	
11	JF 1138 34	Heat Sheath	1	
12	JF 2312 19	Bush	2	
13	LA J000 20	Bolt Stud	1	
14	LC G000 16	Nut Hex Flange	1	

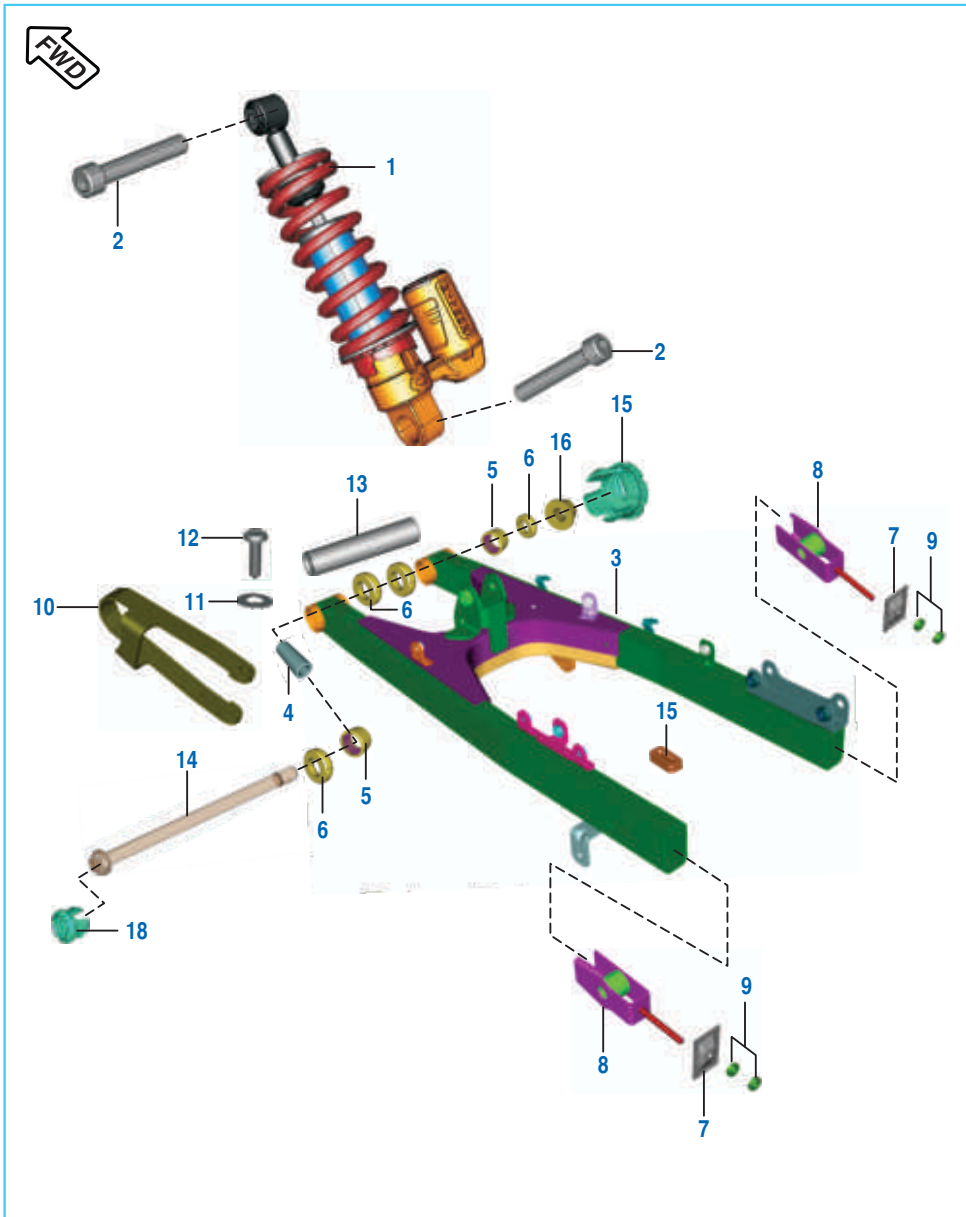Swing Arm / Rear Shock Absorber




No.	Part No.	Description	Qty.	Remarks
1	JF 1220 00	Shockabsorber Mono	1	
2	LA C000 19	Bolt Socket M10 X 1.25 X 55	2	
3	JF 1220 05	Assembly Swing Arm	1	
4	DG 1710 16	Sleeve	2	
5	DG 1710 18	Bearing - Needle	2	
6	DG 1710 19	Seal - Oil	4	
7	JZ 1220 12	Plate Chain Adjuster	2	
8	JZ 1220 08	Adjuster Chain	2	
9	39 0292 15	Hexagon Nut - M6 x 1	4	
10	JF 1220 06	Slider Chain	1	
11	39 0454 11	Washer - Plain	2	
12	39 0553 02	Screw - Self Tapping	2	
13	JL 1220 08	Spacer Central Swing Arm	1	
14	JL 1220 26	Shaft Swing Arm Assembly	1	
15	DT 1138 48	Cap Swing Arm Pivot	2	
16	39 1053 15	Nut	1	

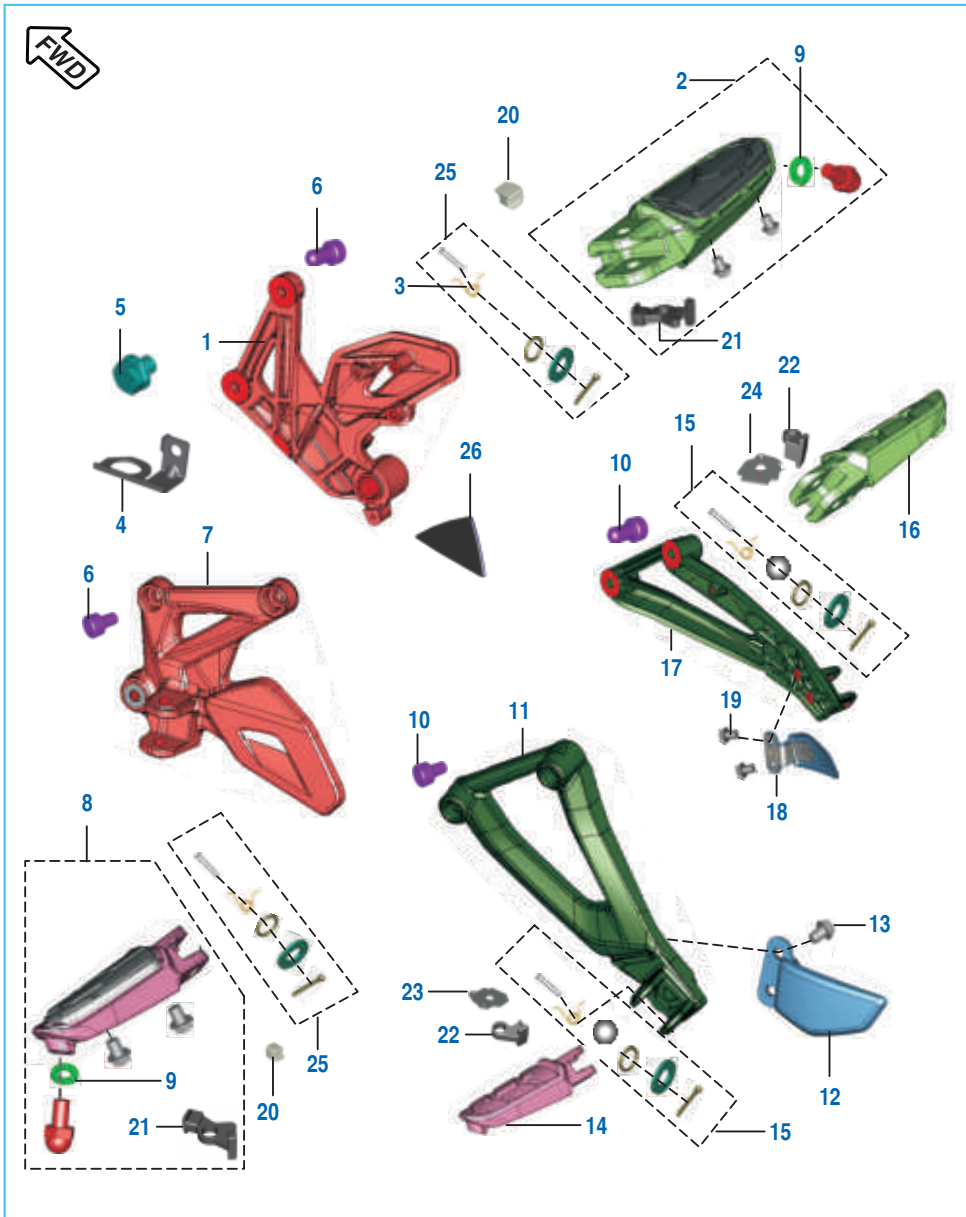Pillion Foot Rest / Holder




No.	Part No.	Description	Qty.	Remarks
1	JL 1130 02	Holder Step RH	1	
2	JF 1130 09	Step Assembly RH	1	
3	JL 1130 12	Spring Torsion	2	
4	JL 1130 33	Bracket Rear Brake Switch	1	
5	39 2475 04	Bolt-Hexagon Head Flange M6	1	
6	KA CA08 20	Bolt-Socket Dia-08 L-20	4	
7	JL 1130 57	Step Holder LH	1	
8	JL 1130 00	Step Assly Main LH	1	
9	LD A000 13	Washer Plain Dia 6.4XDia	1	
10	LA C000 16	Bolt Socket M8X35	4	
11	JL 1130 13	Step Holder - Pillion LH	1	
12	JL 1130 26	Flap Pillion Holder LH	1	
13	KA DE06 10	Bolt Flanged	2	
14	56 JL01 01	Step Pillion Assy Complete	1	
15	36 JL00 15	Kit Pillion Hardware	2	
16	56 JL02 01	Step Pillion Assy RH	1	
17	JL 1130 15	Step Holder - Pillion RH	1	
18	JL 1130 27	Flap Pillion Holder RH	1	
19	39 1954 04	Bolt - Flanged Small	2	
20	JZ 1130 61	Rubber Pad Footrest-Main	2	
21	JF 1130 07	Damper Footrest	2	
22	JL 1130 36	Rubber Pad Footrest-Pillion	2	
23	DT 1130 14	Lock Plate	1	
24	JF 1130 08	Lock Plate Foot Rest - K11	1	
25	DT 1130 15	Lock Plate RH	1	
26	36 JL00 41	Kit Main Step Hardware	2	
27	JL 1130 43	Tap	1	

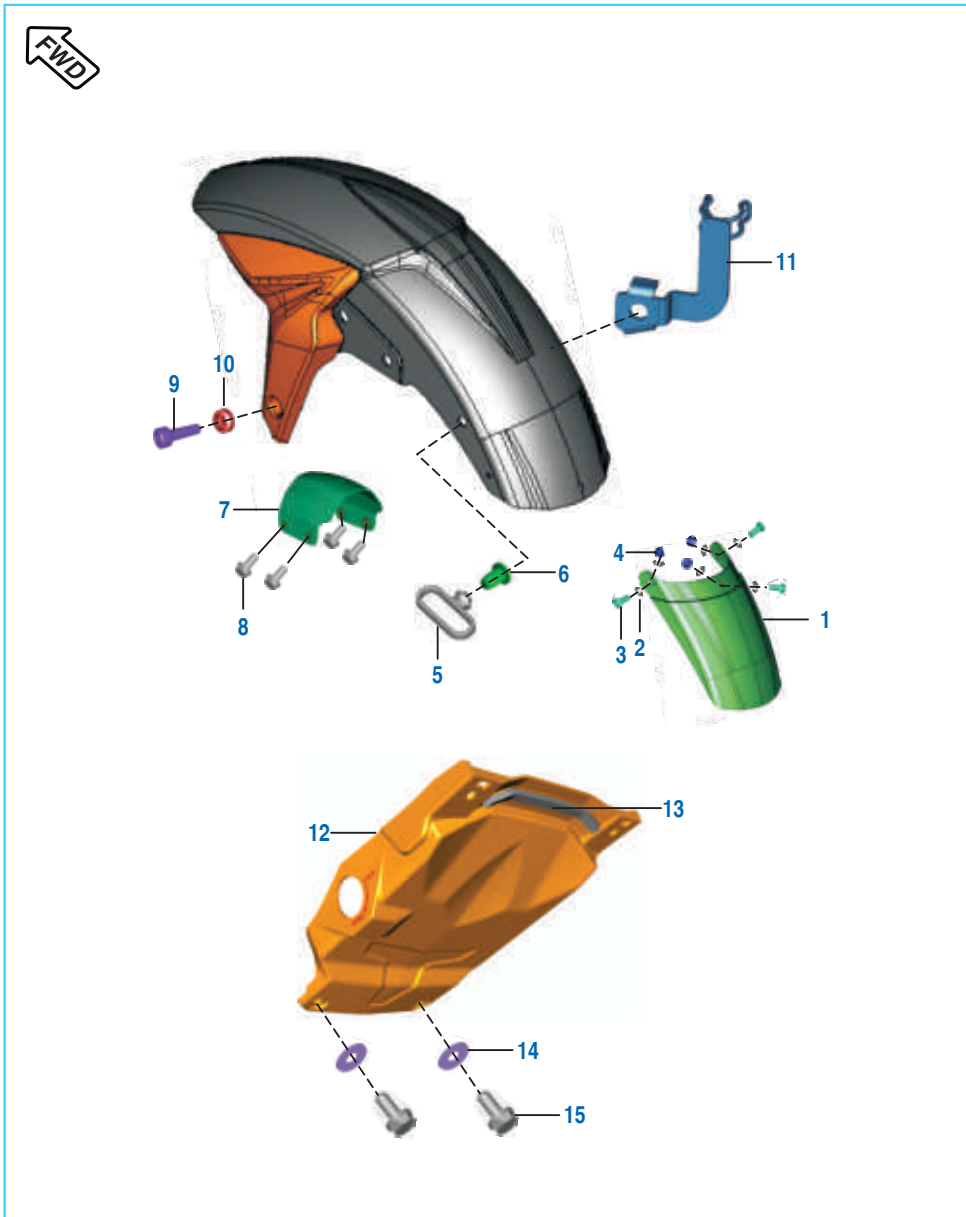Mudguard - Front & Rear



No.	Part No.	Description	Qty.	Remarks
1	JF 1814 03	Mudflap - Front	1	
2	39 0242 11	Washer Plain Small	6	
3	39 2420 01	Screw Pan Cross	3	
4	39 0326 15	Nut Nyloc M5 x 0.8	3	
5	DS 1611 25	Guide - Cable	1	
6	DJ 1610 69	Nail - Cable Guide	1	
7	JF 1814 02	Fender Brace	1	
8	KA DF08 20	Bolt Flanged	4	
9	KA CH06 16	Bolt Socket - M6 x 1 x L16	2	
10	JL 1814 11	Cup Washer Front Fender Mtg.	2	
11	JF 1318 55	Bracket Brake Frt. Hose Clamp Btm.	1	
12	JL 1812 09	Fender Rear Front	1	
13	JL 1812 21	Foam - Rear Fender Front	1	
14	LD B000 23	Washer - Plain	2	
15	39 1943 04	Bolt Flanged - M6	2	

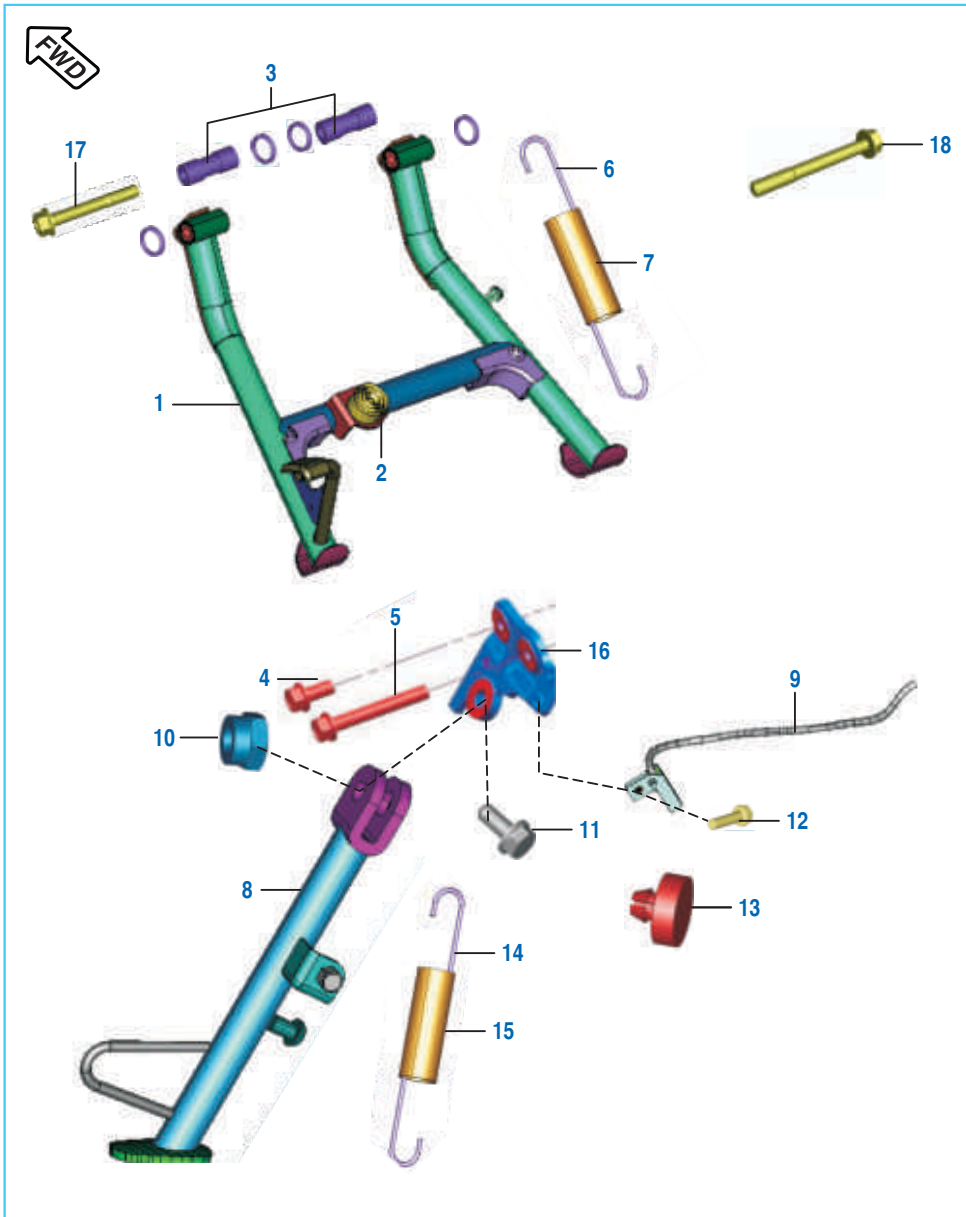Stand Assembly




No.	Part No.	Description	Qty.	Remarks
1	JF 1132 02	Kit Center Stand	1	Magnet Mtg.
2	DG 1611 24	Damper	1	
3	JL 1132 10	Bush Main Stand LH	2	
4	LA D000 73	Bolt Flanged	1	
5	KA Db05 16	Bolt Flanged	1	
6	JL 1132 07	Spring Main Stand	1	
7	JL 1132 12	Cover Spring Main Stand	1	
8	JL 1132 01	Assembly Side Stand	1	
9	JL 4014 02	Switch Side Stand	1	
10	39 0422 15	Nut - Nyloc M10	1	
11	DF 1611 02	Bolt For Side Stand Mounting	1	
12	KA DB05 16	Bolt - Flanged	1	
13	JL 4036 00	Magnet Assembly	1	
14	JL 1132 09	Spring Side Stand	1	
15	DH 1611 46	Cover - Spring Side Stand	1	
16	52 JL00 72	Bracket Side Stand Mtg	1	
17	LA D001 34	Bolt Flange - M8x1.25xL60	1	
18	LA D001 35	Bolt Flange -M8x1.25xL70	1	

Tube / Tyre / Rim




No.	Part No.	Description	Qty.	Remarks
1	JF 1310 10	Tyre Tubeless (Size 80/100-17)	1	Not Serviceable
2	DK 1510 26	Valve Tubeless Tyre	2	
3	JF 1310 11	Wheel Front 1.85 x 17	1	
4	JF 1312 06	Wheel Rear 2.15 x 17	1	Not Serviceable
5	JF 1312 22	Tyre 110 / 80-17	1	

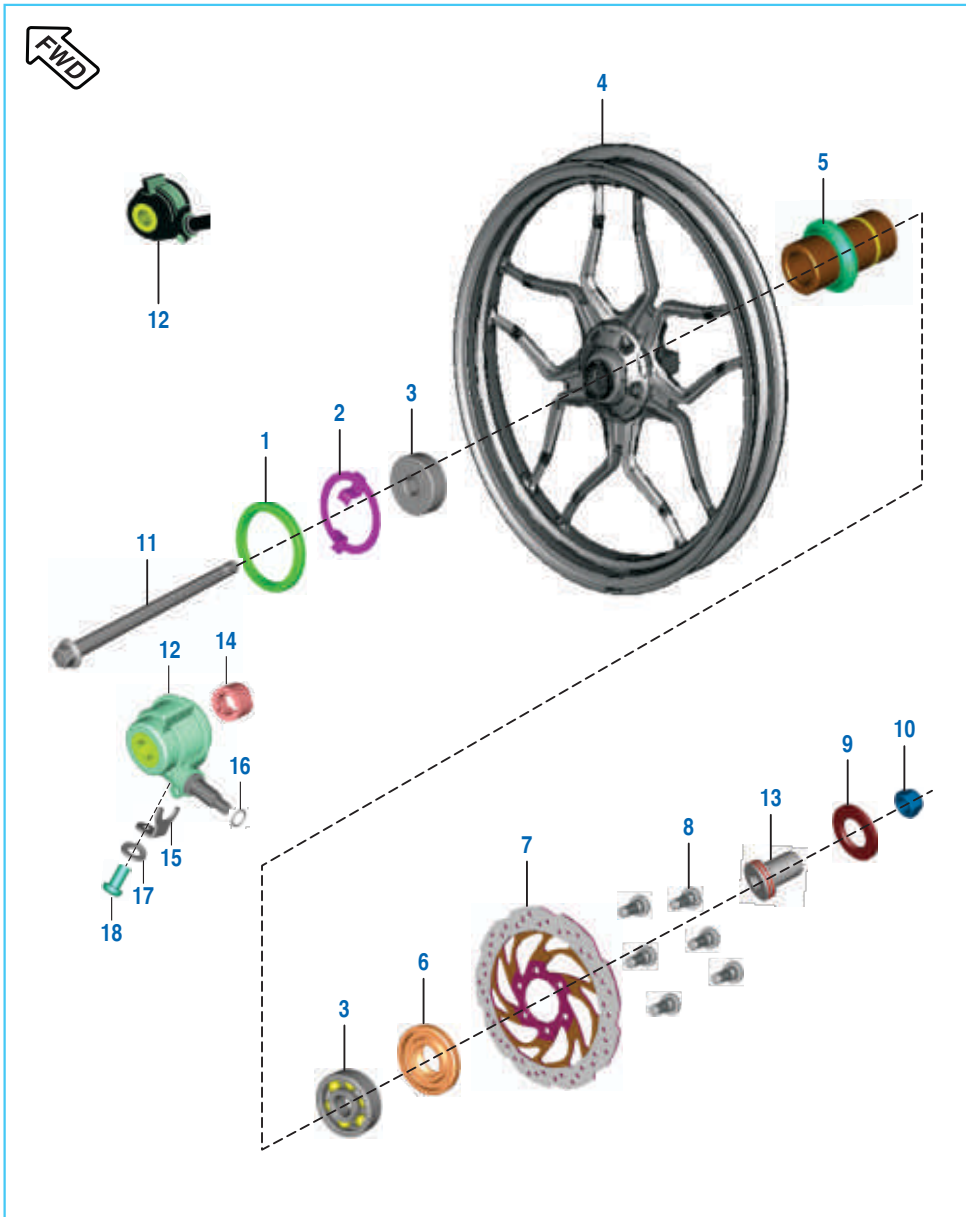Front Hub




No.	Part No.	Description	Qty.	Remarks
1	DE 1510 08	Seal Oil	1	
2	DE 1510 12	Plate Drive	1	
3	KP BB63 01	Bearing Ball - C3 Clearance	2	
4	JF 1310 11	Wheel Front 1.85 x 17	1	
5	JF 1310 18	Assembly Collar Front Wheel	1	
6	30 1510 33	Seal Oil	1	
7	JF 1318 00	Disc Front	1	
8	JD 1318 11	Special Bolt M8	6	
9	AN 1013 47	Washer Thrust	1	
10	KC JD12 12	Nut U - M12	1	
11	JF 1310 08	Axle Front	1	
12	JN 1316 03	Case Meter Assembly with Cable	1	
13	JF 1310 16	Spacer Front Wheel	1	
14	DJ 1510 94	Rotor Speedo +	1	
15	30 1511 18	Stopper For Bushing	1	
16	59 2100 19	"O" Ring	1	
17	39 0900 12	Washer - Spring	1	
18	KB BM04 08	Screw Pan Cross	1	

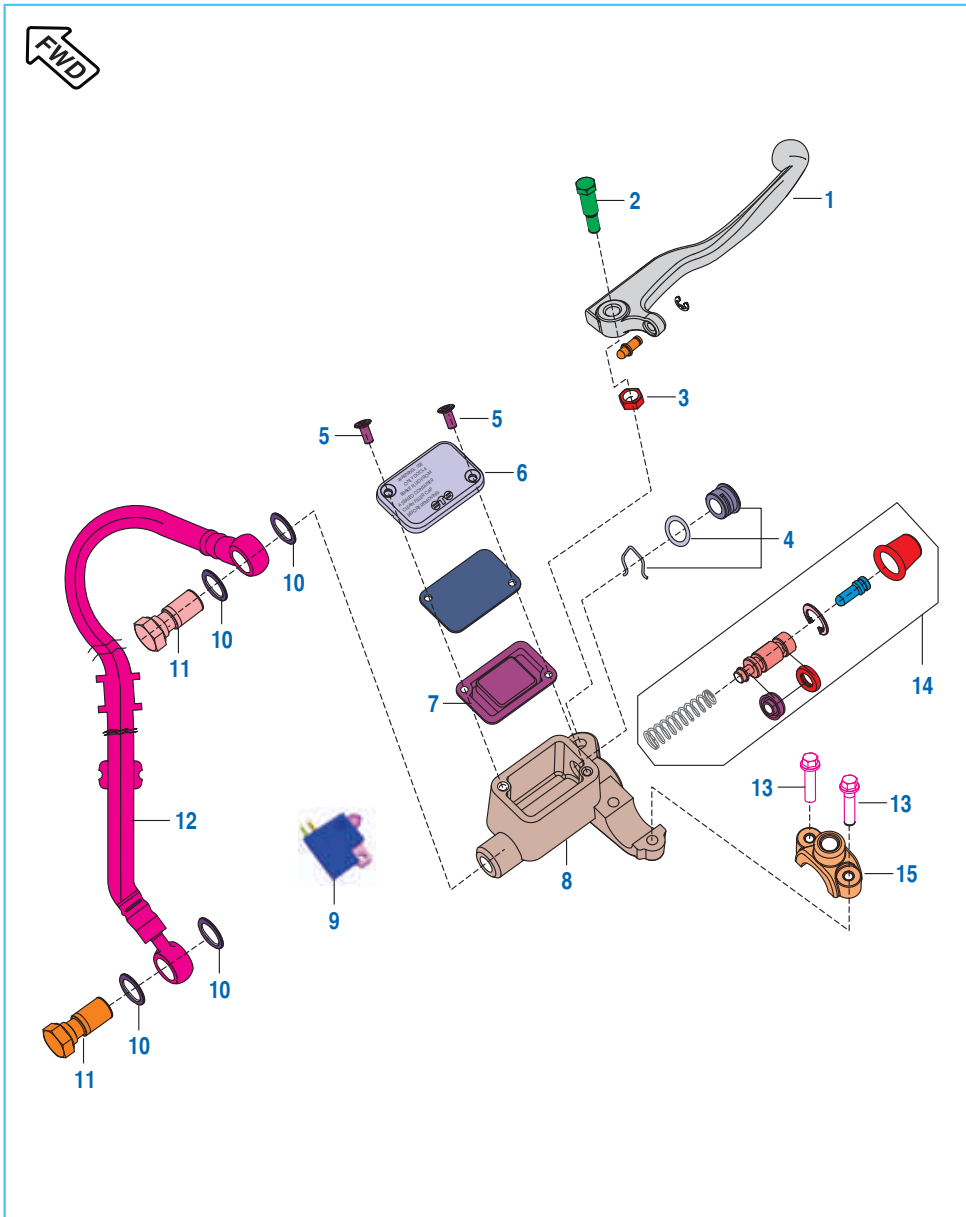Front Master Cylinder




No.	Part No.	Description	Qty.	Remarks
1	JG 1610 10	Brake Lever Front	1	
2	DJ 1910 29	Bolt Front Bracket I	1	
3	DJ 1910 30	Nut	1	
4	36 DH19 02	Oil Window Kit	1	
5	DJ 1910 31	Screw	2	
6	DE 1910 29	Cover - Reservoir	1	
7	DE 1910 28	Diaphragm	1	
8	JF 1318 07	Master Cylinder Assembly	1	
9	DJ 2011 09	Front Brake Switch (Minda)	1	
10	DE 1910 10	Washer - Copper	4	
11	DK 1510 69	Bolt - Banjo	2	
12	JF 1318 02	Brake Hose	2	
13	KA DD08 30	Bolt Flanged	2	
14	36 JF00 18	Major Kit M-11	1	
15	DE 1910 33	Clamp - Holder : RH	1	
16	36 JF00 19	Minor Kit	1	

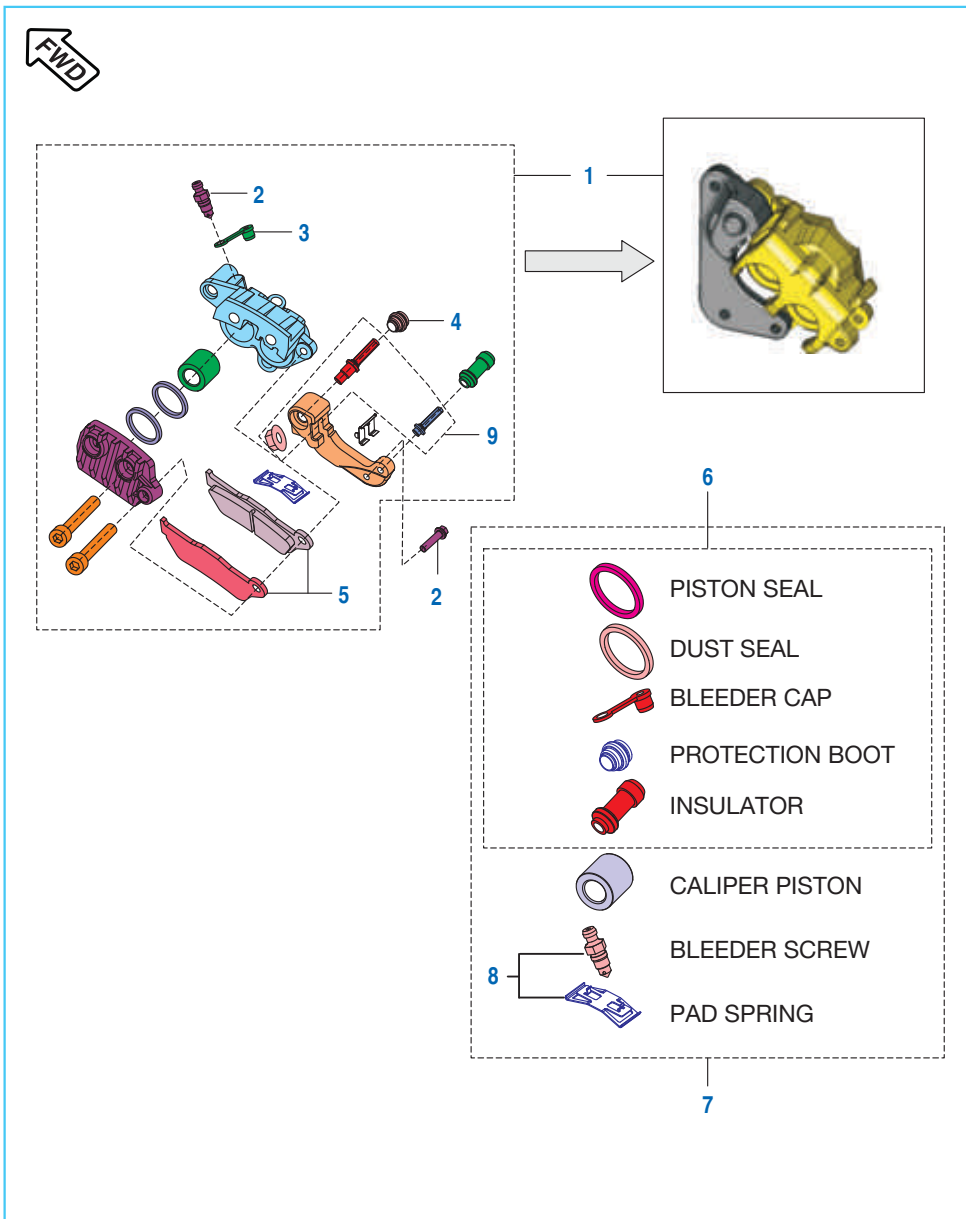Front Disc Brake




No.	Part No.	Description	Qty.	Remarks
1	JF 1318 06	Integral Caliper Assembly	1	
2	JL 1318 06	Screw Bleeder	1	
3	DE 1510 47	Bleeder Cap	1	
4	JL 1318 07	Boot	1	
5	JW 1318 07	Pad Set Brake Front	1	
6	36 JF00 16	Caliper Minor Kit	1	
7	36 JF00 15	Caliper Major Kit	1	
8	36 JF00 17	Caliper Mini Kit	1	
9	JW 1318 10	Ankor Pin Kit	1	

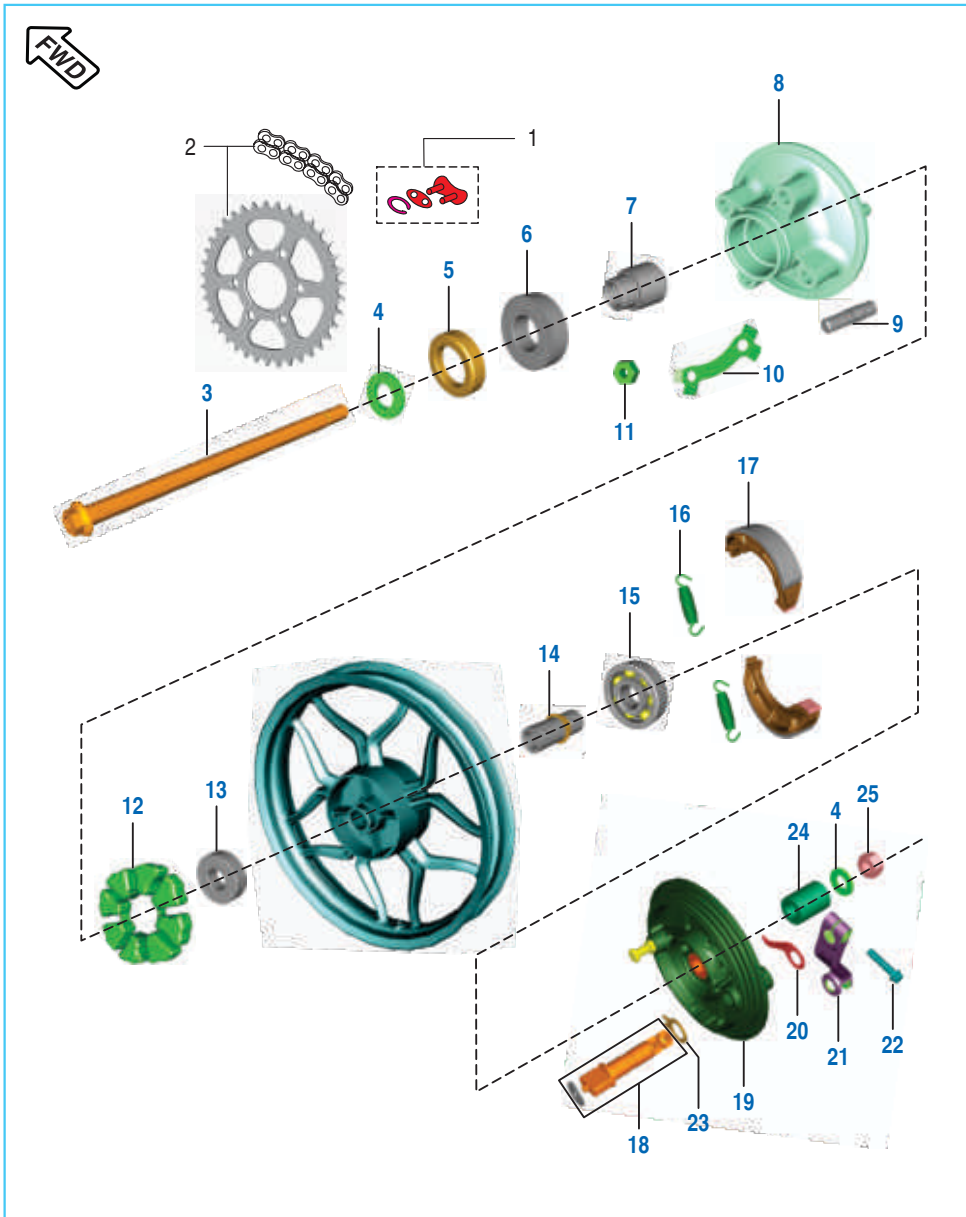Rear Hub




No.	Part No.	Description	Qty.	Remarks
1	JF 2326 12	Lock Set	1	
2	36 JF00 06	Kit Chain Sprocket	1	
3	JF 1312 10	Axle Rear	1	
4	LD B000 29	Washer Rear Axle RH	2	
5	DS 1510 57	Dust Cover Rear	1	
6	KP BC60 04	Bearing Ball - C3 Clearance	1	
7	JD 1312 12	Sleeve	1	
8	JN 1312 03	Coupling	1	
9	DS 1510 73	Stud M10	4	
10	PF 1312 20	Washer Lock For Nut A/F17	2	
11	LC B000 05	Nut Hex A/F 17	4	
12	JG 1312 19	Coupling Rubber	1	
13	KP BB62 02	Bearing Ball C3 Clearance	1	
14	30 1510 75	Collar Bearing	1	
15	KP BB63 02	Bearing Ball C3 Clearance	1	
16	30 1510 69	Spring	2	
17	JN 1318 12	Brake Shoe Assembly	2	
18	JC 1510 04	Cam Brake Assembly	1	
19	JF 1316 01	Panel Rear Brake Assembly	1	
20	JC 1510 06	Indicator	1	
21	JF 1316 00	Cam Lever	1	
22	JB 1312 24	Hex Bolt With Flange M6 - 30L	1	
23	JC 1510 12	Special Washer Panel RR	1	
24	JF 1312 09	Spacer Pannel Side	1	
25	LC J000 02	Nut U - M14	1	

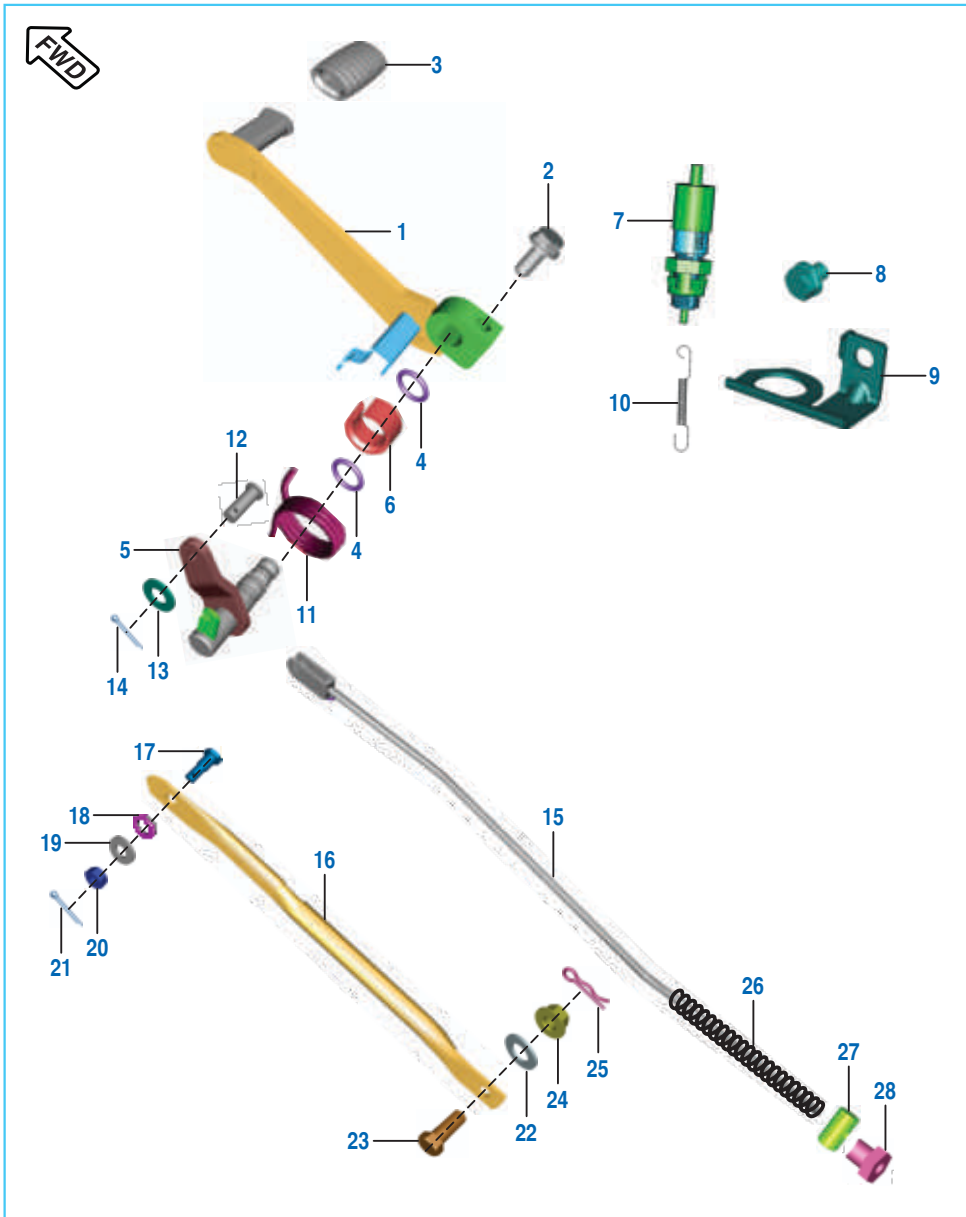Rear Brake Pedal




No.	Part No.	Description	Qty.	Remarks
1	JF 1610 01	Brake Pedal	1	
2	59 0400 48	Bolt - Flanged : M8	1	
3	DG 1013 39	Damper	1	
4	39 1537 21	O Ring	2	
5	JL 1610 05	Shaft Assy Brake Lever	1	
6	DH 1910 13	Spacer Brake Shaft assembly	1	
7	31 2010 79	Switch - Rear Brake	1	
8	39 2475 04	Hex. head bolt	1	
9	JL 1130 33	Bracket Rear brake switch	1	
10	JL 1610 06	Spring Rear Brake Switch	1	
11	DH 1910 06	Spring - Brake Pedal	1	
12	30 1910 38	Pin	1	
13	39 0198 11	Washer Plain	1	
14	39 0808 08	Split Pin	1	
15	JL 1318 10	Brake Rod	1	
16	DJ 1510 42	Rod Torque	1	
17	DH 1510 29	Step Bolt Torque Rod	1	
18	39 0789 12	Washer Spring	1	
19	39 1540 11	Plain Washer	1	
20	39 0694 15	Hex Lock Nut - M8 x 1.25	1	
21	LH B000 01	Pin Snap	1	
22	39 0199 11	Plain Washer	1	
23	DG 1910 48	Bolt	1	
24	39 1225 15	Hex Nut Flange - M10	1	
25	39 0807 08	Pin Snap	1	
26	JC 1910 08	Spring Brake Rod	1	
27	JC 1910 11	Pin Brake	1	
28	JC 1910 07	Nut Brake Rod	1	

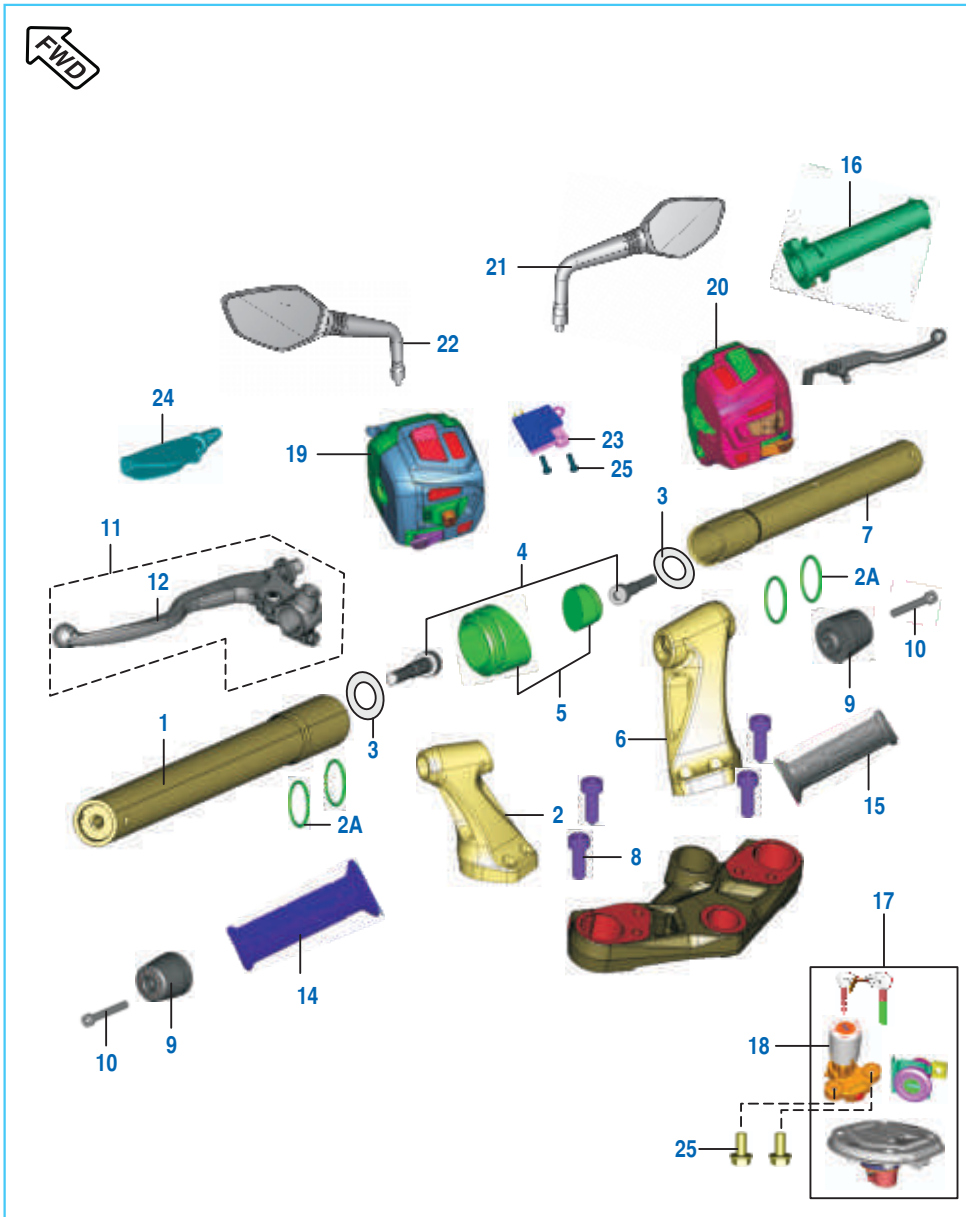Handle Bar Assy




No.	Part No.	Description	Qty.	Remarks
1	JL 1510 21	Handle Bar Tube LH Assembly	1	N.I.
2	JF 1510 25	Holder Handle LH	1	
2A	JL 1510 38	O ring	4	
3	39 1180 11	Washer - Plain	2	
4	LA C000 20	Bolt Socket M8 x 1.25P x 55L	2	
5	JL 1510 28	Plug Handle Holder	2	
6	JF 1510 27	Holder Handle RH	1	
7	JL 1510 34	Handlebar Tube Assembly RH	1	
8	LA C000 59	Bolt - Socket	4	
9	JL 1510 35	Handle Bar Weight	2	
10	39 2427 04	Bolt - Hex Socket Head	2	
11	JF 1610 02	Lever & Holder Assembly LH	1	
12	JG 1610 08	Lever LH For New CI Switch	1	
13	DJ 2012 46	Clutch Switch (6Amp Diode)	1	
14	JL 1610 03	Handle Grip LH	1	
15	DT 1610 05	Grip Hand Assy RH	1	
16	JG 1510 22	Pipe - Throttle	1	
17	JF 2326 12	Lock Set + Tank Cap	1	
18	JF 4014 03	Switch Ignition	1	
19	JL 4014 00	Switch Control LH	1	
20	JL 4014 05	Switch Control RH AHO	1	
21	JL 2316 01	Mirror Assy RH	1	
22	JL 2316 00	Mirror Assy LH	1	
23	DJ 2011 09	Front Brake Switch (Minda)	1	
24	DS 1910 52	Lever Boot LH	1	
25	KA DF06 14	Bolt Flanged	2	

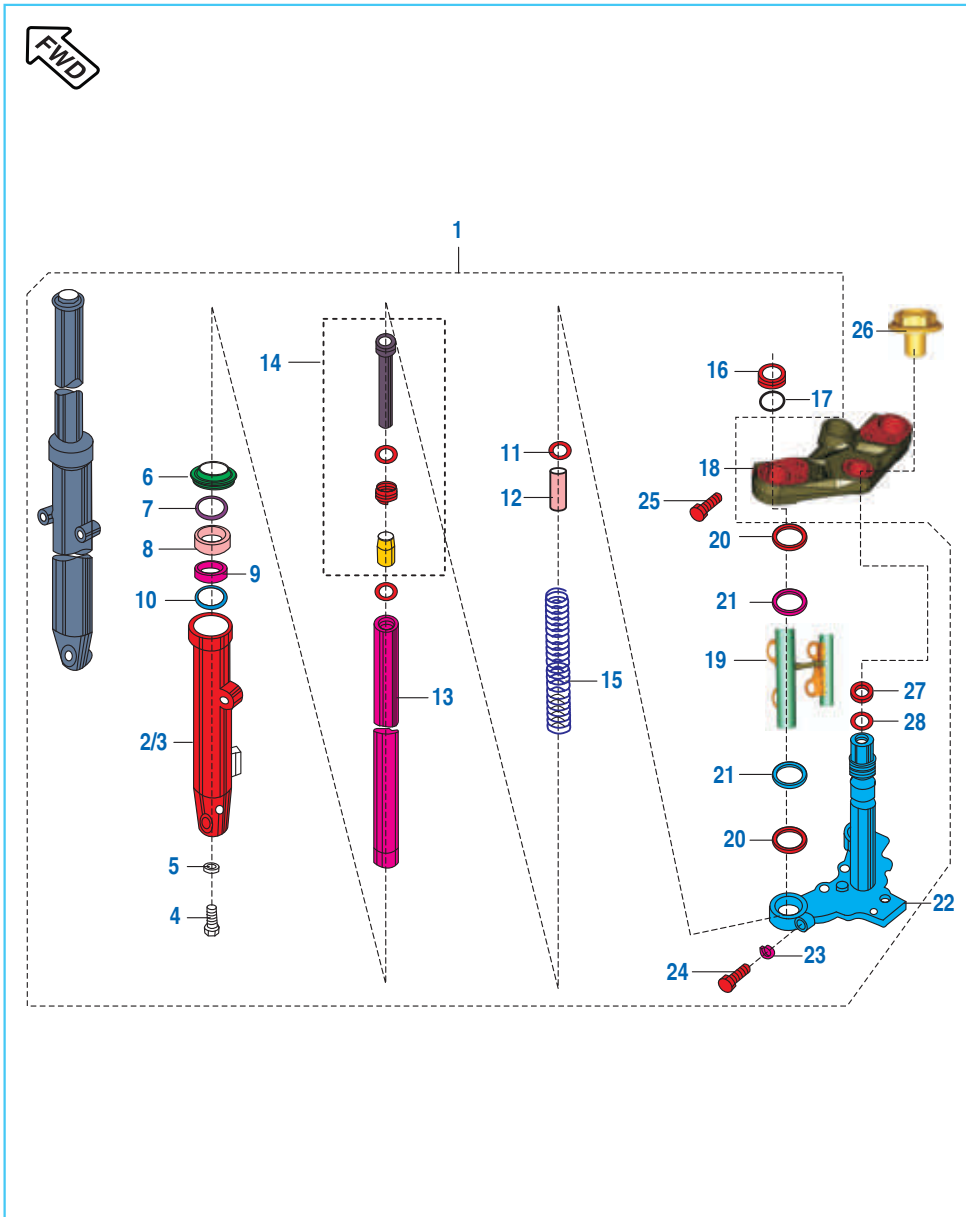Front Fork




No.	Part No.	Description	Qty.	Remarks
1	JF 1510 18	Fork Front Assembly	1	
2	JF 1510 31	Tube Outer LH	1	
3	JF 1510 32	Tube Outer RH	1	
4	30 1810 25	Socket Headed Bolt -M10	2	
5	30 1810 26	Copper Washer	2	
6	DJ 1810 89	Inner Dust Seal	2	
7	DJ 1810 88	Oil Seal Stopper	2	
8	DJ 1810 87	Oil Seal (SFN)	2	
9	DS 1810 72	Washer	2	
10	DS 1810 70	Guide Bush	2	
11	DM 1810 10	Washer	2	
12	JF 1510 36	Spacer Tube	2	
13	JF 1510 33	Fork Pipe Spinning	2	
14	36 JF01 38	Kit Cylinder Complete Fork	2	
14E	DS 1810 71	Slide Bush	2	
15	JF 1510 34	Spring Main Spring	2	
16	DH 1810 15	Fork Bolt	2	
17	30 1810 29	O' Ring	2	
18	JF 1510 19	Upper Bracket	1	
19	JF 1812 10	Lamp Shade Assy	1	
20	JC 1810 07	Cover Cushion	4	
21	JC 1810 06	Cove Trail B	4	
22	JF 1210 04	Under Bkt Assy Complete	1	
23	JC 1810 20	Spring Washer	2	
24	DK 1810 28	Bolt	2	
25	DG 1810 08	Bolt - Socket	2	

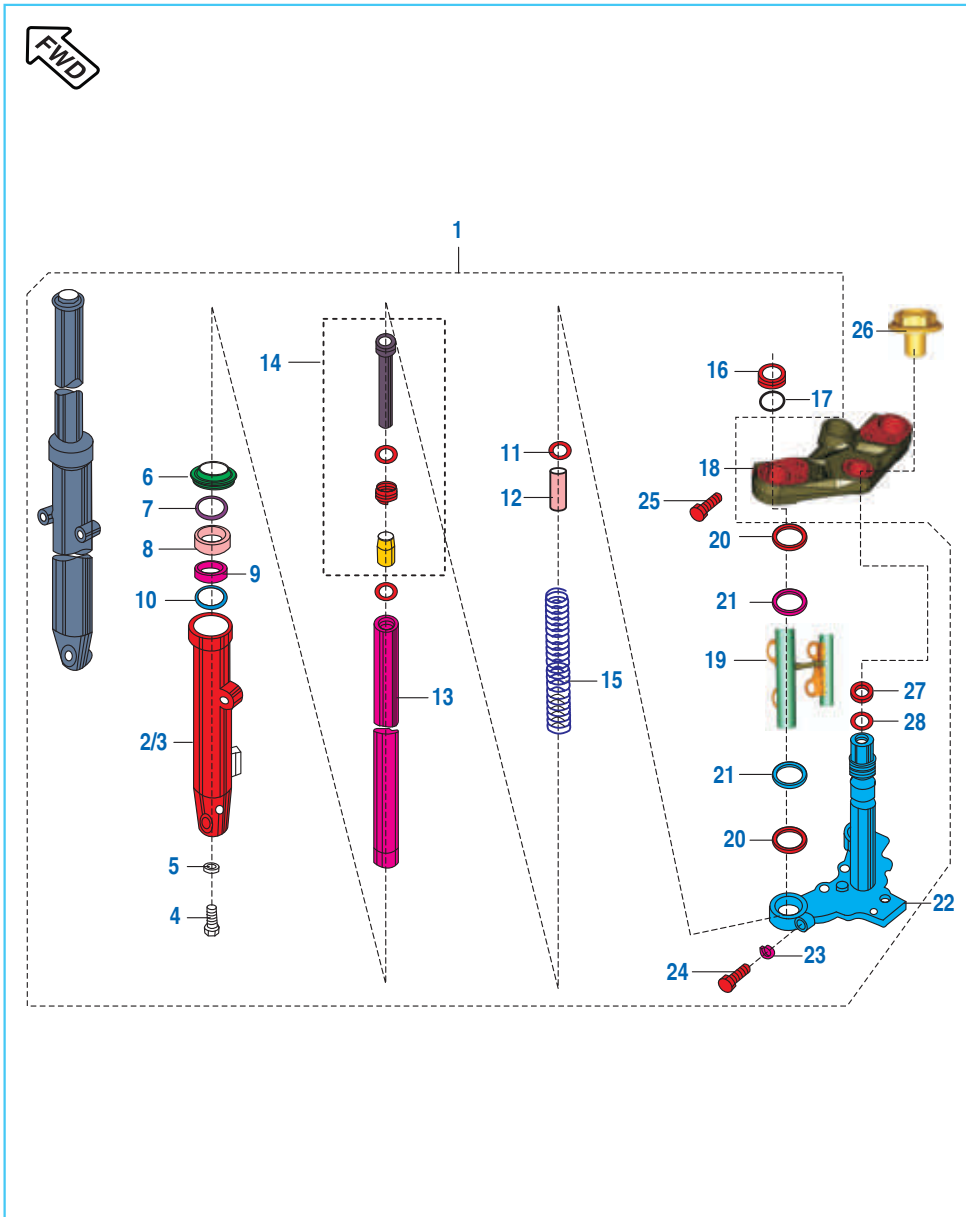Front Fork




No.	Part No.	Description	Qty.	Remarks
26	JY 1510 11	Steering Top Bolt	1	
27	DG 1810 04	Oil Seal	1	
28	DG 1810 03	Washer	1	

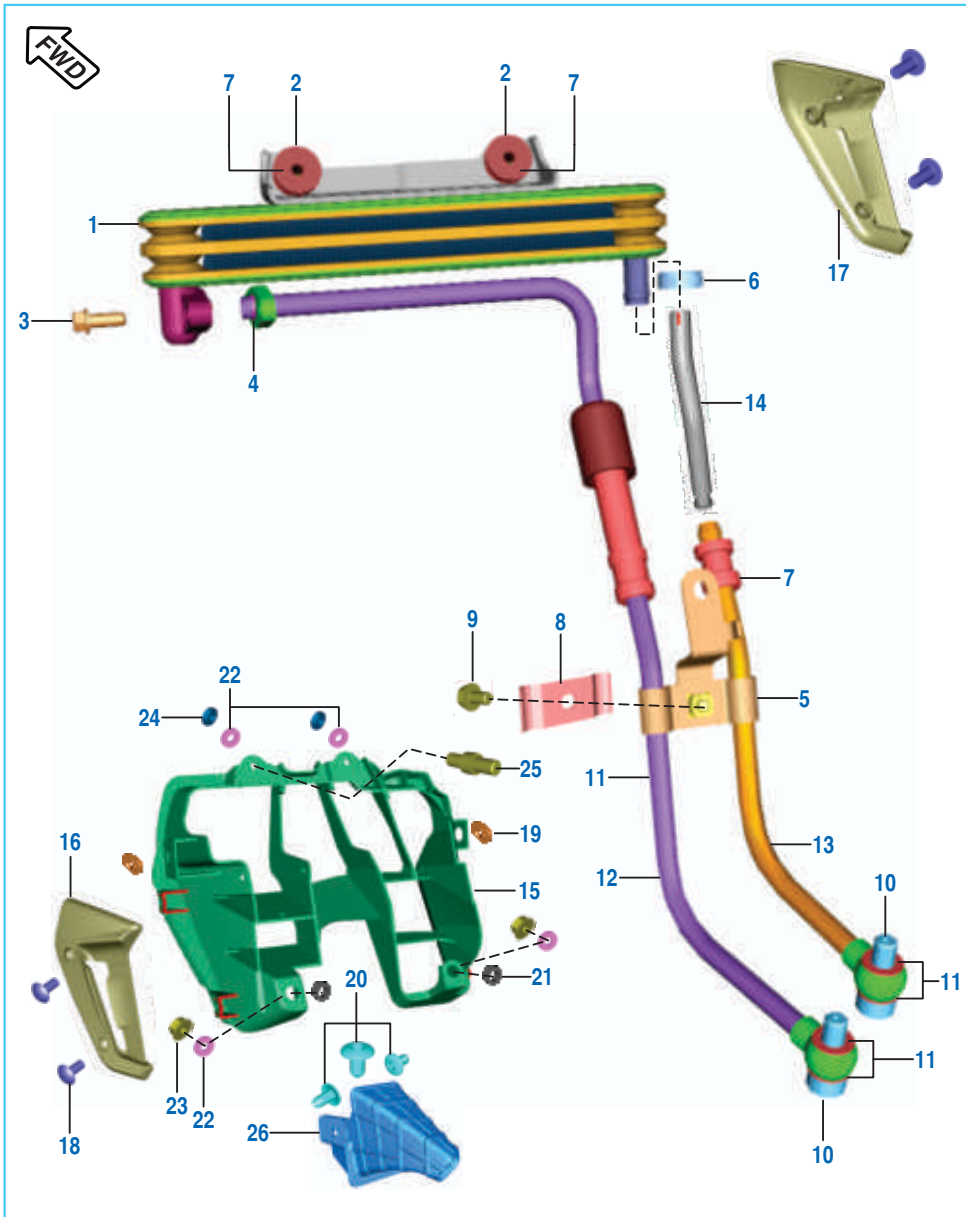Oil Cooler Assembly




No.	Part No.	Description	Qty.	Remarks
1	JE 5712 15	Assembly 3 Layer Oil Cooler	1	
2	JE 5712 23	Grommet Bracket Oil Cooler	2	
3	39 1672 04	Flange Bolt - M6 x 16	2	
4	DK 1013 40	'O' Ring (Oil Cooler Pipe)	1	
5	JE 5712 40	Bracket Upper Oil Cooler	1	
6	JE 5712 39	Clamp - Oil Cooler	1	
7	JE 5712 27	Sleeve Bkt Oil Cooler	2	
8	JE 5712 25	Bracket Lower Oil Cooler	1	
9	KA DA06 10	Bolt Flanged	1	
10	DK 1013 66	Banjo Oil Cooler Pipe	2	
11	DK 1012 37	Washer Copper Oil Cooler	4	
12	JE 5712 19	Assembly Pipe Inlet 3 Layer Oil Cooler	1	
13	JE 5712 16	Assly Pipe Outlet 3 Layer Oil Cooler	1	
14	JE 5712 18	Rubber Tube Oil Cooler	1	
15	JF 1812 87	Cowl Oil Cooler	1	
16	JF 1812 16	Shroud LH	1	
17	JF 1812 17	Shroud RH	1	
18	KB UA05 12	Screw Truss	4	
19	DS 1410 12	Grommet Side Cover FR	2	
20	JG 1812 59	Rivet Snap	3	
21	JL 1812 56	Grommet For Radiator Cowl	2	
22	39 0711 11	Plain Washer	4	
23	KC GA06 06	Nut Hex Flanged	2	
24	KC BA06 05	Nut Hex Thin	2	
25	JF 1138 22	Stud Horn Mounting Bracket	2	
26	JE 5810 81	Scoop Shroud	1	

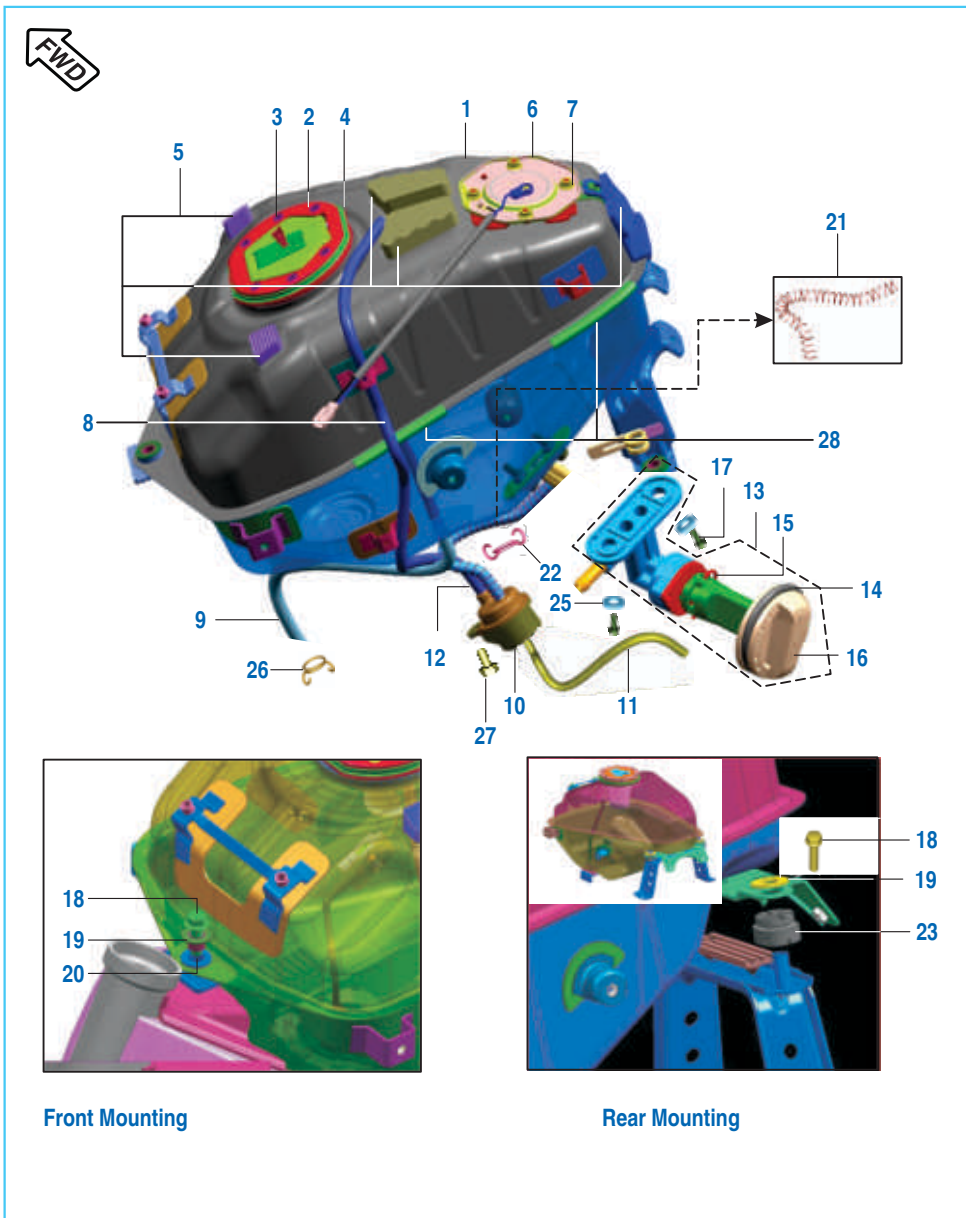Petrol Tank, Cap Tank and Gauge Fuel




No.	Part No.	Description	Qty.	Remarks
1	JL 1718 10	Fuel Tank Assembly Fuel Cock	1	
2	JF 2326 12	Lock Set + Tank Cap	1	
3	KA CB05 16	Bolt Master	6	
4	JL 1710 49	Damper Ring Tank Cap	1	
5	36 JL00 12	Kit Tank Damper	1	
6	JL 4026 02	Sensor Fuel Level	1	
6A	DK 1410 28	'O' ring for Fuel Sensor	1	
7	KC GA05 05	Nut - Flange	4	
8	JL 1710 37	Breather Tube	1	
9	JL 1710 63	Pipe - Drain	1	
10	JL 1718 02	Filter Inline	1	
11	JF 1718 00	Tube Fuel (Carburettor)	1	
12	JL 1710 35	Tube Fuel (Tank)	1	
13	JL 1718 00	Tap Fuel Assembly	1	
14	JL 1710 60	O Ring-For Knob	1	
15	JL 1718 03	Pin Snap For Knob	1	
16	JL 1718 01	Knob Fuel Tap	1	
17	DD 1412 27	Bolt - Flanged	2	
18	KA DF08 20	Bolt Tank mtg Front	3	
19	JL 1710 19	Sleeve Tank Mtg Front	3	
20	JL 1710 18	Grommet Tank Mtg Front	1	
21	JL 1710 85	Spring Fuel Tube	1	
22	BA 1220 03	Pipe Clip	6	
23	JL 1710 20	Grommet Tank Mtg Rear	2	
24	JL 1710 96	Sealing Ring Fuel Cock	1	
25	39 0740 11	Washer (non Metallic)	1	
26	DG 1410 28	Clamp	1	
27	KA DD06 12	Bolt Flanged	1	
28	JL 1710 38	Beading Tank LH	2	

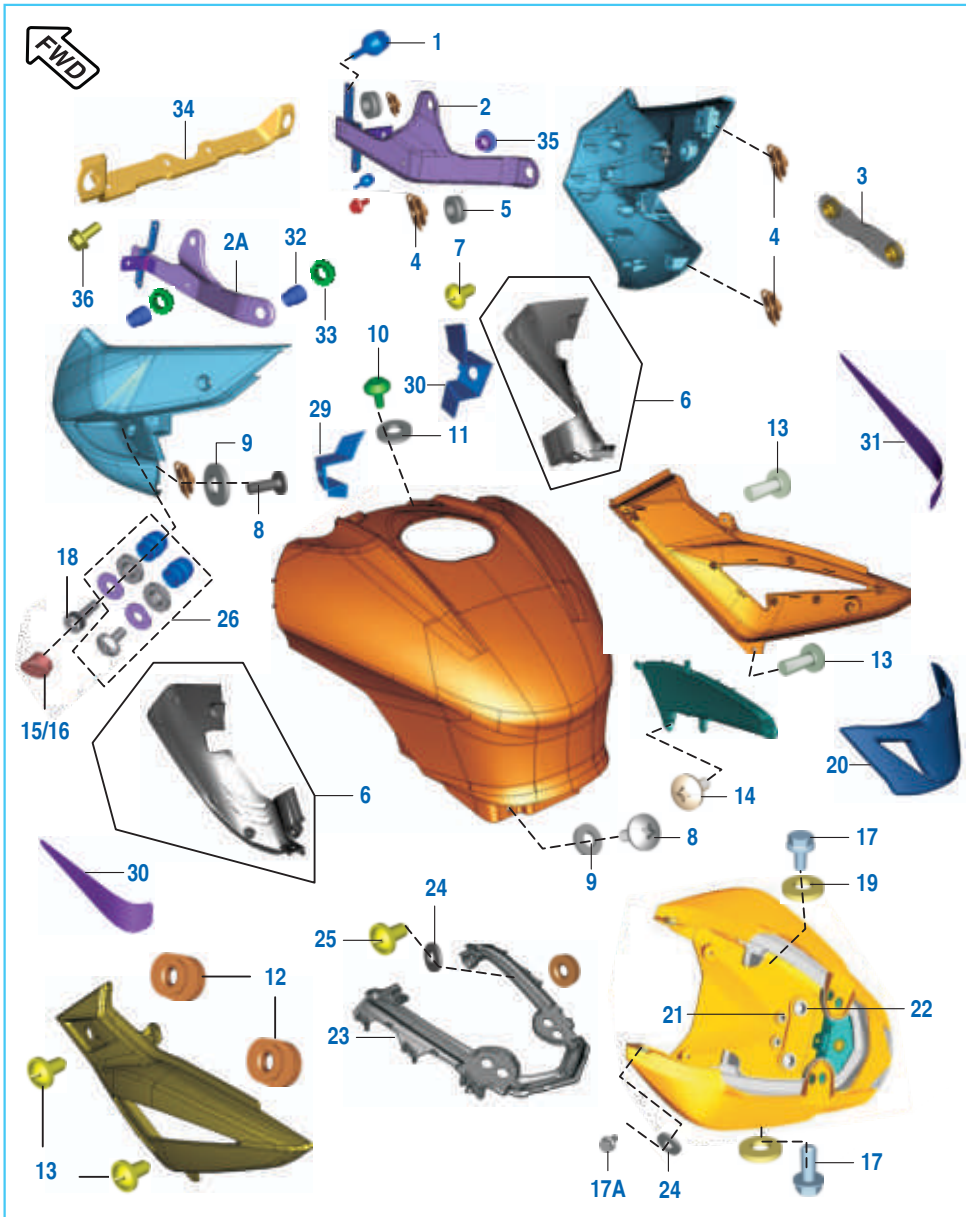Fittings - Petrol Tank Cover, Side Covers & Cover Seat




No.	Part No.	Description	Qty.	Remarks
1	JL 1710 57	Damper	4	
2	JF 1710 09	Bracket Side Cover Mtg LH	1	
2A	JF 1710 04	Bracket Side Cover Mtg RH	1	
3	DT 1138 54	Bracket Fairing Mtg Loose	1	
4	DJ 1612 29	Clip Nut	16	
5	JL 1710 24	Damper Structure Mtg	6	
6	JF 1710 01	Tank Cover Central	1	
7	39 1778 02	Screw - Tapping : 4 X 14	12	
8	39 1907 01	Screw - Truss Cross : M5	3	
	LB U000 09	Screw	2	
	KB UB05 16	Screw Truss	8	
9	39 2141 24	Washer	8	
10	LA C000 22	Bolt Socket-Special Head	4	
11	31 1610 78	Washer	4	
12	DH 1611 58	Grommet Side Cover RR	2	
13	LB R000 03	Screw	4	
14	59 0200 01	Screw Self Tapping 3.5X9.5	10	
15	JL 1710 62	Grill - Tank Side Cover RH	1	
16	JL 1710 61	Grill - Tank Side Cover LH	1	
17	59 0400 14	Bolt Flanged M6 x 1	6	
18	39 1943 04	Bolt - Flanged	2	
19	39 0239 11	Washer	2	
20	JL 1710 78	Pad Tank Cover	1	

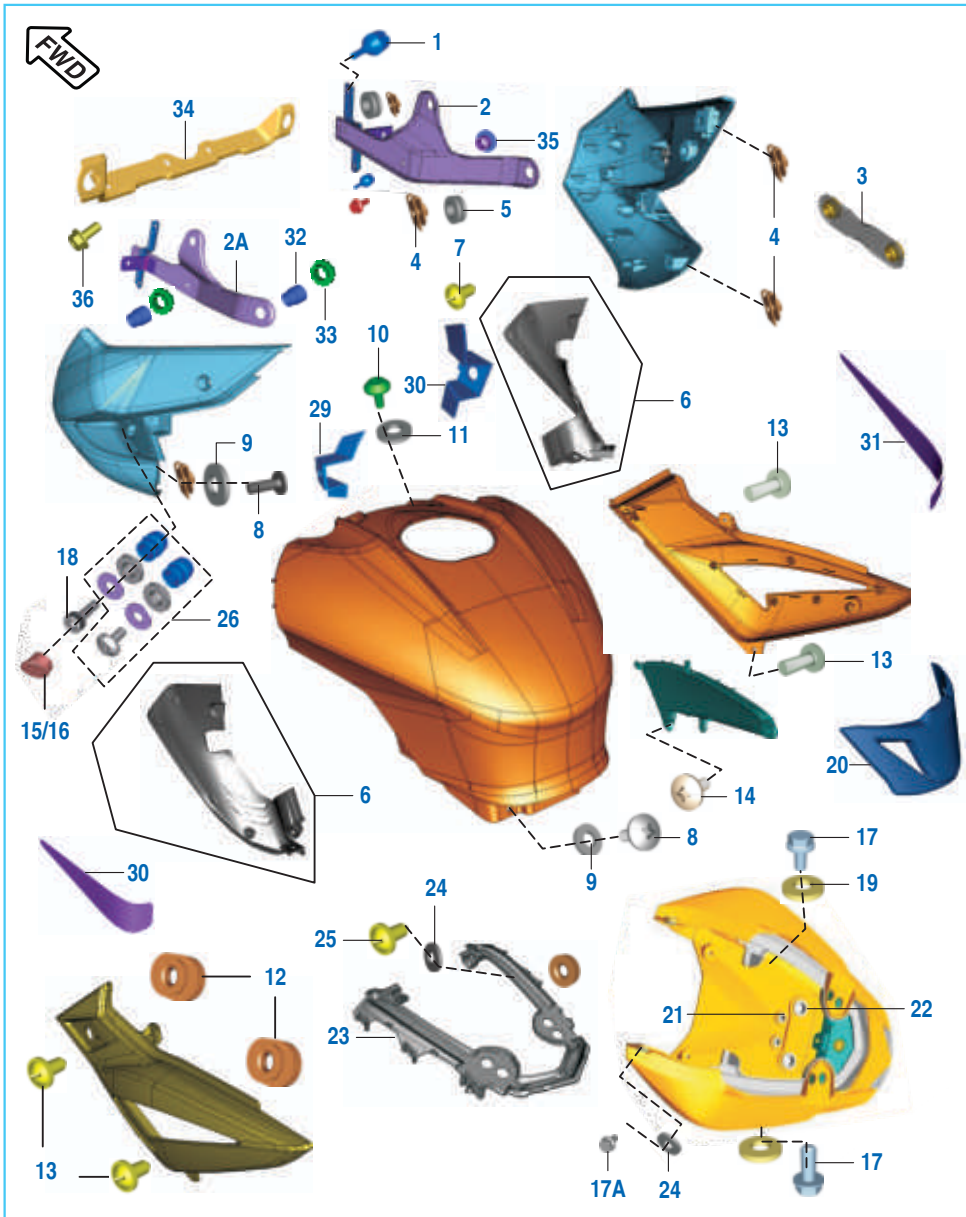Fittings - Petrol Tank Cover, Side Covers & Cover Seat




No.	Part No.	Description	Qty.	Remarks
21	DL 1610 15	Grommet	2	
22	JL 1812 19	Grommet	2	
	JL 1812 20	Grommet - 2 Seat Cowl	2	
23	JL 1812 14	Seal Cowl Central Inner	1	
24	LD A000 07	Washer Plain Small	4	
25	LB R000 03	Screw	4	
26	36 JL00 31	Kit Tank Cover Mtg Hardware	1	
27	KB UA06 12	Screw	2	
28	JL 1718 23	Add-on Bkt LH	1	
29	JL 1718 24	Add-on Bkt RH	1	
30	JL 1910 08	Seat Tape LH	1	
31	JL 1910 09	Seat Tape RH	1	
32	JL 1710 71	Tank Cover Mtg Sleeve	4	
33	JL 1710 70	Tank Cover Grommet	4	
34	JF 1138 45	Bracket Side Cover Mounting	1	
35	JL 1710 40	Sleeve (Structure)	2	
36	KA DA05 12	Bolt Flanged	2	

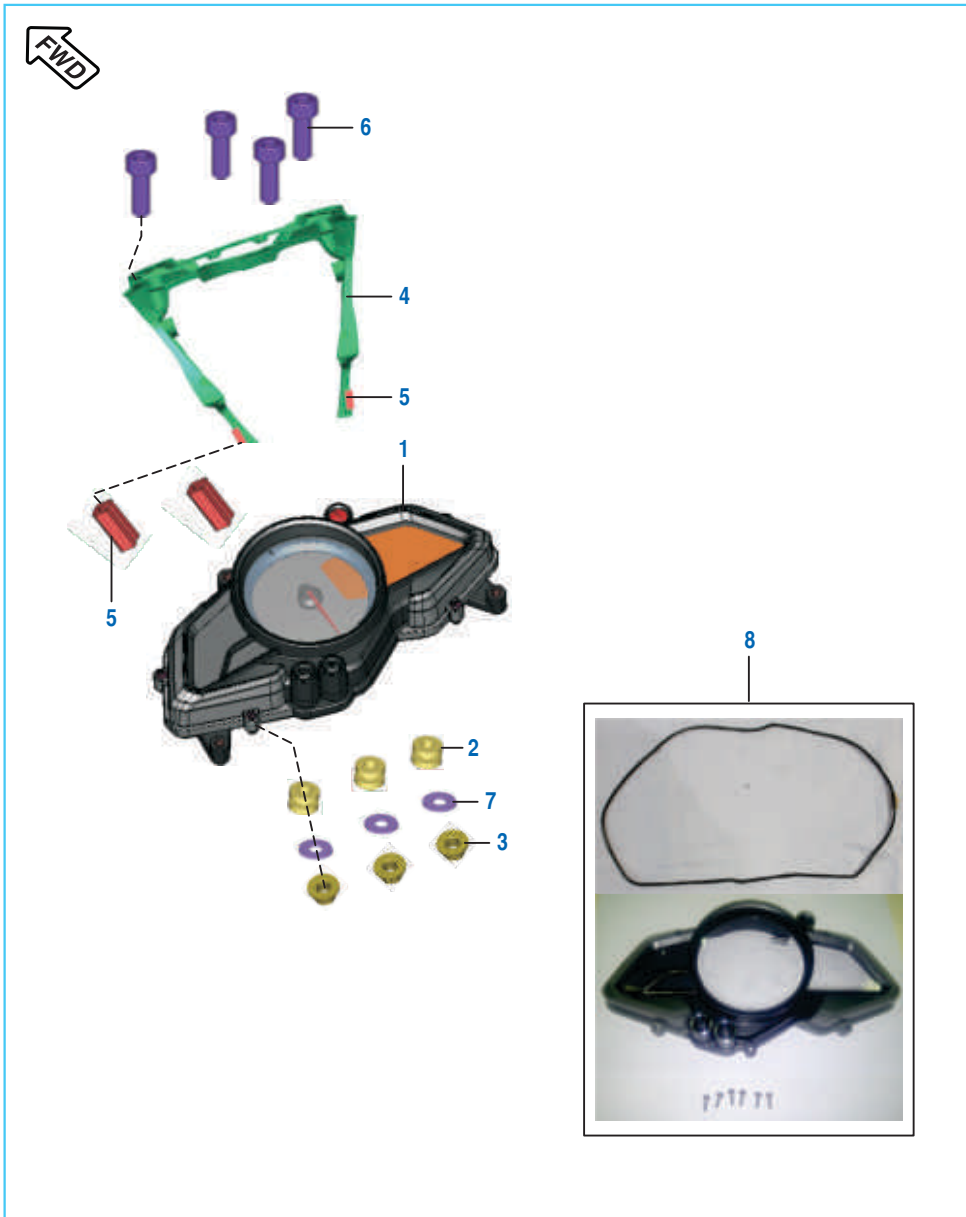Meter Assembly




No.	Part No.	Description	Qty.	Remarks
1	JF 4024 00	Speedometer Assembly	1	
2	JG 1812 38	Grommet Dashboard	3	
3	KC AA05 04	Nut Hex Thick	3	
4	JL 1812 41	Assembly Speedo Flap	1	
5	JB 1812 23	Beading Speedo Flap	2	
	DK 1612 09	TAPE I	2	
6	KA CH05 14	Bolt Socket	4	
7	LD B000 07	Washer Plain	3	
8	YJ F080 01	Top Cover With Sealing Ring	1	For Pricol Make Speedometer only

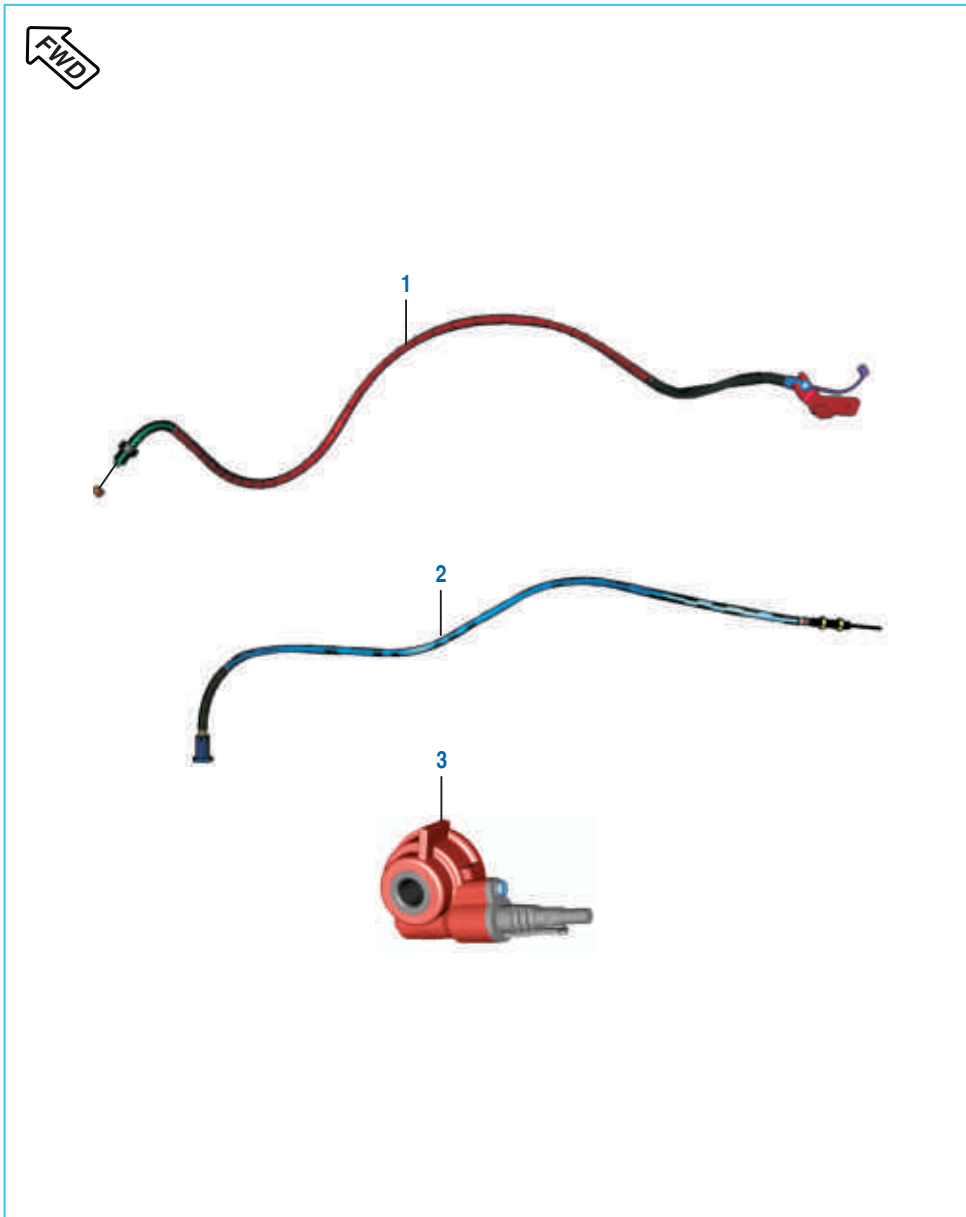Control Cables




No.	Part No.	Description	Qty.	Remarks
1	JF 1612 02	Cable Throttle	1	
2	JF 1612 01	Cable Clutch	1	
3	DH 2010 79	Case Meter Speed Sensor Assembly	1	

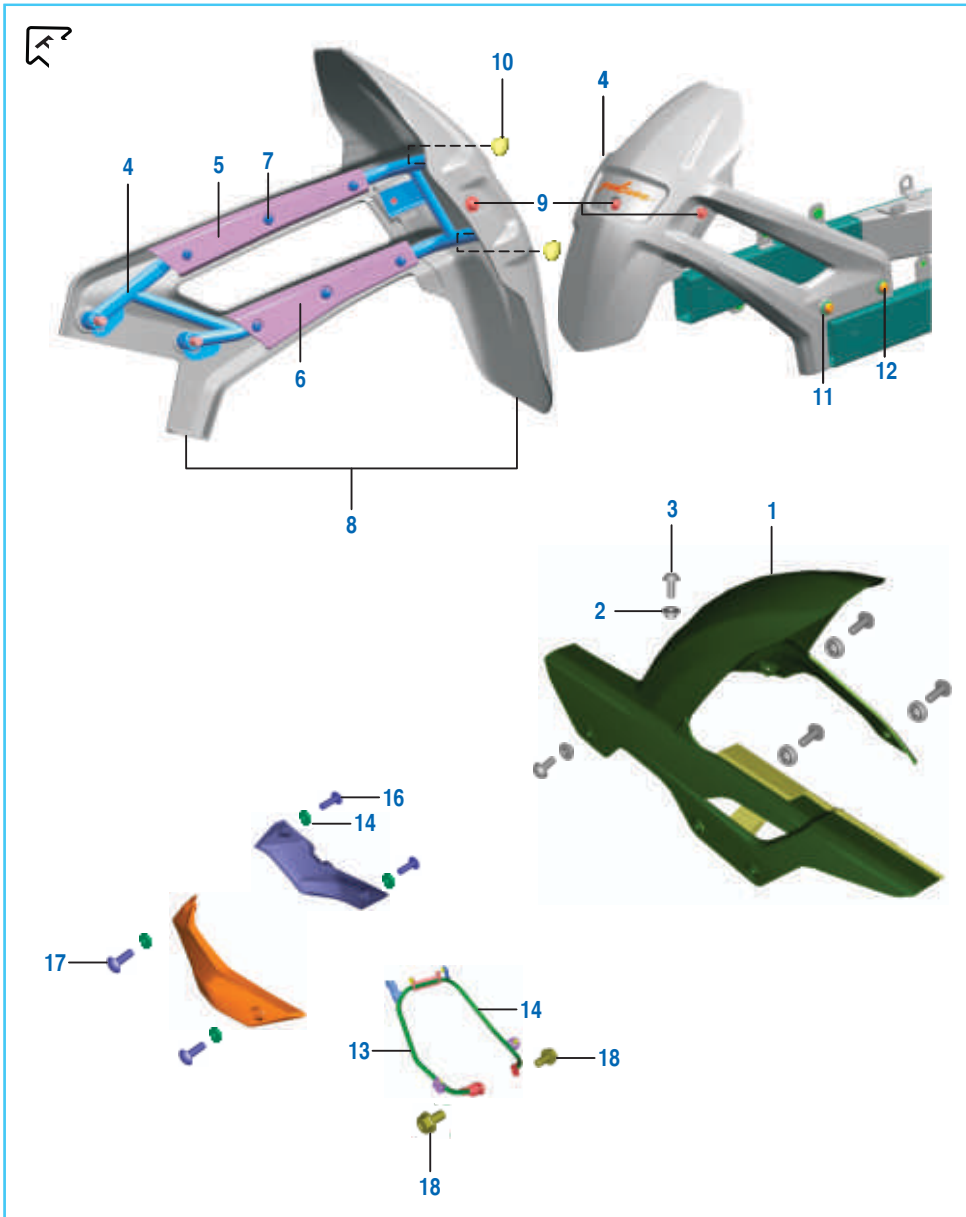Chain Case




No.	Part No.	Description	Qty.	Remarks
1	JF 1812 11	Cover Assly Chain	1	
2	LA C000 54	Bolt Socket Head	5	
3	JL 1812 97	Collar	5	
4	JF 1810 05	Tube Rear Hugger Mtg.	1	
5	JL 1814 07	Cover 1 - Hugger Rear	1	
6	JL 1814 08	Cover 2 - Hugger Rear	1	
7	KB UB04 10	Screw Truss	6	
8	JF 1814 09	Assembly Hugger Rear	1	
9	LA C000 37	Bolt Soc - Special Head M6 x L8	3	
10	DS 2210 01	Plug	2	
11	39 0265 12	Spring Washer	2	
12	LA C000 36	Bolt Special Socket	2	
13	JF 1813 31	Bracket Belly Pan LH	1	
14	JF 1813 32	Bracket Belly Pan RH	1	
15	JY 1812 55	Washer End Cap	4	
16	KB UA06 20	Screw Truss	2	
17	KB UA06 14	Screw Truss	2	
18	KA DA06 12	Bolt Flanged	2	

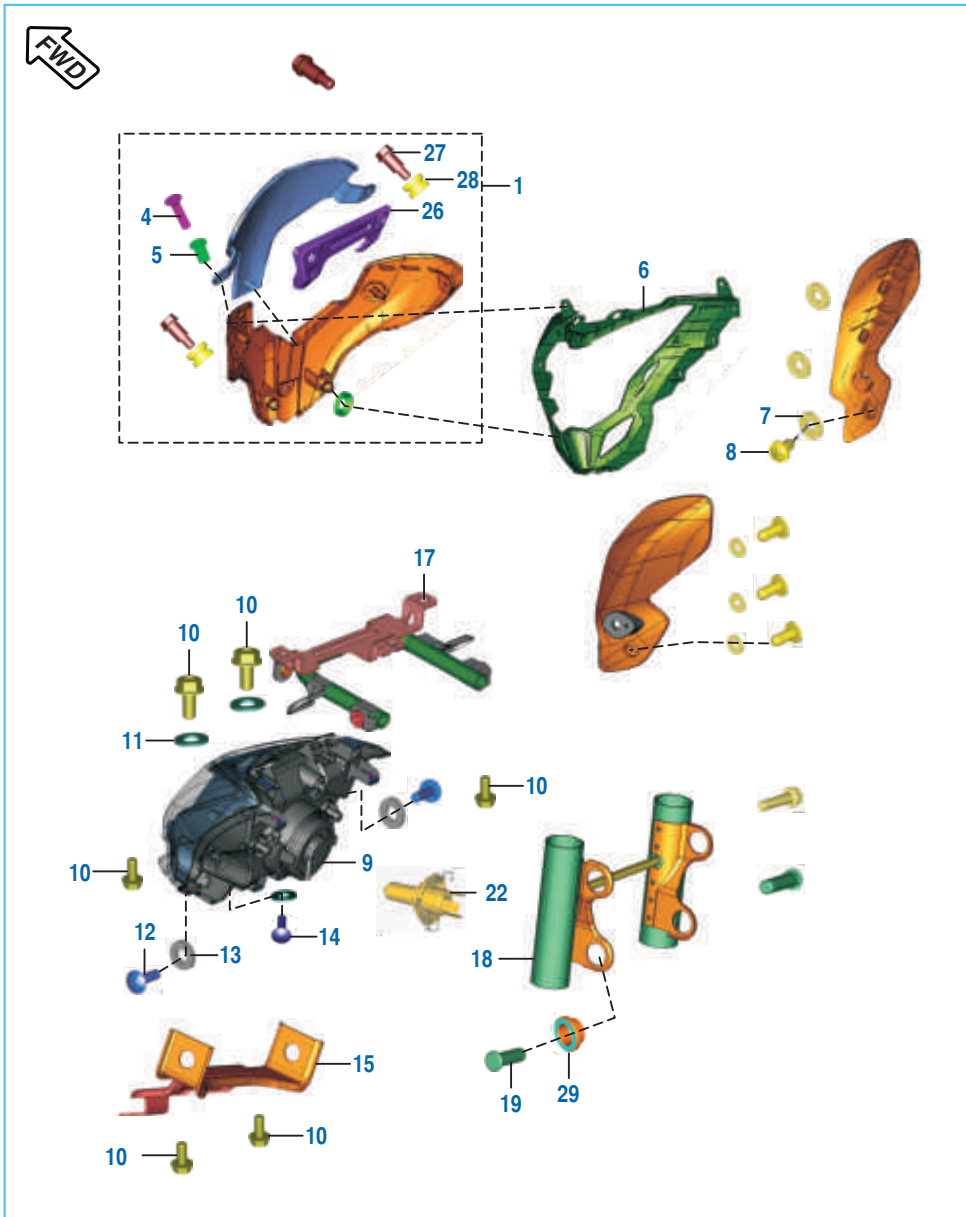Head Lamp & Fairing




No.	Part No.	Description	Qty.	Remarks
1	JL 1810 08	Windshield Assembly	1	
2	JG 1812 36	Well Nut - M5 X 16 L	2	
3	JG 1812 35	Washer Special	2	
4	LB S000 02	Screw CSK - Socket	2	
5	JL 1812 47	Grommet Wind Screen Mtg.	2	
6	JL 1812 03	Fairing	1	
7	KD BA05 12	Washer Plain	6	
8	LB R000 02	Self Tapping Screw - Dia 5	6	
9	JL 4010 12	Head Lamp Assy	1	
	YJ L020 05	Head Lamp W/O Bulb	1	
10	KA DE06 14	Bolt Flanged	6	
11	KD AA06 11	Washer - Plain	3	
12	KB UA05 16	Screw Truss	2	
13	39 2141 24	Washer Nylon	2	
14	KB UA06 16	Screw Truss	1	
15	JL 1812 36	Bracket Lower Mtg	1	
16	JL 1812 49	Damper Head Lamp	1	
17	JL 1812 37	Bracket Upper Mtg	1	
18	JF 1812 10	Lamp Shade assly.	1	
19	KA CH08 35	Bolt Socket	4	
20	YJ L020 06	Harness Head Lamp	1	
21	DH 1910 37	Bulb-Pilot (12V, W3W)	2	
22	CL 2010 23	Head Lamp Bulb 60/55W (H4)	1	
23	PA 1812 92	Grommet Fairing	4	
24	PA 1812 93	Collar Fairing Mtg	4	
25	KD AA06 11	Washer Plain Small	3	
26	JL 1812 83	Bracket Wind Shield	1	
27	JL 1812 84	Step Bolt	2	
28	JL 1812 45	Grommet Number Plate Mounting	2	
29	JL 1812 57	Collar Fairing	4	

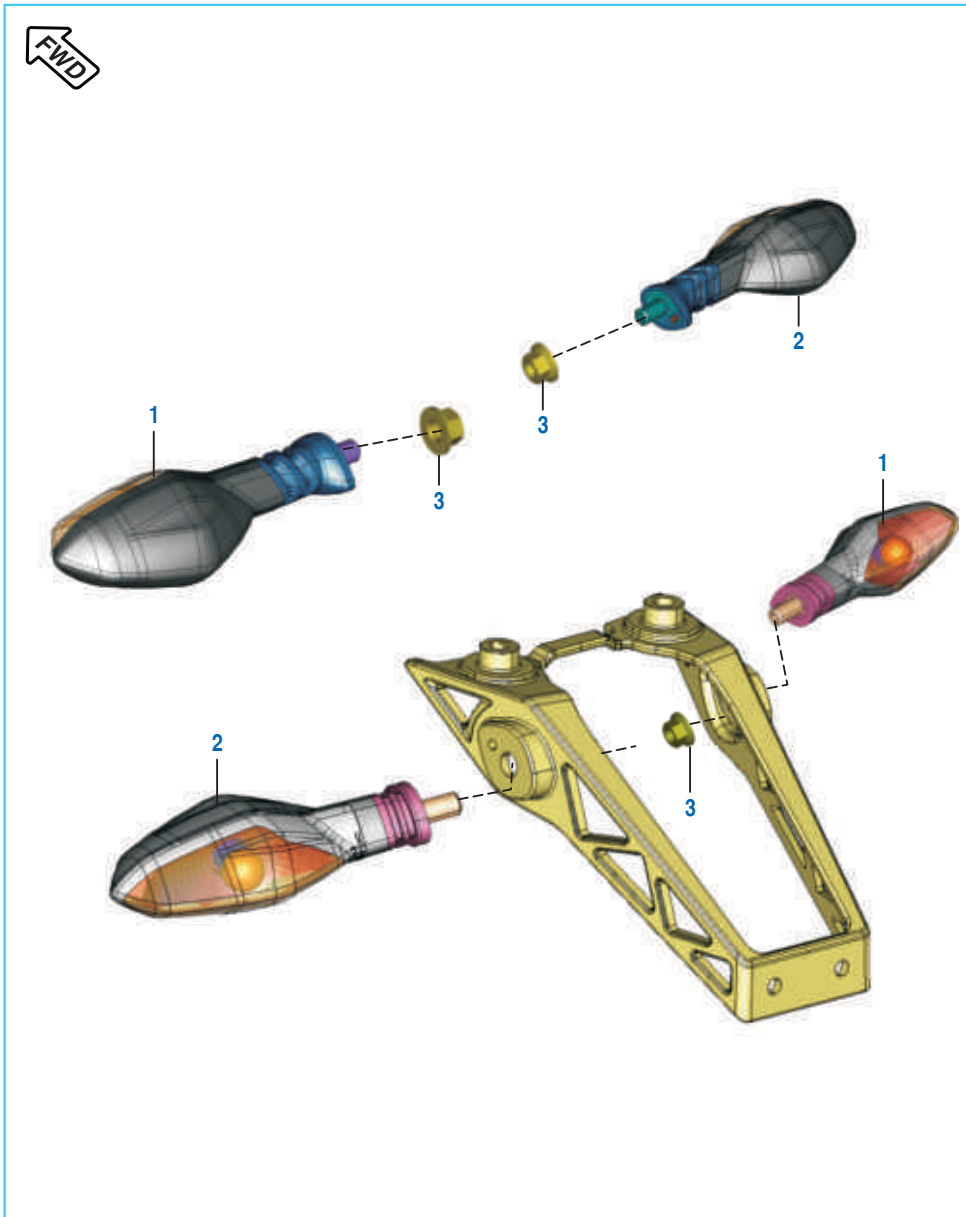Indicator Light Assembly




No.	Part No.	Description	Qty.	Remarks
1	JL 4010 06	Indicator Assembly Fr RH / Rr LH	2	Rr. Indicator Mtg
2	JL 4010 05	Indicator Assy Fr LH / Rr RH	2	
3	KC GD10 10	Nut - Hexagon	4	
4	GH 2010 12	Lamp 12V - 10W	4	

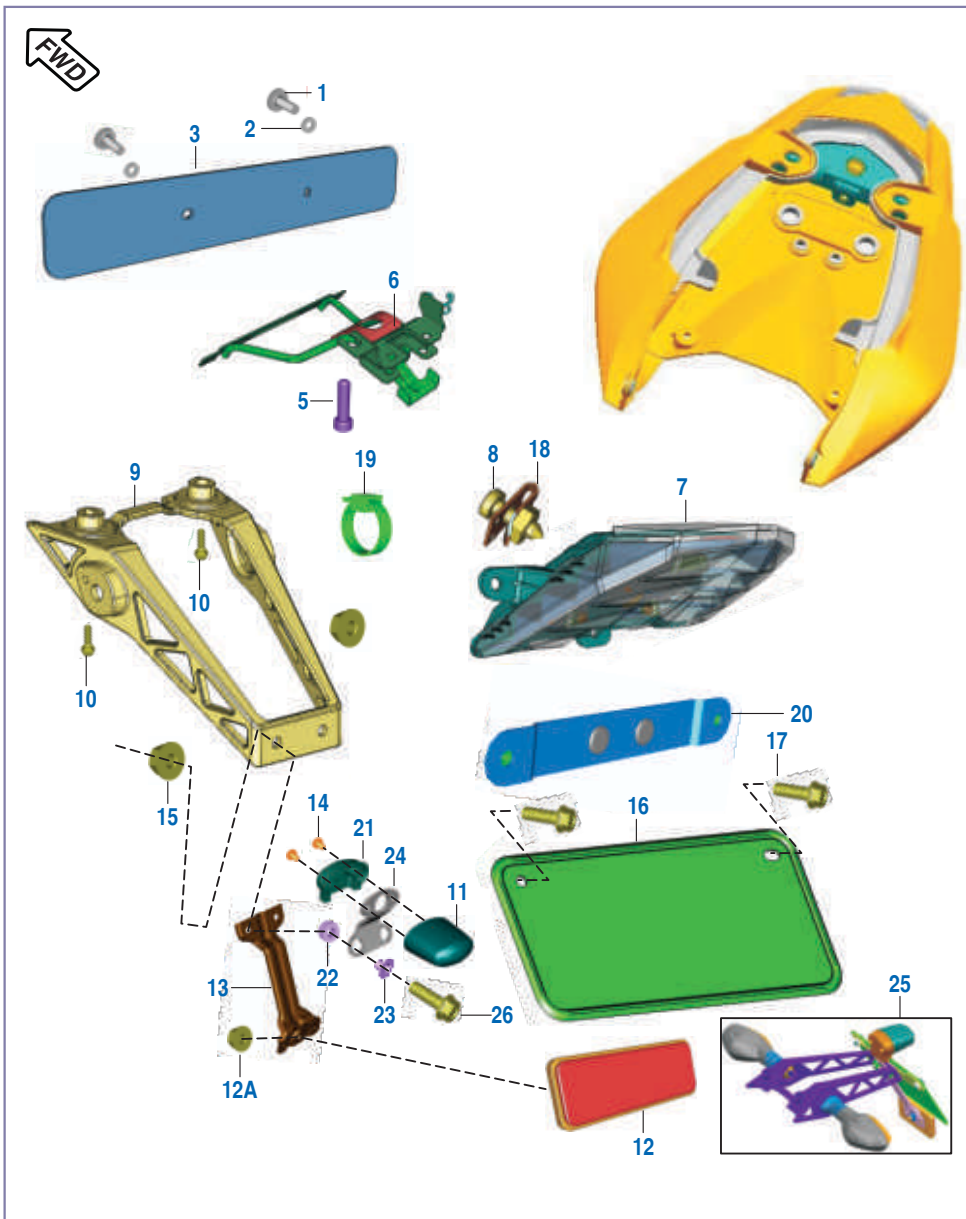Number Plate / Tail Lamp Assembly




No.	Part No.	Description	Qty.	Remarks
1	LB U000 09	Screw Mashroom Head	2	
2	39 2141 24	Washer None Metallic	2	
3	JL 2328 06	Plate Number - Front (Black)	1	
5	KA CA08 30	Bolt Master KAC	2	
6	JL 2328 05	Bracket Number Plate Mtg	1	
7	JL 4010 02	Lamp Tail Assly	1	
8	39 1907 01	Screw - Truss Cross : M5	3	
9	JL 1138 00	Bracket Rear Blinker Mtg	1	
10	KA DD06 10	Bolt Flanged	2	
11	JD 4010 07	Rear Number Plate Lamp	1	
12	JG 4010 36	Reflector - Reflex	1	
12A	39 2484 15	Nut Hex Flanged	1	
13	JL 1138 03	Bracket - Reflector Reflex Mtg	1	
14	KB BA05 14	Screw - M5	2	
15	KC GD06 06	Nut Hex Flanged	2	
16	DF 1612 52	Plate - Number :- Rear In Black	1	
17	KA DD06 10	Bolt Flanged	2	
18	DJ 1612 29	Nut Clip	3	
19	PA 4022 04	Band (Length 110 MM)	2	
20	JL 2328 08	Bracket Rr Number Plate Mtg	1	
21	JL 4010 16	Cover Illumination Lamp	1	
22	JL 1138 11	Grommet - Illumination Bkt	2	
23	JL 1138 12	Sleeve - Illumination Bkt	2	
24	JL 1138 10	Bracket Number Plate Illum.	1	
25	DP 1611 45	Rear Number Plate Assembly	1	
26	KA DD08 25	Bolt Flanged	2	

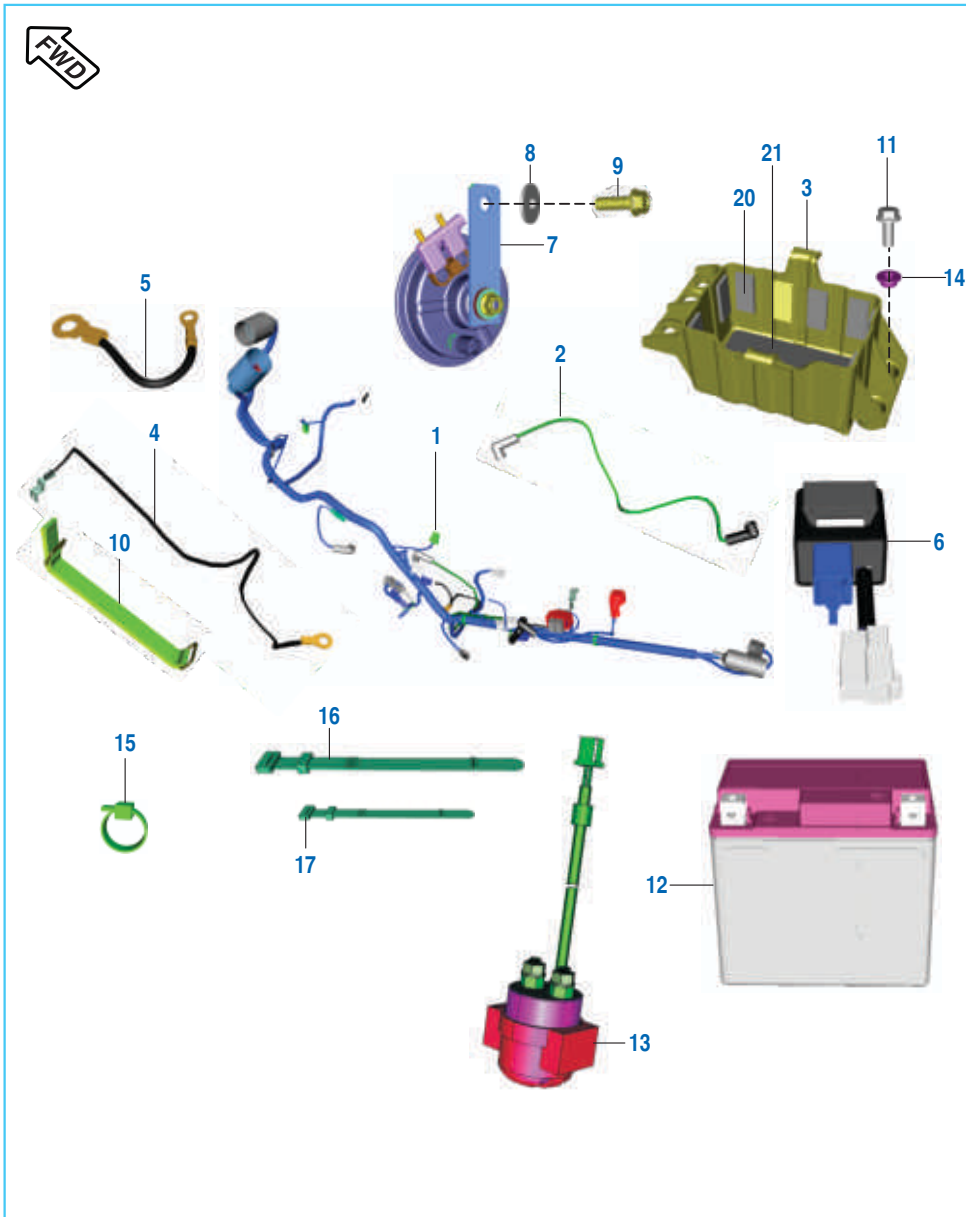Electrical Equipments




No.	Part No.	Description	Qty.	Remarks
1	JF 4022 31	Harness Wiring AHO (Non - TPS)	1	Not Serviceable
2	JL 4022 01	Cable Assy Relay To Motor	1	
3	JF 1812 53	Assembly Battery Case	1	
4	JF 4022 42	Cable Earth Battery	1	
5	JF 4022 43	Cable Earth Engine	1	
6	DT 4020 06	Light Control Module (Bulb)	1	
7	JF 4016 00	Horn	1	
8	39 1507 11	Washer - Plain	1	
9	39 1956 04	Hex Head Bolt - Flanged M8	1	
10	JF 4018 02	Battery Band	1	
11	KA EM06 14	Bolt Flanged Small	4	
12	JF 4018 03	Battery 4AH VRLA Wet	1	
13	JN 3516 04	Starter Relay - With Grommet	1	
14	JL 1812 64	Sleeve Battery Box	4	
15	PA 4022 04	Band (Length 110 mm)	2	
16	JD 4022 12	Band (Length 200 mm)	10	
17	JD 4022 17	Band (Length 150 mm)	10	
19	AP 2010 25	Fuse 15A (Blade Type)	2	
20	JG 4018 08	Foam Battery Bracket 35 x 15 x 3	12	
21	JF 1812 54	Foam Battery Case Bottom	1	

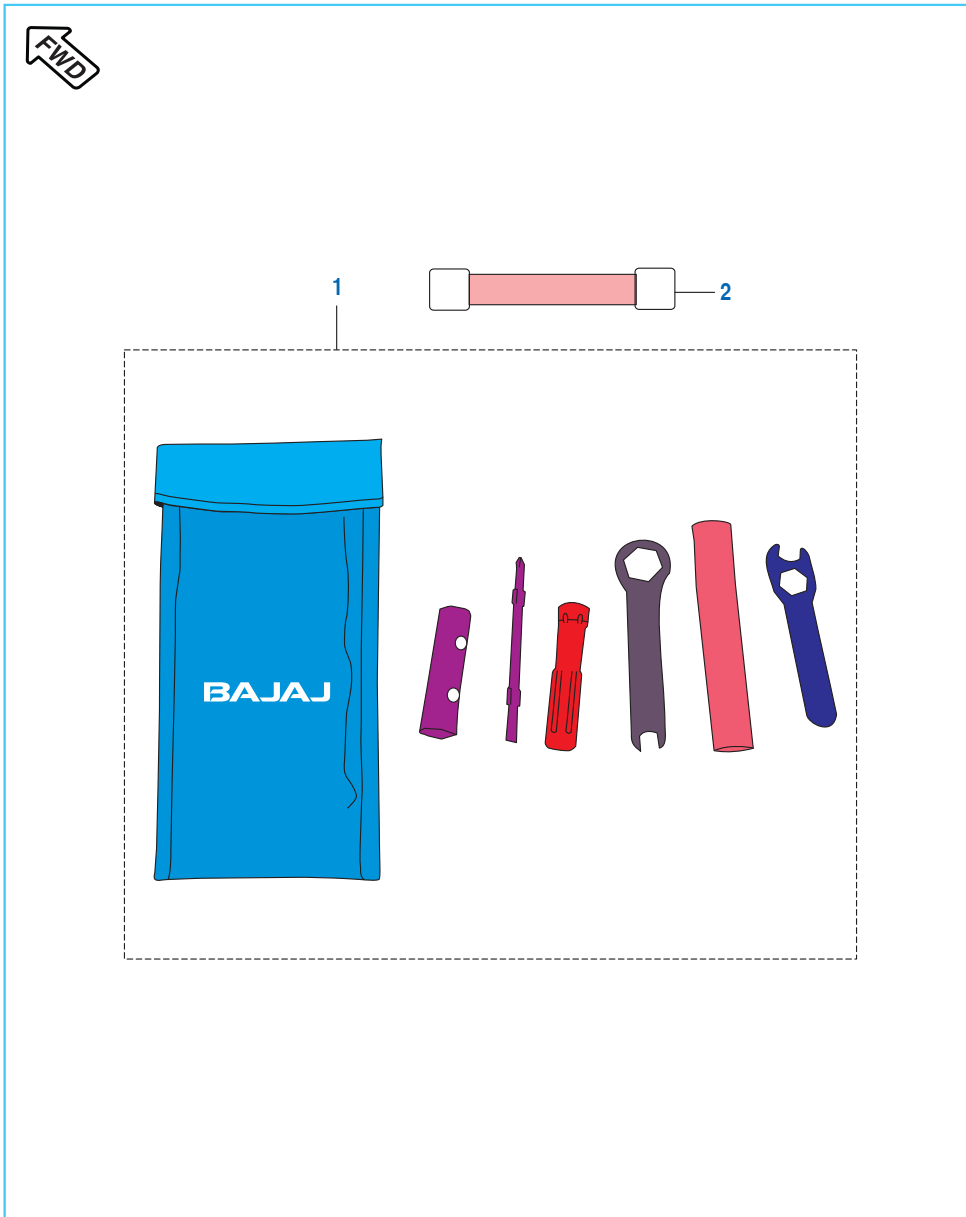Tool Kit



No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 19	Tool Kit	1	Not Serviceable
2	DK 2210 24	Band Tool Kit	1	

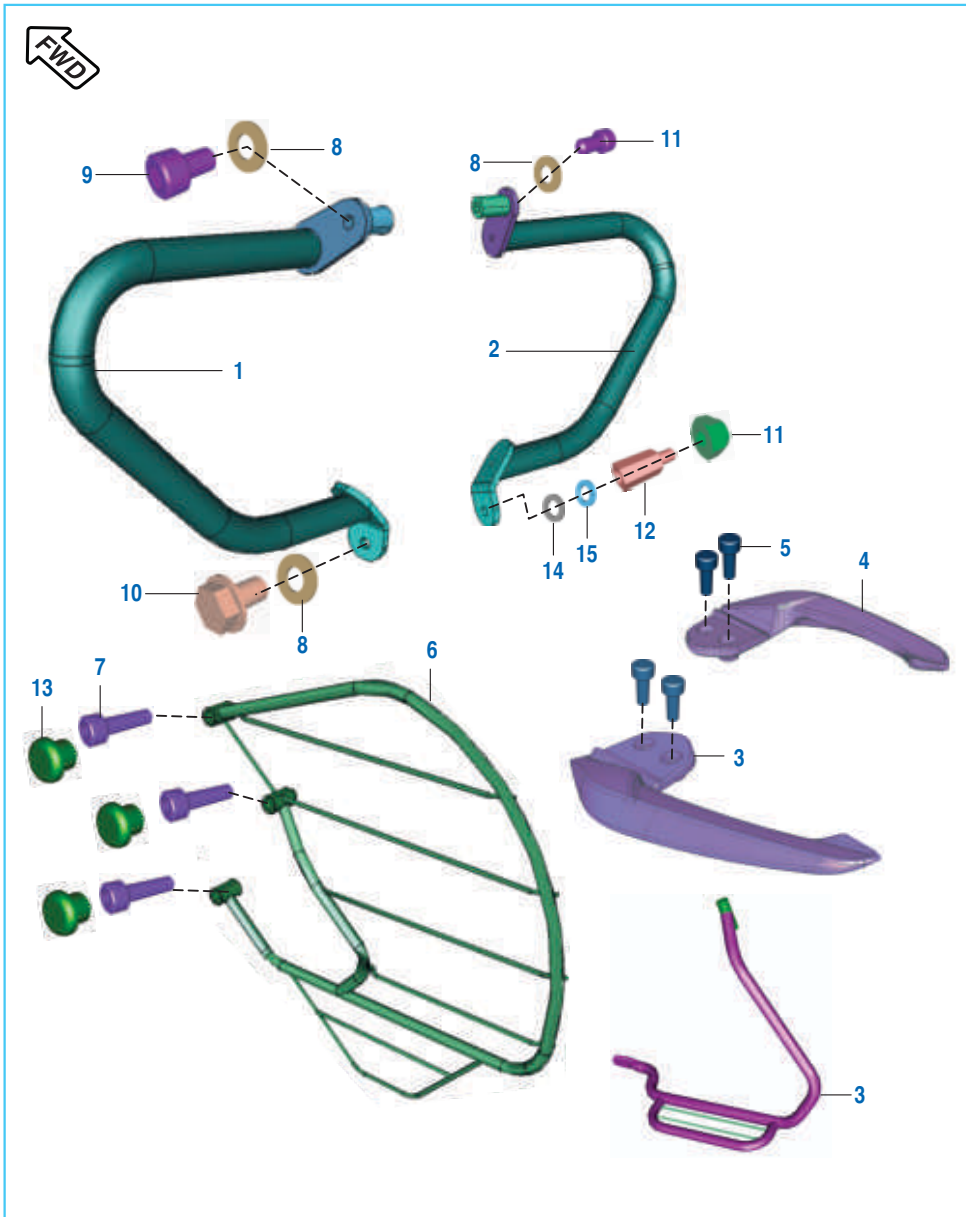Accessories / Grab Handle



No.	Part No.	Description	Qty.	Remarks
1	JF 2312 18	Guard Leg LH	1	
2	JF 2312 15	Guard Leg RH	1	
3	JL 2314 04	Grab Handle Assy LH	1	
4	JL 2314 05	Grab Handle Assy RH	1	
5	LA C000 35	Bolt Socket	4	
6	JL 2312 02	Guard Saree	1	
7	KA CB06 22	Bolt Socket L-22	3	
8	KD BE06 13	Washer	3	
9	LA C000 31	Bolt Socket	2	
10	KA Cb06 16	Bolt Master KAC	1	
11	KC GD08 08	Nut Hex Flanged	1	
12	JU 2312 05	Nut Leg Guard Mounting	1	
13	JL 2312 09	Plug Saree Guard	3	
14	LD A000 12	Washer Plain	1	
15	LD C000 01	Washer Leg Guard	1	
16	JL 2312 04	Ladies Footrest	1	

Painted Parts and Decals



No.	Part No.	Description	Qty.	Remarks
1	52 JF04 27	Tank Cover Top Met Wh + Decal	1	
	52 JF04 11	Tank Cover Top Passion Red Decal	1	
	52 JF04 19	Tank Cover Top Safire Blue Decal	1	
	52 JF05 94	Tank Cover Top Pewter Gray + Decal	1	
2	52 JF04 59	Tank Cover LH Sat Blk + M White	1	
	52 JF04 55	Tank cover LH Satin Blk + Pas Red	1	
	52 JF04 57	Tank cover LH Sat Black + Saf Blue	1	
	52 JF05 92	Tank cover LH Sat Black+Pewter Gray	1	
3	52 JF04 56	Tankcover RH Sat Black + Saf Blue	1	
	52 JF04 58	Tankcover RH Satin Blk + Pas Red	1	
	52 JF04 60	Tank Cover RH Sat Blk + M White	1	
	52 JF05 93	Tank cover RH Sat Black+Pewter Gray	1	
4	52 JF04 33	Front Fender Assly Met White	1	
	52 JF04 17	Front Fender Assly P Red	1	
	52 JF04 25	Front Fender Assly Safire Blue	1	
	52 JF05 97	Front Fender Assly Pewter Gray	1	
5	52 JL09 36	Side Mask LH Satin Black + White Decal	1	
	52 JL09 18	Side Mask LH Satin Black + Red Decal	1	
	52 JF04 34	Side Mask LH Satin Black + Blue Decal	1	
	52 JF06 03	Side Mask LH Satin Black+Pewter Gray	1	
6	52 JF04 35	Side Mask RH Satin Black + Blue Decal	1	
	52 JL09 19	Side Mask RH Satin Black + Red Decal	1	
	52 JL09 37	Side Mask RH Satin Black +White Decal	1	
	52 JF06 04	Side Mask RH Satin Black+Pewter Gray	1	
7	52 JL09 94	Cover Side Assy LH White Decal	1	
	52 JL09 92	Cover Side Assy LH Red Decal	1	
	52 JF02 39	Cover Side Assy LH Safire Blue	1	
	52 JF05 98	Cover Side Assy LH Pewter Gray	1	

Painted Parts and Decals



No.	Part No.	Description	Qty.	Remarks
8	52 JF02 42	Cover Side Assy RH Safire Blue	1	
	52 JL09 96	Cover Side Assy RH Red Decal	1	
	52 JL09 98	Cover Side Assy RH White Decal	1	
	52 JF06 00	Cover Side Assy RH Pewter Gray	1	
9	52 JF04 28	Seat Cowl Assly Satin Blk+White Dcal	1	
	52 JF04 12	Seat Cowl Assly Satin Blk+Red Dcal	1	
	52 JF04 20	Seat Cowl Assly Satin Blk+Blue Dcal	1	
	52 JF05 90	Seat Cowl Assly Satin Blk+Pewter Gray	1	
10	56 JF38 5Y	Belly Pan LH Metallic Pearl White	1	
	56 JF38 4R	Belly Pan LH Passion Red	1	
	56 JF38 5N	Belly Pan LH Saffire Blue	1	
	56 JF38 32	Belly Pan LH Pewter Gray	1	
11	56 JF39 5N	Belly Pan RH Saffire Blue	1	
	56 JF39 4R	Belly Pan RH Passion Red	1	
	56 JF39 5Y	Belly Pan RH Metallic Pearl White	1	
	56 JF39 32	Belly Pan RH Pewter Gray	1	
12	52 JF04 18	Shroud Cover LH + Dcal	1	
13	52 JF04 26	Shroud Cover RH + Dcal	1	
14	JL 2333 16	Decal Tank 3d Pulsar-Grey	2	
15	JL 2330 02	B Logo Decal Front	2	
16	JE 5412 67	Label Clutch Cover	1	
17	JL 5412 23	Decal B-Bajaj (Magneto Cover)	1	
18	JF 2331 24	Decal Shroud-Oil Cooled	2	
19	JL 2332 55	Decal Wheel I Red-Grey (Front)	4	
	JL 2332 56	Decal Wheel II Red-Grey (Rear)	4	
	JL 2332 81	Decal Wheel I Blue-Grey	4	
	JL 2332 82	Decal Wheel II Blue-Grey	4	
	JL 2332 69	Decal Wheel I White-Gray (Front)	4	
	JL 2332 70	Decal Wheel II White-Gray (Rear)	4	

Painted Parts and Decals



No.	Part No.	Description	Qty.	Remarks
20	36 JF01 13	Kit Dcl Fender Red - Gry	1	
	36 JF01 15	Kit Dcl Fender Wht - Gry	1	
	36 JF01 23	Kit Dcl Fender Blue - Blk	1	
	36 JF01 46	Kit Dcl Fender Gray Black	1	
21	36 JF01 20	Kit Dcl Seat Cowl Red - Blk	1	
	36 JF01 22	Kit Dcl Seat Cowl Wht - Blk	1	
	36 JF01 27	Kit Dcl Seat Cowl Blue - Blk	1	
	36 JF01 50	Kit Dcl Seat Cowl Gray Black	1	
22	36 JL01 14	Kit Dcl Fairing Red - Black	1	
	36 JL01 18	Kit Dcl Fairing Wht - Black	1	
	36 JF01 24	Kit Dcl Fairing Blue - Black	1	
	36 JF01 47	Kit Dcl Fairing Gray Black	1	
23	36 JF01 19	Kit Dcl Tank Cvr Red - Blk	1	
	36 JF01 25	Kit Dcl Tank Cvr Blue - Blk	1	
	36 JF01 28	Kit Tank Cvr Dcl	1	
	36 JF01 48	Kit Dcl Tank Cvr White Black	1	
	36 JF01 49	Kit Dcl Tank Cvr Gray Black	1	
24	36 JL01 08	Kit Dcl Side Cover Red - Blk	1	
	36 JL01 10	Kit Dcl Side Cvr Wht - Blk	1	
	36 JF01 26	Kit Dcl Side Cvr Blue - Blk	1	
	36 JF01 51	Kit Dcl Side Cvr Gray Black	1	
25	36 JF01 28	Decal Tank Cover LH+RH - 160	1	

Consumable Parts

1		2		3	
4		5		6	
7		8		9	
10		11		12	

No.	Part No.	Description	Supply Unit	Application
1	36 0010 61 83 0204 11 83 0203 34	Bajaj Genuine Oil 10W50 Bajaj Genuine Oil 10W30 Bajaj Genuine Oil 20W50 (BGO to be ordered to HPCL)	1.5 Ltr. 1 Ltr. 1 Ltr.	Dominar 400 100cc Models 125cc and above models
2	36 0010 58	Bajaj Coolant Koolex	1 Ltr.	Coolant Top-up/Replace
3	36 DH40 61 83 0203 25	Brake Fluid DOT4 Brake Fluid DOT3	100 ml 100 ml	Disc Brake Top-up/Replace Disc Brake Top-up/Replace
4	36 0010 52	Silicon grease	3 gm	Caliper Pin
5	83 0204 73 83 0203 68	Grease Petamo GHY 441 Grease Molycoat	3 gm 200 gm	Water Pump Seals For Starter Clutch Lubrication
6	36 0010 52	HP Lithon RR Grease	10 gm	Steering Race
7	83 0201 73	Multi Purpose Grease (Local Purchase)	--	Lubrication of Clutch Lever, Brake Lever, Brake Pedal & Side Stand
8	36 0010 55	Chain Lubricant HP Make	1 kg	Non - Sealed Chain Lubrication
9	36 0010 62	Liquid gasket L5910	50 ml	Crankcase Joining
10	36 3140 04	Fork oil	160 ml	Front Fork Top-up/Replace\
11	36 DH40 29	Kit Spray Chain Lub	100 ml	Sealed Drive Chain
12	36 DH40 71	Wonderfill Chain Spray	100 ml	Sealed Drive Chain

13		14		15	
16		17		18	
19		20		21	
22		23		24	



Front Wheel Direction

Consumable Parts

No.	Part No.	Description	Supply Unit	Application
13	36 DH40 72	Rust Remover Spray Make - Zorric 88 & Wonder fill easiner	100 ml	For Removing Rust from Components
14	76 0109 36	Loctite Thread locker 243	50 ml	For Screws & Bolts
15	76 0109 37	Loctite retaining compound 638	50 ml	For Screws & Bolts
16	37 0043 52	Touch up paint slate grey	440 ml	Touch up of Frame, Swing Arm & Step Holder
17	37 0043 53	Touch up paint Matte Silk black	440 ml	Touch up of Grab Handle, Handle Bar & Handle Holder
18	36 0010 60	Kibatsu touch up paint	400 cc	Touch up of Cylinder head, Block & Alloy Wheels
19	37 2240 18	Paint Bottle Schwartz Black	--	P-200NS Frame Touch-up
20	75 6802 36 NA	Petroleum Jelly (Local Purchase) Distilled Water (Local Purchase)	-- 1 Ltr.	For Battery Terminals For Battery Level Top-up
21	NA	SAE 90 oil (Local Purchase)	-	
22	62 3050 84	WD40 Spray (Local Purchase)	400 ml	Electrical Contact Cleaning Spray
23	36 0010 56	Carburetor Cleaning Spray		For Cleaning Carburetor
24	37 2540 39	Corrosion Protection Spray Proto quick LTP902 (To be ordered on Vendor)	--	For Preventing vehicle parts from rusting

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1	36JF0133	Kit Primary Drive And Driven	JE551430 JE531045	Clutch Housing Assembly K11 UG Gear Primary Drive K11 UG	1 1
2	36JF0134	Kit Cyl Head Assly	JE511087 JE511052 39166005	Head Cylinder Machined K11 UG Nozzle Head - K11 Stud - M8	1 1 2
3	36JF0135	Kit Clutch Cover Assly	JE541274 BA102004 JC101077	Cover Clutch Side K11 UG Plug Plug Tapper	1 1 1
4	36JF0025	Kit Valve Repair	JD511203 39201719 JE511216 JD511205 DG101029	Seat Valve Spring Seal - Oil Spring Valve -K11 Retainer Valve Spring Collet	2 2 2 2 4
5	36JF0005	Kit Chain Guide	JE541032 JE521021	Chain Guide Slack Side (Silent) Chain Guide Tight Side (Silent)	1 1
6	36JF0006	Kit Chain Sprocket	JF141000 JZ141005 JV551000	Chain O Ring Type (K11) Sprocket Rear-45 T Sprocket Output (15t)	1 1 1
7	36JL0013	Kit Seat Damper	JL191007 DK211007	Damper For Seat Damper Seat Front	6 1
8	36JF0132	Kit Crankcase LH	JE541051 JE541052 59200036 JA541005 39219019 39256220 39171519 JE541062 JY541038	Nozzle Oil Jet K11 Jet Crankcase LH K16b Bearing - Ball 6203 Hn3 C3 Bush Bendix Seal - Oil Bearing - Needle Roller :- 13x19x12 Seal - Oil Crankcase Magneto Side K11 UG Bush	1 1 1 1 1 1 1 1 1

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
9	36JF0130	KIT CRANKCASE RH	JE541060 JE541053 59200036 KPBF6201 PF541018 BA102004 JY541038	Crankcase Clutch Side K11 UG Insert Crankcase RH K16b Bearing - Ball 6203 Hn3 C3 Bearing Ball C3 Clearances Bushing Drum Bm150 4 Spd Plug Bush	1 1 1 1 1 1 1
10	36JF0117	KIT CYL BLOCK PIST ASSLY	JE521028 JE521215	Cylinder Block K11 UG Assembly Piston K11 UG	1 1
11	36JF0042	KIT PISTON RINGS NS160	JE521218 JE521219 JE521217	Ring Second Piston K11 UG Ring Oil Piston K11 UG Ring Top Piston K11 UG	1 1 1
12	36JF0113	KIT DCL FENDER RED-GRY	JF233088 JF233091	Decal Fender Front LH Red-Grey Decal Fender Front RH Red-Grey	1 1
13	36JF0115	KIT DCL FENDER WHT-GRY	JF233119 JF233120	Decal Fender Front LH White-Grey Decal Fender Front RH White-Grey	1 1
14	36JF0123	KIT DCL FENDER BLUE-BLK	JF233087 JF233090	Decal Fender LH Blue - Black Decal Fender RH Blue - Black	1 1
15	36JL0114	KIT DCL FAIRING RED-BLACK	JL233243 JL233244	Decal Fairing LH Red-Black Decal Fairing RH Red-Black	1 1
16	36JL0118	KIT DCL FAIRING WHT-BLK	JL233257 JL233258	Decal Fairing LH White-Gray Decal Fairing RH White-Gray	1 1
17	36JF0124	KIT DCL FAIRING BLUE-BLK	JF233039 JF233042	Decal Fairing LH Blue - Black Decal Fairing RH Blue - Black	1 1
18	36JF0119	KIT DCL TANK CVR RED-BLK	JF233046 JF233049	Decal Tank Upper LH Red - Black Decal Tank Upper RH Red - Black	1 1

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
19	36JF0125	KIT DCL TANK CVR BLUE-BLACK	JF233045 JF233048	Decal Tank Upper LH Blue - Black Decal Tank Upper RH Blue - Black	1 1
20	36JF0128	KIT TANK CVR DCL NS160	JF233139 JF233140	Decal Cover Tank LH-160 Decal Cover Tank RH-160	1 1
21	36JF0120	KIT DCL SEAT COWL RED-BLK	JF233076 JF233079	Decal Seat Cowl Upper - LH Red-Black Decal Seat Cowl Upper - RH Red-Black	1 1
22	36JF0122	KIT DCL SEAT COWL WHITE - BLACK	JF233129 JF233130	Decal Cowl Seat LH White-Black Decal Cowl Seat RH White-Black	1 1
23	36JF0127	KIT DCL SEAT COWL BLUE-BLACK	JF233075 JF233078	Decal Seat Cowl Upper - LH Blue-Black Decal Seat Cowl Upper - RH Blue-Black	1 1
24	36JL0108	KIT DCL SIDE COVER RED-BLACK	JL233249 JL233250	Decal Side Cover LH Red - Black Decal Side Cover RH Red - Black	1 1
25	36JL0110	KIT DCL SIDE COVR WHITE-BLACK	JL233263 JL233264	Decal Side Cover LH White-Gray Decal Side Cover RH White-Gray	1 1
26	36JF0126	KIT DCL SIDE CVR BLUE-BLK	JF233069 JF233072	Decal Side Cover LH Blue - Black Decal Side Cover RH Blue - Black	1 1
27	36JF0003	KIT ASSLY MAGNETO	JE541237 JV541207 JL541223 JA541005	COVER MAGNETO K11 CAP TDC FINDER DECAL B-BAJAJ BUSH BENDIX	1 1 1 1
28	36JZ0121	KIT FRICTION PLATE-D106A	JG551448 JG551455	FRICTION DISK A DISC C-CLUTCH FRICTION	3 2

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
29	36JF0007	KIT BOSS KICK	JE621205 JZ621203 30101236 22150241 30101235 39085517	BOSS KICK LEVER K11 SPRING KICK LEVER BALL - STEEL WASHER - PLAIN PIN CIRCLIP :- E-TYPE	1 1 1 1 1 1
30	36JG0011	KIT STEERING BEARING	DK181050 DG181045 DG181005 DG181003 DG181004 DK181051 DG181047 DG181046	CAGE BEARING STEERING TOP BEARING CONE :- UPPER BEARING CONE WASHER SEAL - OIL CAGE BEARING STEERING BEARING RACE - LOWER BEARING RACE - UPPER	1 1 1 1 1 1 1
31	36JF0138	KIT CYL COMPL FORK	JF151035 30181020 JH121049 DM181008	SEAT PIPE K11 RING - FORK PISTON CAP OIL LOCK SPRING - FRONT FORK :- TWO PITCH	1 1 1 1

119

pulsar
NS160

120

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
01 1009 05	11	20	36 DH40 72	13	114
14 1510 33	15	32	36 JF00 03	1	30
28 1011 41	26	28	36 JF00 05	15	10
30 1011 42	14	28	36 JF00 06	2	70
30 1011 95	3	30	36 JF00 07	13	36
30 1510 33	6	64	36 JF00 15	7	68
30 1510 69	16	70	36 JF00 16	6	68
30 1510 75	14	70	36 JF00 17	8	68
30 1511 18	15	64	36 JF00 18	14	66
30 1810 25	4	76	36 JF00 19	16	66
30 1810 26	5	76	36 JF00 25	10	8
30 1810 29	17	76	36 JF00 42	2	12
30 1910 38	12	72	36 JF01 13	20	110
31 1011 73	4	14	36 JF01 15	20	110
31 1610 78	11	84	36 JF01 17	1	12
31 2010 79	7	72	36 JF01 19	23	110
31 2010 81	2	22	36 JF01 20	21	110
36 0010 52	4	112	36 JF01 22	21	110
36 0010 52	6	112	36 JF01 23	20	110
36 0010 55	8	112	36 JF01 24	22	110
36 0010 56	23	114	36 JF01 25	23	110
36 0010 58	2	112	36 JF01 26	24	110
36 0010 60	18	114	36 JF01 27	21	110
36 0010 61	1	112	36 JF01 28	23	110
36 0010 62	9	112	36 JF01 28	25	110
36 3140 04	10	112	36 JF01 30	2	24
36 DH19 02	4	66	36 JF01 32	1	22
36 DH40 29	11	112	36 JF01 33	13	14
36 DH40 61	3	112	36 JF01 33	3	32
36 DH40 71	12	112	36 JF01 34	3	6

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
36 JF01 35	1	28	39 0240 11	13	32
36 JF01 38	14	76	39 0242 11	2	58
36 JF01 39	4	34	39 0265 12	11	92
36 JF01 40	5	34	39 0292 15	9	54
36 JF01 41	7	34	39 0326 15	4	58
36 JF01 42	8	34	39 0422 15	10	60
36 JF01 46	20	110	39 0454 11	11	54
36 JF01 47	22	110	39 0553 02	12	54
36 JF01 48	23	110	39 0594 17	4	10
36 JF01 49	23	110	39 0694 15	20	72
36 JF01 50	21	110	39 0711 11	22	80
36 JF01 51	24	110	39 0738 17	7	36
36 JG00 11	6	52	39 0740 11	25	82
36 JL00 12	5	82	39 0789 12	18	72
36 JL00 13	2	48	39 0807 08	25	72
36 JL00 15	15	56	39 0808 08	5	20
36 JL00 31	26	86	39 0808 08	14	72
36 JL00 41	25	56	39 0900 12	17	64
36 JL01 08	24	110	39 0987 17	5	16
36 JL01 10	24	110	39 0992 06	9	18
36 JL01 14	22	110	39 0993 11	3	36
36 JL01 18	22	110	39 0999 06	9	26
36 JZ01 21	6	32	39 0999 06	17	28
37 0043 52	16	114	39 0999 06	4	30
37 0043 53	17	114	39 1000 06	6	12
37 2240 18	19	114	39 1000 06	14	22
37 2540 39	24	114	39 1041 19	2	28
39 0198 11	13	72	39 1053 15	16	54
39 0199 11	22	72	39 1180 11	3	74
39 0239 11	19	84	39 1225 15	24	72

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39 1283 21	8	6	39 2190 19	3	22
39 1507 11	8	100	39 2200 11	12	32
39 1537 21	4	72	39 2295 15	15	42
39 1540 11	19	72	39 2408 17	4	36
39 1561 21	7	28	39 2420 01	3	58
39 1660 05	4	6	39 2427 04	10	74
39 1671 21	20	28	39 2443 11	3	28
39 1672 04	3	80	39 2475 04	5	56
39 1673 04	11	10	39 2475 04	8	72
39 1673 04	22	28	39 2484 15	12A	98
39 1673 04	9	44	39 2492 11	11	42
39 1674 04	14	6	39 2561 20	2	14
39 1715 19	4	22	39 2561 20	12	22
39 1778 02	7	84	39 2561 20	8	24
39 1902 04	6	20	39 2562 20	6	22
39 1907 01	8	84	39 2608 01	10	6
39 1907 01	8	98	39 2669 21	10	10
39 1931 20	3	14	52 JA00 29	6	24
39 1943 04	2	46	52 JE00 74	1	2
39 1943 04	15	58	52 JF00 47	1	50
39 1943 04	18	84	52 JF00 90	2	50
39 1954 04	19	56	52 JF02 39	7	106
39 1956 04	3	50	52 JF02 42	8	108
39 1956 04	9	100	52 JF04 11	1	106
39 2017 19	1	8	52 JF04 12	9	108
39 2141 24	9	84	52 JF04 17	4	106
39 2141 24	13	94	52 JF04 18	12	108
39 2141 24	2	98	52 JF04 19	1	106
39 2181 06	3	12	52 JF04 20	9	108
39 2181 06	15	22	52 JF04 25	4	106

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
52 JF04 26	13	108	52 JZ02 64	7	20
52 JF04 27	1	106	56 JF38 32	10	108
52 JF04 28	9	108	56 JF38 4R	10	108
52 JF04 33	4	106	56 JF38 5N	10	108
52 JF04 34	5	106	56 JF38 5Y	10	108
52 JF04 35	6	106	56 JF39 32	11	108
52 JF04 55	2	106	56 JF39 4R	11	108
52 JF04 56	3	106	56 JF39 5N	11	108
52 JF04 57	2	106	56 JF39 5Y	11	108
52 JF04 58	3	106	56 JL01 01	14	56
52 JF04 59	2	106	56 JL02 01	16	56
52 JF04 60	3	106	59 0200 01	14	84
52 JF05 90	9	108	59 0400 14	17	84
52 JF05 92	2	106	59 0400 38	11	22
52 JF05 93	3	106	59 0400 38	23	28
52 JF05 94	1	106	59 0400 38	6	30
52 JF05 97	4	106	59 0400 48	2	72
52 JF05 98	7	106	59 0400 50	2	6
52 JF06 00	8	108	59 1500 14	12	14
52 JF06 03	5	106	59 1500 14	5	44
52 JF06 04	6	106	59 2000 36	5	22
52 JL00 72	16	60	59 2000 36	3	24
52 JL09 18	5	106	59 2100 19	16	64
52 JL09 19	6	106	59 2100 23	16	22
52 JL09 36	5	106	59 2100 24	20	16
52 JL09 37	6	106	62 3050 84	22	114
52 JL09 92	7	106	75 6802 36	20	114
52 JL09 94	7	106	76 0109 36	14	114
52 JL09 96	8	108	76 0109 37	15	114
52 JL09 98	8	108	83 0201 73	7	112

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
83 0203 25	3	112	DG 1013 39	3	72
83 0203 34	1	112	DG 1210 02	12	38
83 0203 68	5	112	DG 1210 03	8	4
83 0204 11	1	112	DG 1410 28	26	82
83 0204 73	5	112	DG 1611 24	2	60
AA 1014 37	13	28	DG 1710 16	4	54
AN 1013 47	9	64	DG 1710 18	5	54
AN 1110 15	15	46	DG 1710 19	6	54
AP 1012 36	3	10	DG 1810 03	28	78
AP 2010 25	19	100	DG 1810 04	27	78
BA 1220 03	22	82	DG 1810 08	25	76
BF 5612 19	10	24	DG 1910 48	23	72
CL 2010 23	22	94	DH 1010 48	16	10
CS 1011 28	12	10	DH 1010 48	5	26
DD 1010 62	13	10	DH 1013 80	13	30
DD 1010 97	11	36	DH 1013 80	8	44
DD 1110 11	11	46	DH 1013 80	7	46
DD 1110 12	13	46	DH 1013 92	14	10
DD 1110 18	10	46	DH 1015 09	3	20
DD 1412 27	17	82	DH 1016 07	4	42
DE 1510 08	1	64	DH 1016 48	14	32
DE 1510 12	2	64	DH 1017 84	13	22
DE 1510 47	3	68	DH 1110 13	18	46
DE 1910 10	10	66	DH 1210 64	9	34
DE 1910 28	7	66	DH 1210 64	17	34
DE 1910 29	6	66	DH 1211 62	13	34
DE 1910 33	15	66	DH 1211 70	6	34
DF 1611 02	11	60	DH 1211 70	16	34
DF 1612 52	16	98	DH 1510 29	17	72
DG 1010 29	9	8	DH 1611 46	15	60

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DH 1611 58	12	84	DK 1510 69	11	66
DH 1810 15	16	76	DK 1612 09	5	88
DH 1910 06	11	72	DK 1810 28	24	76
DH 1910 13	6	72	DK 1810 75	7	52
DH 1910 37	21	94	DK 2110 07	3	48
DH 2010 79	3	90	DK 2210 24	2	102
DJ 1010 64	9	42	DL 1610 15	21	86
DJ 1510 42	16	72	DM 1810 10	11	76
DJ 1510 94	14	64	DP 1611 45	25	98
DJ 1610 69	6	58	DS 1011 17	6	36
DJ 1612 28	8	30	DS 1011 54	4	26
DJ 1612 29	4	84	DS 1012 15	16	28
DJ 1612 29	18	98	DS 1211 26	2	38
DJ 1810 87	8	76	DS 1410 12	19	80
DJ 1810 88	7	76	DS 1510 57	5	70
DJ 1810 89	6	76	DS 1510 73	9	70
DJ 1910 29	2	66	DS 1611 25	5	58
DJ 1910 30	3	66	DS 1612 87	6	48
DJ 1910 31	5	66	DS 1810 70	10	76
DJ 2010 52	18	100	DS 1810 71	14E	76
DJ 2011 09	9	66	DS 1810 72	9	76
DJ 2011 09	23	74	DS 1910 52	24	74
DJ 2012 46	13	74	DS 2210 01	10	92
DJ 2210 19	1	102	DT 1130 14	23	56
DK 1012 37	11	80	DT 1130 15	24	56
DK 1013 40	4	80	DT 1138 48	15	54
DK 1013 66	10	80	DT 1138 54	3	84
DK 1013 86	7	10	DT 1610 05	15	74
DK 1410 28	6A	82	DT 1813 22	10	52
DK 1510 26	2	62	DT 4020 06	6	100

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DT 5514 08	7	32	JC 1910 08	26	72
DT 5810 28	4	38	JC 1910 11	27	72
DT 5810 62	5	38	JD 1138 14	12	4
DU 1012 13	22	16	JD 1138 15	13	4
FD 1010 78	10	26	JD 1312 12	7	70
FD 2110 06	5	48	JD 1318 11	8	64
GH 2010 12	4	96	JD 1710 59	20	40
GL 6214 14	6	44	JD 1910 06	8	48
JA 5410 05	15	30	JD 3512 06	19	46
JA 5410 10	4	24	JD 4010 07	11	98
JA 5410 12	15	24	JD 4022 12	16	100
JA 5410 21	9	22	JD 4022 17	17	100
JA 5412 11	8	28	JD 5514 00	2	32
JA 5412 25	9	28	JD 5610 04	5	18
JA 5412 33	2	30	JD 5610 06	6	18
JA 5510 02	4	16	JD 5610 11	3	18
JA 5510 04	9	16	JD 5612 04	13	24
JA 5510 08	18	16	JE 3510 18	11	14
JA 5510 09	19	16	JE 3510 18	4	46
JA 6210 02	5	36	JE 3510 25	14	30
JA 6210 06	8	36	JE 3510 25	5	46
JB 1312 24	22	70	JE 3512 12	14	46
JB 1812 23	5	88	JE 3512 36	17	46
JC 1510 04	18	70	JE 3512 38	16	46
JC 1510 06	20	70	JE 3512 43	12	46
JC 1510 12	23	70	JE 3514 00	9	6
JC 1810 06	21	76	JE 3514 03	5	12
JC 1810 07	20	76	JE 3516 00	1	44
JC 1810 20	23	76	JE 5010 46	1	24
JC 1910 07	28	72	JE 5110 38	2	2

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JE 5110 40	3	2	JE 5412 44	18	28
JE 5110 47	1	6	JE 5412 49	12	28
JE 5110 53	5	2	JE 5412 67	24	28
JE 5110 60	8	8	JE 5412 67	16	108
JE 5110 78	1	4	JE 5412 71	5	28
JE 5110 85	5	6	JE 5510 01	1	16
JE 5112 08	2	8	JE 5512 00	8	16
JE 5112 09	3	8	JE 5512 01	6	16
JE 5112 12	4	8	JE 5512 02	2	16
JE 5112 13	5	8	JE 5512 03	7	16
JE 5112 21	6	8	JE 5512 05	12	16
JE 5112 25	7	8	JE 5512 06	14	16
JE 5112 33	8	10	JE 5512 08	13	16
JE 5112 34	6	10	JE 5512 13	7	14
JE 5112 41	5	10	JE 5512 14	3	26
JE 5112 51	1	10	JE 5512 15	17	16
JE 5210 16	9	10	JE 5512 16	15	16
JE 5210 30	4	12	JE 5514 08	6	28
JE 5310 33	5	14	JE 5514 13	8	32
JE 5310 40	1	14	JE 5514 14	5	32
JE 5312 02	1	26	JE 5514 15	9	32
JE 5410 28	9	24	JE 5514 28	1	32
JE 5410 63	10	22	JE 5610 04	7	18
JE 5412 28	7	30	JE 5610 05	2	18
JE 5412 34	21	28	JE 5610 06	1	18
JE 5412 40	5	30	JE 5612 00	8	20
JE 5412 41	25	28	JE 5710 07	19	28
JE 5412 42	11	28	JE 5710 08	8	26
JE 5412 43	11	30	JE 5710 09	7	26
JE 5412 43	8	46	JE 5712 13	10	28

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JE 5712 15	1	80	JE 6210 02	1	36
JE 5712 16	13	80	JE 6210 03	10	36
JE 5712 18	14	80	JE 6210 04	9	36
JE 5712 19	12	80	JE 6212 03	12	36
JE 5712 23	2	80	JE 6214 07	2	44
JE 5712 25	8	80	JE 6214 04	10	14
JE 5712 27	7	80	JE 6214 04	3	44
JE 5712 39	6	80	JE 6214 05	7	44
JE 5712 40	5	80	JF 1111 73	1	52
JE 5810 11	9	38	JF 1130 07	21	56
JE 5810 51	6	38	JF 1130 08	23	56
JE 5810 54	10	4	JF 1130 09	2	56
JE 5810 55	7	4	JF 1132 02	1	60
JE 5810 60	4	4	JF 1134 12	5	50
JE 5810 68	8	38	JF 1138 14	20	46
JE 5810 75	9	4	JF 1138 15	16	4
JE 5810 76	18	4	JF 1138 22	25	80
JE 5810 80	1	38	JF 1138 23	3	52
JE 5810 81	26	80	JF 1138 32	5	52
JE 5811 07	2	4	JF 1138 34	11	52
JE 5812 39	14	34	JF 1138 38	13	40
JE 5812 49	1	34	JF 1138 45	34	86
JE 5814 07	3	34	JF 1210 04	22	76
JE 5814 23	11	6	JF 1220 00	1	54
JE 5814 26	13	6	JF 1220 05	3	54
JE 5814 28	2	34	JF 1220 06	10	54
JE 5826 06	20	4	JF 1310 08	11	64
JE 5910 12	1	42	JF 1310 10	1	62
JE 5910 46	8	42	JF 1310 11	3	62
JE 5911 79	2	42	JF 1310 11	4	64

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JF 1310 16	13	64	JF 1716 07	22	40
JF 1310 18	5	64	JF 1718 00	11	82
JF 1312 06	4	62	JF 1718 04	12	40
JF 1312 09	24	70	JF 1718 05	18	40
JF 1312 10	3	70	JF 1718 06	19	40
JF 1312 22	5	62	JF 1718 07	16	40
JF 1316 00	21	70	JF 1810 05	4	92
JF 1316 01	19	70	JF 1812 10	19	76
JF 1318 00	7	64	JF 1812 10	18	94
JF 1318 02	12	66	JF 1812 11	1	92
JF 1318 06	1	68	JF 1812 16	16	80
JF 1318 07	8	66	JF 1812 17	17	80
JF 1318 55	11	58	JF 1812 53	3	100
JF 1510 18	1	76	JF 1812 54	21	100
JF 1510 19	18	76	JF 1812 87	15	80
JF 1510 25	2	74	JF 1813 31	13	92
JF 1510 27	6	74	JF 1813 32	14	92
JF 1510 31	2	76	JF 1814 02	7	58
JF 1510 32	3	76	JF 1814 03	1	58
JF 1510 33	13	76	JF 1814 09	8	92
JF 1510 34	15	76	JF 2312 15	2	104
JF 1510 36	12	76	JF 2312 18	1	104
JF 1610 01	1	72	JF 2312 19	12	52
JF 1610 02	11	74	JF 2326 12	1	70
JF 1612 01	2	90	JF 2326 12	17	74
JF 1612 02	1	90	JF 2326 12	2	82
JF 1710 01	6	84	JF 2331 24	18	108
JF 1710 04	2A	84	JF 4014 03	18	74
JF 1710 09	2	84	JF 4016 00	7	100
JF 1716 07	9	40	JF 4018 02	10	100

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JF 4018 03	12	100	JG 5810 56	10	38
JF 4020 00	1	46	JG 5910 38	3	42
JF 4022 31	1	100	JG 5910 39	5	42
JF 4022 42	4	100	JH 1710 48	14	40
JF 4022 43	5	100	JH 5412 10	4	28
JF 4024 00	1	88	JH 5822 00	6	4
JF 5110 52	6	6	JL 1110 54	4	50
JF 5612 04	2	20	JL 1111 03	2	52
JF 5612 05	1	20	JL 1130 00	8	56
JG 1312 19	12	70	JL 1130 02	1	56
JG 1510 22	16	74	JL 1130 12	3	56
JG 1610 08	12	74	JL 1130 13	11	56
JG 1610 10	1	66	JL 1130 15	17	56
JG 1710 29	17	40	JL 1130 26	12	56
JG 1710 86	21	40	JL 1130 27	18	56
JG 1812 35	3	94	JL 1130 33	4	56
JG 1812 36	2	94	JL 1130 33	9	72
JG 1812 38	2	88	JL 1130 36	22	56
JG 1812 59	20	80	JL 1130 43	26	56
JG 1910 06	13	48	JL 1130 57	7	56
JG 1910 08	4	48	JL 1132 01	8	60
JG 2326 01	9	48	JL 1132 07	6	60
JG 2326 06	10	48	JL 1132 09	14	60
JG 4010 36	12	98	JL 1132 10	3	60
JG 4018 08	20	100	JL 1132 12	7	60
JG 5312 20	2	10	JL 1138 00	9	98
JG 5312 20	2	26	JL 1138 03	13	98
JG 5514 28	4	32	JL 1138 09	9	52
JG 5514 51	11	32	JL 1138 10	24	98
JG 5710 24	7	22	JL 1138 11	22	98

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL 1138 12	23	98	JL 1710 70	33	86
JL 1138 30	3	40	JL 1710 71	32	86
JL 1138 36	21	46	JL 1710 78	20	84
JL 1220 08	13	54	JL 1710 85	21	82
JL 1220 26	14	54	JL 1710 96	24	82
JL 1318 06	2	68	JL 1718 00	13	82
JL 1318 07	4	68	JL 1718 01	16	82
JL 1318 10	15	72	JL 1718 02	10	82
JL 1510 21	1	74	JL 1718 03	15	82
JL 1510 28	5	74	JL 1718 10	1	82
JL 1510 34	7	74	JL 1718 23	28	86
JL 1510 35	9	74	JL 1718 24	29	86
JL 1510 38	2A	74	JL 1718 37	6	40
JL 1610 03	14	74	JL 1810 08	1	94
JL 1610 05	5	72	JL 1812 03	6	94
JL 1610 06	10	72	JL 1812 09	12	58
JL 1710 18	20	82	JL 1812 14	23	86
JL 1710 19	19	82	JL 1812 19	22	86
JL 1710 20	23	82	JL 1812 20	22	86
JL 1710 24	5	84	JL 1812 21	13	58
JL 1710 35	12	82	JL 1812 36	15	94
JL 1710 37	8	82	JL 1812 37	17	94
JL 1710 38	28	82	JL 1812 41	4	88
JL 1710 40	35	86	JL 1812 45	28	94
JL 1710 49	4	82	JL 1812 47	5	94
JL 1710 57	1	84	JL 1812 49	16	94
JL 1710 60	14	82	JL 1812 56	21	80
JL 1710 61	16	84	JL 1812 57	29	94
JL 1710 62	15	84	JL 1812 64	14	100
JL 1710 63	9	82	JL 1812 83	26	94

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL 1812 84	27	94	JL 4010 06	1	96
JL 1812 97	3	92	JL 4010 12	9	94
JL 1814 07	5	92	JL 4010 16	21	98
JL 1814 08	6	92	JL 4014 00	19	74
JL 1814 11	10	58	JL 4014 02	9	60
JL 1910 01	1	48	JL 4014 05	20	74
JL 1910 04	7	48	JL 4022 01	2	100
JL 1910 08	30	86	JL 4022 19	15	6
JL 1910 09	31	86	JL 4026 02	6	82
JL 2312 02	6	104	JL 4036 00	13	60
JL 2312 04	16	104	JL 5412 23	9	30
JL 2312 09	13	104	JL 5412 23	17	108
JL 2314 04	3	104	JL 5412 27	15	28
JL 2314 05	4	104	JL 5614 09	9	20
JL 2316 00	22	74	JL 5614 10	10	20
JL 2316 01	21	74	JL 5810 56	11	38
JL 2326 04	12	48	JL 5810 66	5	4
JL 2328 05	6	98	JL 5812 03	15	34
JL 2328 06	3	98	JL 5812 04	10	34
JL 2328 08	20	98	JL 5812 05	11	34
JL 2330 02	15	108	JL 5812 06	12	34
JL 2332 55	19	108	JL 5911 56	6	42
JL 2332 56	19	108	JL 5911 57	14	42
JL 2332 69	19	108	JL 5911 65	7	42
JL 2332 70	19	108	JN 1312 03	8	70
JL 2332 81	19	108	JN 1316 03	12	64
JL 2332 82	19	108	JN 1318 12	17	70
JL 2333 16	14	108	JN 3516 04	13	100
JL 4010 02	7	98	JU 2312 05	12	104
JL 4010 05	2	96	JV 5510 00	21	16

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JW 1318 07	5	68	KA CH05 14	6	88
JW 1318 10	9	68	KA CH06 16	9	58
JW 5612 06	12	20	KA CH08 35	19	94
JY 1138 42	8	40	KA DA05 10	10	42
JY 1510 11	26	78	KA DA05 12	36	86
JY 1710 69	11	40	KA DA06 10	9	80
JY 1710 70	5	40	KA DA06 12	18	92
JY 1710 77	1	40	KA Db05 16	5	60
JY 1710 90	7	40	KA DB05 16	12	60
JY 1710 90	7A	40	KA DD06 10	10	98
JY 1718 25	10	40	KA DD06 10	17	98
JY 1812 55	15	92	KA DD06 12	27	82
JY 5410 39	8	18	KA DD06 30	13	42
JY 5810 28	11	4	KA DD06 35	12	42
JZ 1130 61	20	56	KA DD08 25	26	98
JZ 1220 08	8	54	KA DD08 30	13	66
JZ 1220 12	7	54	KA DE06 10	13	56
JZ 1710 55	2	40	KA DE06 14	10	94
JZ 55 1210	11	16	KA DF06 10	17	4
JZ 5510 08	10	16	KA DF06 14	25	74
JZ 5512 05	16	16	KA DF06 16	4	52
JZ 5512 10	3	16	KA DF06 20	3	46
JZ 5514 12	10	32	KA DF06 30	14	4
JZ 5610 02	4	18	KA DF08 20	8	58
JZ 6210 00	2	36	KA DF08 20	18	82
KA CA08 20	6	56	KA DM06 10	7	38
KA CA08 30	5	98	KA EA06 10	4	40
KA CB05 16	3	82	KA EG06 14	3	4
KA Cb06 16	10	104	KA EM06 14	11	100
KA CB06 22	7	104	KB AB06 08	12	30

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
KB AB06 08	9	46	KP BB63 02	15	70
KB BA05 14	14	98	KP BC60 04	6	70
KB BM04 08	18	64	KP BF62 01	7	24
KB RA48 19	19	4	LA C000 16	10	56
KB UA05 12	18	80	LA C000 19	2	54
KB UA05 16	12	94	LA C000 20	4	74
KB UA06 12	27	86	LA C000 22	10	84
KB UA06 14	17	92	LA C000 31	9	104
KB UA06 16	14	94	LA C000 35	5	104
KB UA06 20	16	92	LA C000 36	12	92
KB UA06 30	3	38	LA C000 37	9	92
KB UB04 10	7	92	LA C000 52	10	30
KB UB05 16	8	84	LA C000 52	6	46
KC AA05 04	3	88	LA C000 54	2	92
KC BA06 05	24	80	LA C000 59	8	74
KC BD06 05	11	48	LA C000 69	23	16
KC GA05 05	7	82	LA D000 73	4	60
KC GA06 06	23	80	LA D001 04	6	26
KC GD06 06	15	98	LA D001 34	17	60
KC GD08 08	11	104	LA D001 35	18	60
KC GD10 10	3	96	LA E000 15	5	24
KC GF06 06	15	4	LA E000 25	14	24
KC JD12 12	10	64	LA E000 26	4	2
KD AA06 11	11	94	LA J000 20	13	52
KD AA06 11	25	94	LB R000 02	8	94
KD BA05 12	7	94	LB R000 03	13	84
KD BE06 13	8	104	LB R000 03	25	86
KJ AC18 24	7	6	LB S000 02	4	94
KP BB62 02	13	70	LB U000 09	8	84
KP BB63 01	3	64	LB U000 09	1	98

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
LC B000 03	4	20	YJ F080 01	8	88
LC B000 05	11	70	YJ L020 05	9	94
LC D000 01	9	14	YJ L020 06	20	94
LC G000 14	6	50			
LC G000 16	14	52			
LC J000 02	25	70			
LD A000 07	24	86			
LD A000 12	14	104			
LD A000 13	9	56			
LD A000 25	8	14			
LD A000 25	4	44			
LD B000 07	7	88			
LD B000 23	14	58			
LD B000 29	4	70			
LD B000 44	12	24			
LD C000 01	15	104			
LF B000 01	6	14			
LH B000 01	21	72			
LJ A000 04	8	22			
LJ A000 10	12	6			
NA	20	114			
NA	21	114			
PA 1812 92	23	94			
PA 1812 93	24	94			
PA 4022 04	19	98			
PA 4022 04	15	100			
PA 5612 09	11	24			
PD 1510 06	8	52			
PD 1716 16	15	40			
PF 1312 20	10	70			